

USER MANUAL



SUBARU

 
Central Display Screen Functions

- Can switch between sources: DVD, NAV, DTV, PAC, IPOD and Headrest Monitors
- When the car is in reverse mode, PAC image will be shown on the screen.
- Green, yellow and red lines shown on the screen will be used as a safety measure for parking (Please look at SETTING)
- From the settings menu the following can be selected: NTSC, PAL, Brightness, Color, Contrast, and Tint.

Remote Control

When using the remote control, please don't place objects in front of the IR receiver ◦

☉ Functions

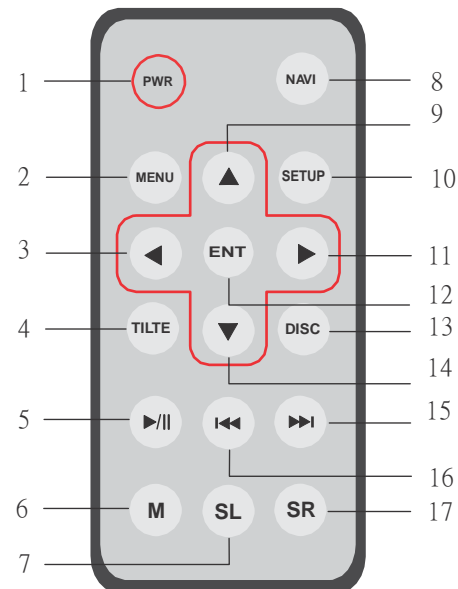


- 1 Power On / Off
- 8 Navi Switch
- 6 Main Menu
- 7 Left Headrest Switch
- 17 Right Headrest Switch
- 3 Left
- 11 Right
- 9 Up
- 14 Down
- 12 Confirm
- 2 Menu Setting
- 4 DVD Menu
- 10 Setup
- 13 DVD Selection
- 5 Pause · Play
- 16 Previous
- 15 Next

Central Display Basic Operations

Turning on the power

 Pressing power key on the remote control or anywhere on the screen for three seconds will turn on the power

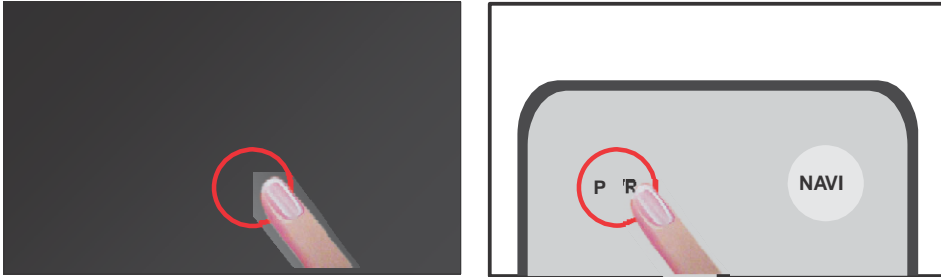


The Subaru logo will appear for five seconds before the main menu appears on the screen.



Turning off the power

 Press the power key on the remote control three seconds or press the power key [P R] on the screen to turn off the power.

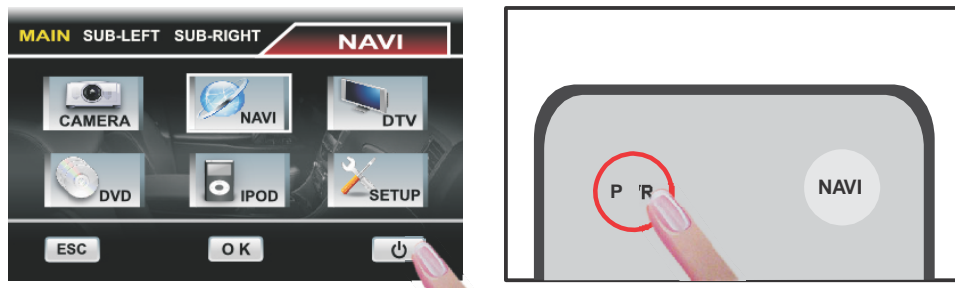



Main Menu Operation



Main Menu

Press upper left hand corner for three seconds to enter menu.

-  Navigation
-  Reverse Camera
-  DTV
-  DVD
-  IPOD
-  Setup
-  To leave menu and return to last image
-  Enter key
-  Power key

Mode Display

- When [Main] is highlighted in yellow, the user can select any menu item for the front monitor and press ok.

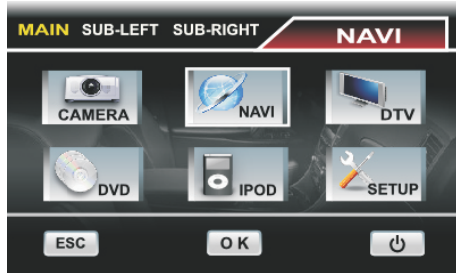 


Figure 1

- When [Sub-Left] is highlighted in yellow, the user can select any menu item for the left headrest monitor and press ok. Navi is not available for headrest monitors.

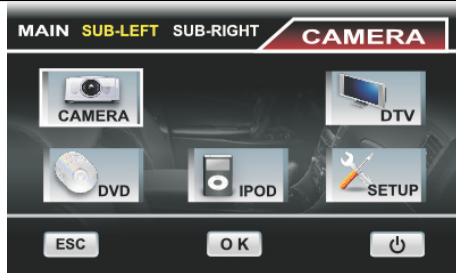 


Figure 2

- When [Sub-Right] is highlighted in yellow, the user can select any menu item for the left headrest monitor and press ok. Navi is not available for headrest monitors.

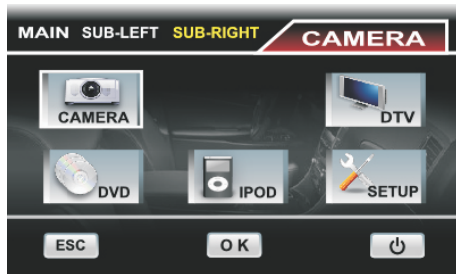 


Figure 3

Function Menus

DTV Menu

Press DTV and then the ok. Press the spot on the bottom right corner for three seconds, and the control buttons will appear on the screen.



During use of DTV menu, press upper left corner of the screen for three seconds and the screen will return to main menu. During DVD mode, press upper right corner for three seconds to return to main menu.




 
Figure 4



Figure 5

DVD Menu

 Please press DVD key from main menu and press ok. Press the lower right corner for three seconds for the DVD control menu to appear on the screen.

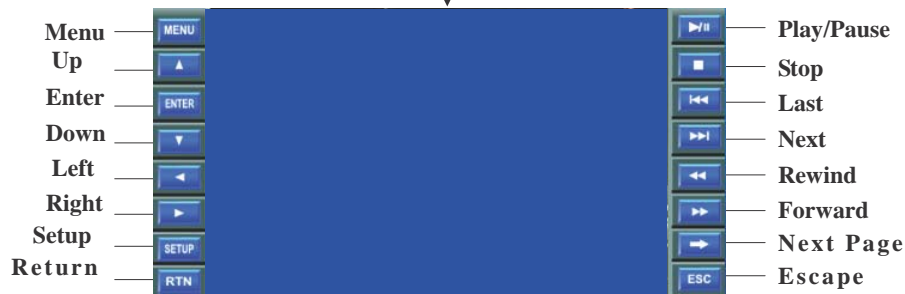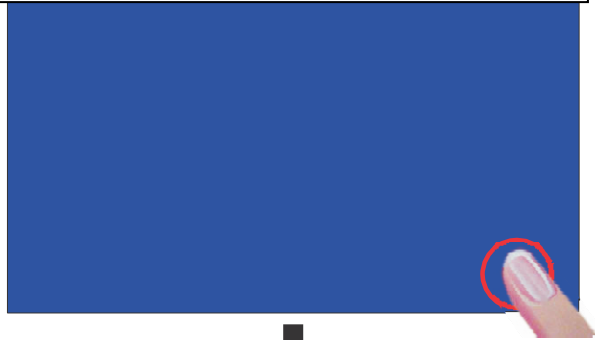

Next Page



Press upper left corner for three seconds to return to DVD menu.
Press upper right corner for three seconds to return to main menu.

IPOD Menu

Press IPOD key from main menu and press ok.



Press[]to leave menu

❑ Settings

Press setup key and press ok. The items highlighted in blue are the selected settings.



POWER Under auto power on, the monitor will automatically turn on when the ACC is on. If auto power is off, turning on the power manually is needed

CAMERA SWITCH Under auto camera switch, the reverse camera image will appear on the screen when the car is in reverse mode. Manual camera switch can be used when manual camera switch is turned on.

CAMERA MODE Two types of images can be selected for the camera image under camera mode: mirror or normal image.

CAMERA RULE Reverse lines will appear on the screen when camera rule is on. Reverse lines will disappear when camera rule is off.



REMOTE Remote control function can be selected for the front monitor [Main], left headrest monitor [Sub-Left] and right headrest monitor [Sub-Right].

LANGUAGE Three types of languages can be selected for the interface: simplified Chinese, traditional Chinese and English.

● **SCREEN** Settings :

Press screen key and ok key to adjust the settings for the screen.



1. BRIGHT - Brightness
2. CONT - Contrast
3. COLOR - Color
4. TINT - Tint
5. LIGHT - Light
6. [OK] - Ok / Confirm
7. [ESC] - Escape

 
Items one through four can be adjusted from 0~32. Item five can be adjusted only from 0~4.

● Press touch key and ok key to enter touch screen calibration.



①

Press the part of the screen with the white cross. Do not use anything sharp that will damage the touch screen.

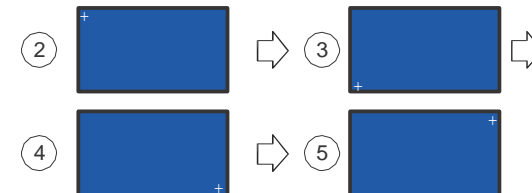

After calibration is complete, press anywhere on the screen for three seconds to return to the screen before.

Press the upper left corner for three seconds to return to the main menu.

Specifications

Description:

Voltage: 12V DC

Voltage Range: **9V-16V**

Operating Current: 1.1A

ACC Current: 0.5mA

Standby Current: 47mA

Power: 12W

Operating Temp: $-10^{\circ}\text{C} \sim 70^{\circ}\text{C}$

TFT-LCD Color Monitor:

6.5 Inch

16:9 Display

Autoswitchable NTSC/PAL

Pixel: 143.40(H) x 79.32(V) mm

Resolution: 1200(H) x 234(V) Dot

Contrast Ratio: 350:1

Brightness: 350 cd/m²

Wiring Diagram

