

### Introduction

This user guide provides you with information on how to use a Dension AVR interface to control and play your iPod videos, DVDs and more on your compatible radio display and rear seat screens (if fitted).

You will need to have a Dension Gateway 500 and AVR correctly installed in and configured for your vehicle. You will also need a screen capable of displaying video connected to your car radio and the radio must have TV tuner enabled. For installation questions please refer to the Dension AVR installation guide. For full compatibility information, please refer to www.dension.com/compatibility.

## Porsche Cayenne PCM2

1. Switch on the radio, making sure GW500 is active in CD changer mode (see GW500 User Guide for details) and that your external device (iPod, DVD player etc.) is connected

$\square$	Audio CD-Changer	CD List	
S S E N	can Playlists can Artists can Albums xtras Ay iPod Aenu	CD List Track List CD Name Track Seq. Scan Traffic Prog. Mute	
C	C CD 6 Track 1		

2. Press Audio button on your radio and select CD List item. Choose the disc 6, Menu

- 05 -	Clo	ocks	
Г		REAR	
101		RSE Off	201
102			
103		RSE iPod	203
104			
110		RSE DVD	210
111		RSE AUX AV	211
112			
	101 102 103 104 110 111	101 102 103 104 110 111	101         RSE Off           102         103           103         RSE iPod           104         110           110         RSE DVD           111         RSE AUX AV

\_Rept. CD

CD 6 Track 4

Audio CD-Changer

>Source

>Videos

>Playlists

>Artists

>Albums

>Songs

>Podcasts

Audio CD-Changer

CD 123456

Menu

movie1.mp4

00:02 1/1

Track Seq. \_

4

--C

CD 6 Track 2

Track List

CD List Track List

CD Name

Track Seq.

Traffic Prog.

Scan

Mute

CD List

Track List

CD Name

Track Seq.

Traffic Prog.

Scan

Mute

Audio CD-Changer CD List CD 123456 Track List Menu CD Name >Source Track Seq. Scan 00:01 1/11 Traffic Prog. Mute CD 6 Track 1

A	udio CD-Changer	Tra	ck List
.AU .iPo .iPo .US .DV .AU	JX GW od UI od GW	ſ	CD List Track List CD Name Track Seq. Scan Traffic Prog. Mute
C	CD 6 Track 3		

3. Source is the first folder. Press and hold down > to enter the source menu

## **Mercedes Command**

- 1. Switch on the radio, making sure **GW500** is active in **CD changer mode** (see *GW500* User Guide for details) and that your external device (iPod, DVD player etc.) is connected
- 4. Use the selection knob to highlight Track list. Push down on the knob to select and view a full 5. Now select the correct source (see Section 4 for descriptions) and press and hold > to select 1/2 00:07

- When playing **iPod videos**, choose disc 6 **Menu** again, then highlight and select Track list with the selection knob to see the iPod menu. Use the selection knob to select Videos, then the folder you would like to choose a video from. To open folders or select the video file you would like to play press and hold >. To jump back one level, press and hold <
- For **DVD**, or any other device attached to the Aux input (for example, a gaming console), use the player or console's controls or remote control (if applicable) to play the DVD
- Reverse Camera can only be viewed on the front screen.

6. If viewing video on front screen, now press the **AV button** to see the music video or movie on screen. If you have chosen to view video on rear screens, they should play automatically.

#### Selecting video sources using Teletext:

Teletext will allow you to select video sources for front and rear screens using a Teletext menu similar to that on your home TV.

1. Now you have video playing, press the Info button on your radio

2. Choose Videotext option with selection knob


3. Select **vour source** by keying in the Teletext code (Note: To access Repeat, Random, Scan and PlayAll, use 333)

2. Press Audio button then choose CDC on your radio. Select Disc 6 to enter Menu by pressing button 6.


Magaz.	<ul> <li>Menu</li> </ul>	
Scan	>Source	•
Setting	▼	
CDC	TRACK MIX 1/11 00:02	



Magaz.	Menu
Scan	>Videos
Setting	•
CDC	TRACK MIX 2/11 00:02

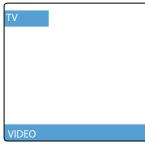


list of sources

 

3. Use the << and >> buttons to select **Source**, then pressing and holding down >> to enter the menu

 4. Use the << and >> buttons to select the correct source (see Section 4 for descriptions) and press and hold down >> to select




- When playing iPod videos, enter Menu again by choosing **Disc 6.** Use the << and >> buttons to select the folder Videos, then the folder you would like to choose a video from. To open folders or select the video file you would like to play press and hold >>. To jump back one level, press and hold <<
- For **DVD**, or any other device attached to the Aux input (for example, a gaming console), use the player or console's controls or remote control (if applicable) to play the DVD
- Reverse Camera can only be viewed on the front screen

5. If you have chosen to view video on the front screen you will need to press the Video button and then select TV. If you have chosen to view video on rear screens, they should play automatically.



#### Selecting video sources using Teletext:

 Teletext will allow you to select video sources for front and rear screens using a Teletext menu similar to that on your home TV.



1. Now you have video playing, press any of the inner screen buttons on the Command unit and select VT

Source Select			
Coldplay - 05 - Clocks			
FRON	Т	REAF	1
AUX GW	101	RSE Off	201
iPod UI	102		
iPod GW	103	RSE iPod	203
USB	104		
DVD	110	RSE DVD	210
AUX AV	111	RSE AUX AV	211
Camera Off	112		

2. Select **your source** by keying in the Teletext code (Note: To access Repeat, Random, Scan and PlayAll, use 333)

### 3 BMW iDrive CCC

1. Switch on the radio, making sure **GW500** is active in **CD changer mode** (see *GW500 User Guide* for details) and that your external device (iPod, DVD player etc.) is connected

	Communication	
Climate	i	Navigation
	Entertainment	
MP3 05	Т	13:45

2. Press the **Menu** button on your iDrive and select **Entertainment** from the main menu

⊳Root ⊳Videos		
Movies		
Music videos		
TV programs		
Playlists		
Video podcasts		
MP3 05 T	13:47	

4. You are now in the Video menu. Select the category you want to play

→ Root → Videos	▷Music videos
ТР	
Tone	
Play	
Scan directory	
MP3 05 T	13:45


6. On some cars you will be asked to confirm Play. Confirm to start playing the video

⊳CD1	CD2	CD3	CD4	CD5	CD6
iPod					
Source					
(Video					
Playlists	5				
Artists					
MP3 05		т		1	3:46

3. Now select **CD.** Choose the Video folder

⊳Root	⊳Videos	▷Music videos	
Candy N Fever	lan		
High And Vertigo	d Dry		
MP3 05	Т	13:45	

5. Select your video

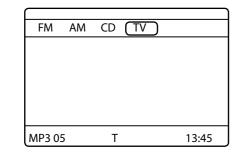

7. To view video, select the TV source from iDrive menu

The following menu items will be available when you access the Source menu.:

Source	Teletext code	Description
Aux GW	101	Auxiliary Audio source on Gateway (see GW500 manual)
iPod UI	102	Allows limited control of iPod Video and Audio playback with the radio controls and full control with iPod click wheel
iPod GW	103	Allows you to control iPod Video and Audio play- back with the radio controls only
USB	104	Enables USB Audio playback (see GW500 manual)
DVD	110	Enables DVD Video and Audio playback
Aux AV	111	Enables Auxiliary Video and Audio playback
Reverse Camera	112	Enables/disables rear view Camera (front screen only)
RSE iPod*	203	Enables iPod Video and Audio to rear screens
RSE DVD*	210	Enables DVD Video and Audio to rear screens
RSE Aux AV*	211	Enables Auxiliary Video and Audio to rear screens

AVR supports video playback on all current video capable iPods (iPod 5G Video, iPod Classic, iPod Nano 3G, iPod Nano 4G, iPod Touch, iPod Touch 2G, iPhone, iPhone 3G)

\*In order to watch video on the RSE screens and listen to your car radio tuner in the same time, after starting the video file in the browser of CD Changer mode, switch on the TV tuner mode on the head unit, and then turn to radio source.

#### Disclaimer

If your car's electrical system begins to behave erratically, please disconnect your Dension Gateway interface immediately and have it checked by your installer. Dension and its authorised distributers and retailers are not liable for any incidental consequential or indirect damages and do not assume liabiliy for any diagnostic fees.

The use of handheld devices while driving may be subject to government legislation. Please ensure that your use of the Dension Gateway complies with applicable traffic laws. Dension does not assume liability for any events resulting from the illegal or irresponsible use of handheld devices while driving.

#### Warranty

The Dension Gateway interface carries a one-year limited warranty that protects you from defects in material and workmanship of products sold by Dension or its authorised distributers and retailers. Dension does not warrant any installation work or assume liability for any damage caused due to negligence, improper installation or operation. For warranty claims, proof of purchase is required.



# AVR



## **User Guide**

