


### 1. Introduction

This user guide provides you with information on how to control and play your external audio device through a car entertainment system using a Dension Gateway (GW) interface.


It is assumed that the GW interface is already installed and correctly configured for your vehicle. For assistance with installation, please refer to the *Dension Gateway Installation and Configuration Guide*.

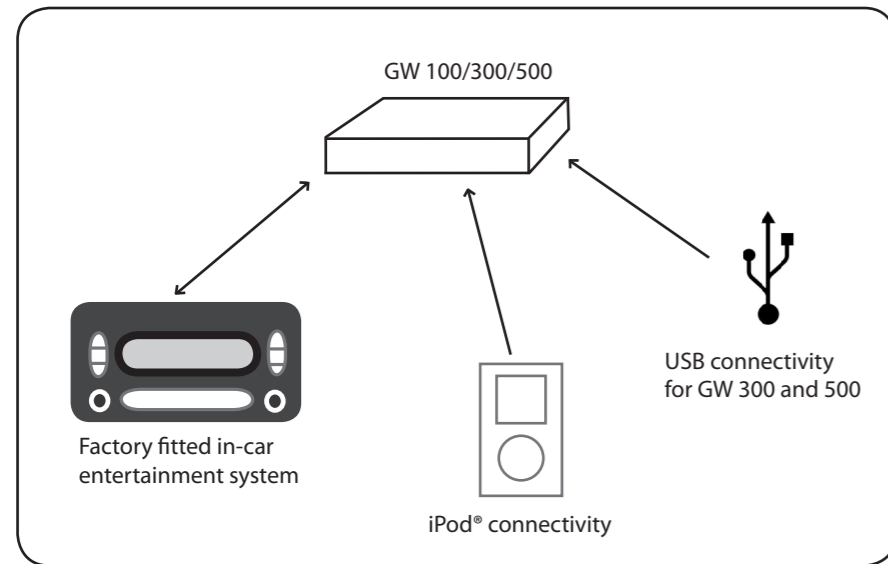

### 2. Car entertainment system requirements

**This user guide does not provide information regarding operation with any specific car entertainment system. Please note the following:**

- Dension Gateway (GW) devices generally connect to the CD changer or auxiliary input on the car entertainment system. Please check [www.dension.com](http://www.dension.com) for specific compatibility details.
- If the vehicle has an existing CD changer it will be disabled by GW 100 and 300 unless an optional Dension CD Changer Retention module is also installed.
- We use the conventions listed below to describe control of the GW from your car entertainment system. Please refer to your car entertainment system's owner's manual for specific details of its operation.

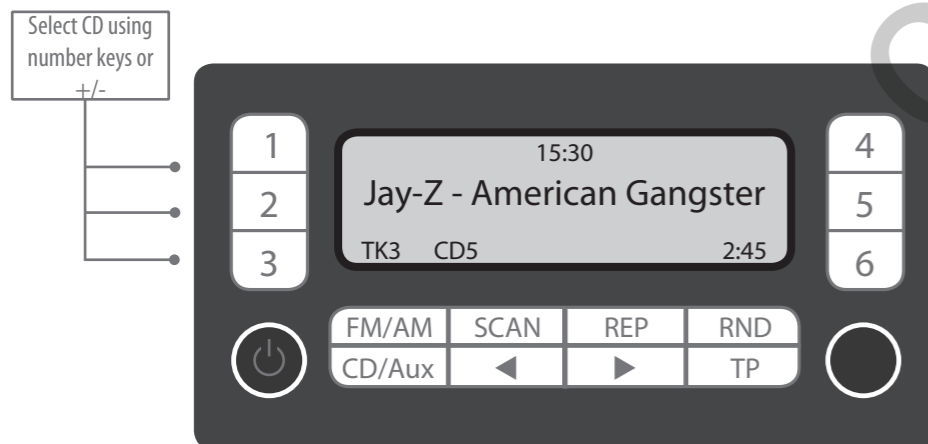

Next Track:	<b>NEXT</b> >	<b>Note:</b> Some systems trigger <RW/FF> by a long press of <PREV/NEXT>
Previous Track:	< <b>PREV</b>	
Fast Forward:	<b>FF</b> >	
Rewind:	< <b>RW</b>	
Repeat:	<b>REP</b>	
Random:	<b>RND</b>	
Scan:	<b>SCN</b>	

### 3. Text, browsing and song information

Even if your car entertainment system is unable to display text, you can control your external audio device with a Dension Gateway (GW).

If your car entertainment system has text capabilities, details of how to enable them are provided in the *Dension Gateway Installation & Configuration Guide*.

We refer to the different types of car entertainment system as follows:

**1. Browsing and playback:** full music browsing capabilities and song information displayed onscreen.

**2. Playback and text:** name of the artist, album or track that is playing. The number of characters will be defined by your display type.

**3. No text:** only CD and track numbers displayed, for example, CD6-08. Please refer to Section 6 for details on how CD numbers relate to operating modes.

### 4. External audio devices


The following external audio devices are supported:

iPod®	<b>Dock cable</b> ("IPO4DC9") Mini, 4G, 4G Photo, Nano, Nano 2G, Nano 3G, Nano 4G, 5G video, Classic, touch, touch 2G, iPhone 1G and iPhone 3G <b>Active Cradle</b> ("IP34CR9") iPod 4G, 4G Photo, Nano 2G, Nano 3G, 5G video, Classic, iPhone 1G, touch 1G
USB	Flash memory or hard disk drives (USB mass storage) Music formats: MP3/WMA/Ogg/WAV File systems: FAT16/ FAT32
Auxiliary Audio	GW 100 and 300 feature a 3.5mm stereo line input GW 500 features an RCA stereo line input
Bluetooth (requires optional Dension BTA series accessory)	A2DP/AVRCP profiles for audio playback HFP profile for handsfree telephony Refer to your car's user manual and the BTA 1500 user manual for telephone and telephone book operation
CD Changer (requires optional Dension CD retention kit)	Vehicle's existing original equipment if installed. This is a standard feature for GW 500 in certain vehicles

### 5. Using the Dension Gateway

Before you start, please check that your iPod is up to date. You can get iPod firmware updates from [www.apple.com/support/iPod](http://www.apple.com/support/iPod)

- Connect your external audio device
- Switch on your car entertainment system
- Select external CD changer or auxiliary audio (note: In some vehicles (Opel and certain Fords), connection to the GW is made through the Aux port. It will therefore be necessary to select Aux rather than CDC Playback starts from the last selected Dension Gateway audio source.

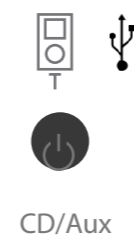

### 6. Operating modes

For iPod and USB device control, the following operating modes can be used by selecting the corresponding CD. Use <PREV/NEXT> to select and play the playlist, artist, album or track. Dension GW returns to CD5 after 30 seconds of inactivity in any other CD mode.

Select CD1:	Playlists/Folders	Text-capable display	Non-text display
	This is an alphabetical list of playlists (or folders) on your device. On USB devices, M3U and PLS playlists are selected <i>before</i> folders. Select and play the playlist/folder you wish to hear using your car entertainment system's <PREV/NEXT> controls. Press <b>FF</b> > to play whole playlist/folder.	15:31 ChillOut Dance NewMusic 65 miles	15:31 Track4 CD1 2.45 65 miles
Select CD2:	Scan Artists	This is an alphabetical list of artists on your device. Select and play the artist using your car entertainment system's <PREV/NEXT> controls. Press <b>FF</b> > to play all songs by selected artist. <b>Note:</b> this mode is <b>not</b> available with the iPod UI audio source.	
		15:31 Akon AliciaKeys ChrisBrown 65 miles	15:31 Track4 CD2 2.45 65 miles
Select CD3:	Scan Albums	This is an alphabetical list of albums on your device. Select and play an album using your car entertainment system's <PREV/NEXT> controls. Press <b>FF</b> > to play the whole album. <b>Note:</b> for CD1/2/3 if you do not press <b>FF</b> > within 30 seconds of making your selection, audio player reverts to original source.	
		15:31 Graduation InMyOwnWords Intoxication 65 miles	15:31 Track4 CD3 2.45 65 miles
Select CD4:	Playback Options	If your system does not have <b>REP</b> , <b>RND</b> or <b>SCN</b> functions, use <b>CD4</b> for the following options: <b>Repeat</b> (select <b>REP</b> mode), <b>Random</b> (select <b>RND</b> mode) and <b>Scan</b> (set <b>SCN</b> mode - 10 second intro play of each track). For more CD4 functions please see Section 8.	
		15:31 PlayAll Repeat Random 65 miles	15:31 Track4 CD4 2.45 65 miles
Select CD5:	Scan Tracks	The 'normal' use of your car entertainment system's <PREV/NEXT> controls, i.e. these keys select and play tracks. <b>Note:</b> Dension GW returns to this mode after 30 seconds of inactivity in any other CD mode.	
		15:31 BecauseOfYou BeautifulLies Caught 65 miles	15:31 Track4 CD5 2.45 65 miles
Select CD6:	Source/Menu	The 'Source/Menu' mode shows selected audio devices connected to the Dension GW. Car entertainment systems with Browsing & Playback text capability also provide music browser functions.	
		15:31 AuxGW iPodUI iPodGW 65 miles	15:31 Track3 CD5 2.45 65 miles

**Note:** by pressing <REW> you can return to the previous menu. By pressing and holding for five seconds you can jump to the main menu. See Section 7 for source definitions for example, iPodUI.

**if your car's system only supports five CDs, CD4 functions are removed. CD5 and CD6 functions move to CD4 and CD5.**

## 7. Source table

**Note:** if your vehicle does **not** have text capability, select CD6 on the changer to access the following source modes.

Track	Source	Description
1	Auxilliary Input	Plays audio from the device connected to the Dension Gateway (GW) auxilliary input
2	iPod UI	Enables you to use the iPod click wheel for audio selection (recommend for vehicles without Browsing and Playback capabilities)
3	ipod GW	Audio selection for the iPod is via the car entertainment system controls (recommended for vehicles with Browsing and Playback capabilities)
4	USB	Plays music from the USB device connected to the Dension Gateway (not GW100)
5	BT Audio	Streams music from the Bluetooth audio device paired with the GW
6	BT Phone	Provides handsfree telephone functions from the Bluetooth phone paired with the GW
7		<i>Reserved for future use</i>
8		<i>Reserved for future use</i>
9	CDC	<p>GW100/300: Plays CDs from the vehicle's original CD changer. To return to CD operation press either <b>REW</b>, <b>RPT</b> or <b>SCN</b> twice. Some vehicles may require power to the entertainment system to be turned off and then back on again (reboot) after the double-press. <b>Note:</b> at least one CD must be loaded into the magazine otherwise it is not possible to return to Gateway Dension operation.</p> <p>GW 500: Vehicles which support multiple CD changers will list the Gateway operating modes in sequence with the CDs loaded in the vehicle's CD changer. To switch between GW 500 and CD changer on vehicles which do not support multiple CD changers, use the bypass switch on the GW 500 auxilliary input box (some vehicles require a shutdown and cold start for this mode change).</p>

## 8. More information

### CD4 functions (continued from Section 6)

#### PlayAll

Start playback of all content on your device.

#### For USB mass storage devices:

##### Build database

When using USB content, the Dension Gateway (GW) generates a database for easy Folder/Artist/Album navigation. Normally this will only take a few seconds, but for large capacity drives like a 100GB Hard Drive (HD), it can take up to one hour or more.

If the GW finds tracks have been deleted from the HD or USB content, it will automatically regenerate the database. However, if tracks have been added, this will have to be done manually. Dension are working on software to assist with manual database regeneration (Gateway Utility). Please check [www.dension.com](http://www.dension.com) for availability.

##### Set bookmark

Bookmark a position within a track, album or playlist to restart playback from.

##### Resume bookmark (USB)

Playback returns to the position set by the bookmark.

### Help and support

If you need further assistance in using the Dension Gateway, please contact your local supplier or visit [www.dension.com](http://www.dension.com) and click on 'support'.

### Disclaimer

If your car's electrical system begins to behave erratically, please disconnect your Dension Gateway interface immediately and have it checked by your installer. Dension and its authorised distributors and retailers are not liable for any incidental consequential or indirect damages and do not assume liability for any diagnostic fees.

The use of handheld devices while driving may be subject to government legislation. Please ensure that your use of the Dension Gateway complies with applicable traffic laws. Dension does not assume liability for any events resulting from the illegal or irresponsible use of handheld devices while driving.