


Introduction

This user guide provides you with information on how to use a Dension AVR interface to control and play your iPod videos, DVDs and more on your compatible radio display and rear seat screens (if fitted).


You will need to have a Dension Gateway 500 and AVR correctly installed in and configured for your vehicle. You will also need a screen capable of displaying video connected to your car radio and the radio must have TV tuner enabled. For installation questions please refer to the *Dension AVR installation guide*. For full compatibility information, please refer to www.dension.com/compatibility.

1 Porsche Cayenne PCM2


1. Switch on the radio, making sure **GW500** is active in **CD changer mode** (see *GW500 User Guide* for details) and that your external device (iPod, DVD player etc.) is connected

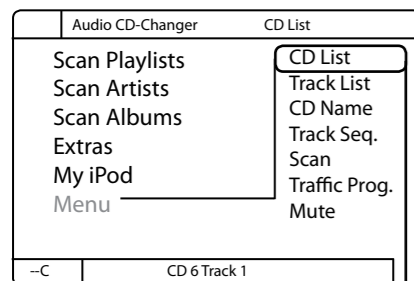

2. Press **Audio** button on your radio and select **CD List** item. Choose the disc 6, **Menu**



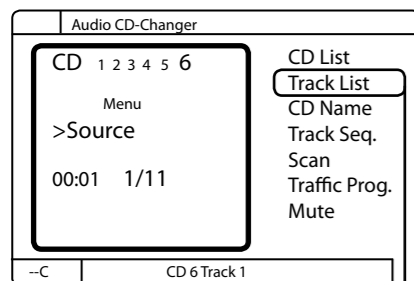


3. **Source** is the first folder. Press and hold down **>** to enter the source menu

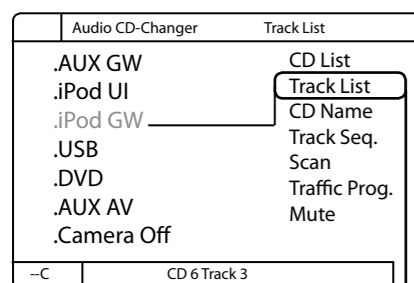


4. Use the selection knob to highlight **Track list**. Push down on the knob to select and view a full list of sources

5. Now select the correct source (see Section 4 for descriptions) and press and hold **>** to select

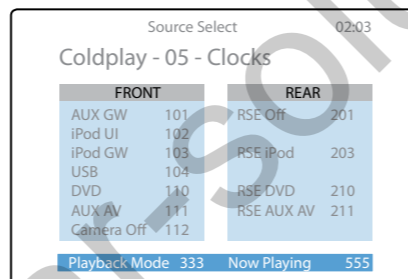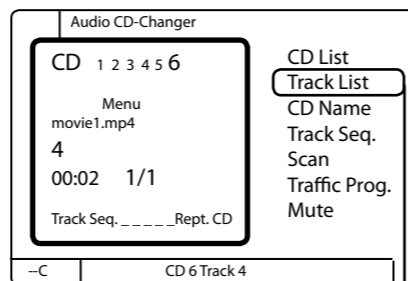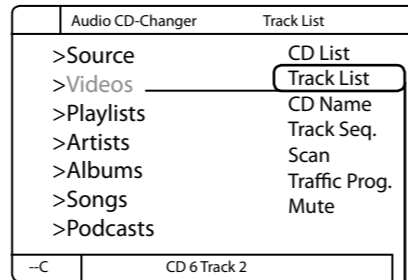

2 Mercedes Command

1. Switch on the radio, making sure **GW500** is active in **CD changer mode** (see *GW500 User Guide* for details) and that your external device (iPod, DVD player etc.) is connected

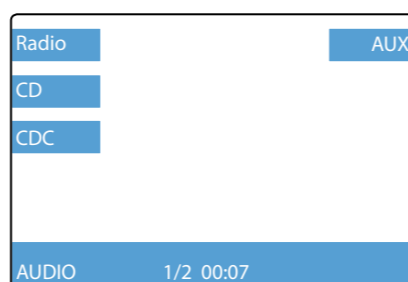

• When playing **iPod videos**, choose disc 6 **Menu** again, then highlight and select **Track list** with the selection knob to see the **iPod menu**. Use the selection knob to select **Videos**, then the folder you would like to choose a video from. To open folders or select the video file you would like to play press and hold **>**. To jump back one level, press and hold **<**

• For **DVD**, or any other device attached to the Aux input (for example, a gaming console), use the player or console's controls or remote control (if applicable) to play the DVD

• **Reverse Camera** can only be viewed on the front screen.

6. If viewing video on front screen, now press the **AV button** to see the music video or movie on screen. If you have chosen to view video on rear screens, they should play automatically.






Selecting video sources using Teletext:

Teletext will allow you to select video sources for front and rear screens using a Teletext menu similar to that on your home TV.

1. Now you have video playing, press the **Info** button on your radio

2. Choose **Videotext** option with selection knob

3. Select **your source** by keying in the Teletext code (**Note: To access Repeat, Random, Scan and PlayAll, use 333**)

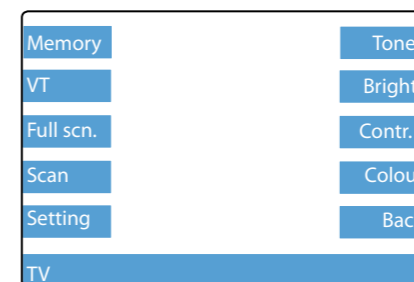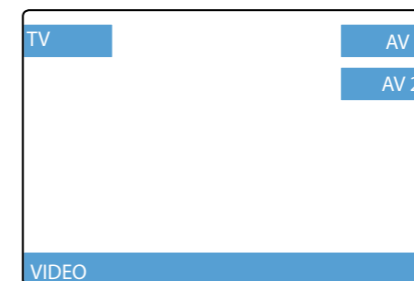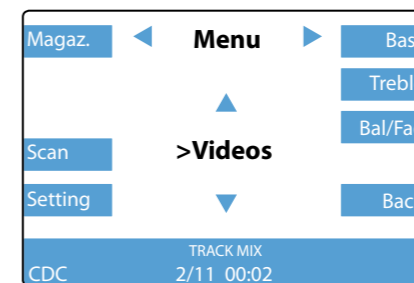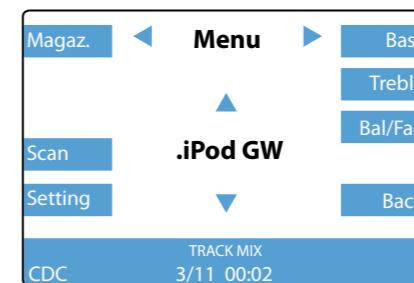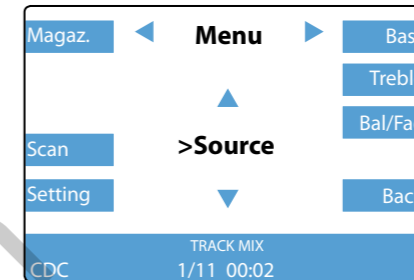

3. Use the **<<** and **>>** buttons to select **Source**, then pressing and holding down **>>** to enter the menu

4. Use the **<<** and **>>** buttons to select the correct source (see Section 4 for descriptions) and press and hold down **>>** to select

• When playing **iPod videos**, enter **Menu** again by choosing **Disc 6**. Use the **<<** and **>>** buttons to select the folder **Videos**, then the folder you would like to choose a video from. To open folders or select the video file you would like to play press and hold **>>**. To jump back one level, press and hold **<<**

• For **DVD**, or any other device attached to the Aux input (for example, a gaming console), use the player or console's controls or remote control (if applicable) to play the DVD


• **Reverse Camera** can only be viewed on the front screen

5. If you have chosen to view video on the front screen you will need to press the **Video** button and then select **TV**. If you have chosen to view video on rear screens, they should play automatically.

Selecting video sources using Teletext:

Teletext will allow you to select video sources for front and rear screens using a Teletext menu similar to that on your home TV.

1. Now you have video playing, press any of the inner screen buttons on the Command unit and select **VT**

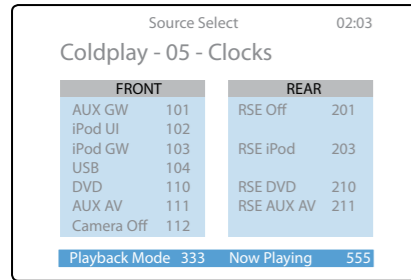


2. Select **your source** by keying in the Teletext code (**Note: To access Repeat, Random, Scan and PlayAll, use 333**)

The following menu items will be available when you access the Source menu.:


Source	Teletext code	Description
Aux GW	101	Auxiliary Audio source on Gateway (see GW500 manual)
iPod UI	102	Allows limited control of iPod Video and Audio playback with the radio controls and full control with iPod click wheel
iPod GW	103	Allows you to control iPod Video and Audio playback with the radio controls only
USB	104	Enables USB Audio playback (see GW500 manual)
DVD	110	Enables DVD Video and Audio playback
Aux AV	111	Enables Auxiliary Video and Audio playback
Reverse Camera	112	Enables/disables rear view Camera (front screen only)
RSE iPod*	203	Enables iPod Video and Audio to rear screens
RSE DVD*	210	Enables DVD Video and Audio to rear screens
RSE Aux AV*	211	Enables Auxiliary Video and Audio to rear screens

3 BMW iDrive CCC


1. Switch on the radio, making sure **GW500** is active in **CD changer mode** (see *GW500 User Guide* for details) and that your external device (iPod, DVD player etc.) is connected

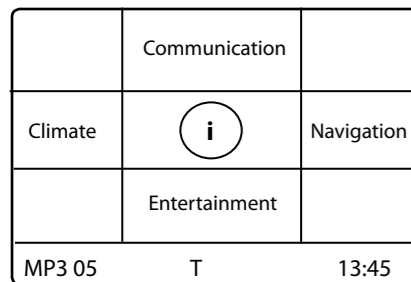


2. Press the **Menu** button on your iDrive and select **Entertainment** from the main menu

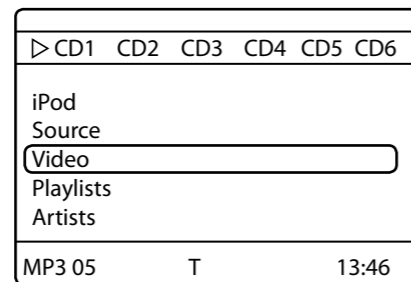


3. Now select **CD**. Choose the Video folder

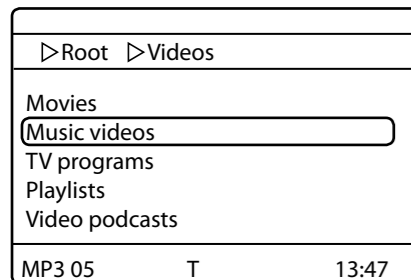


4. You are now in the Video menu. Select the category you want to play

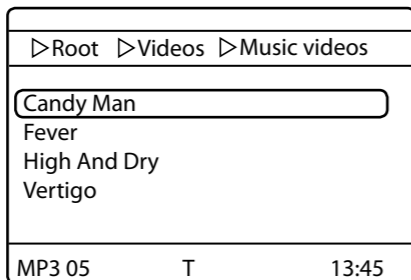

5. Select your video

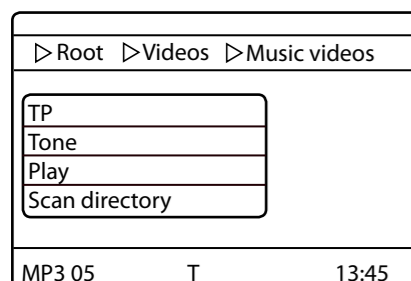

6. On some cars you will be asked to confirm Play. Confirm to start playing the video

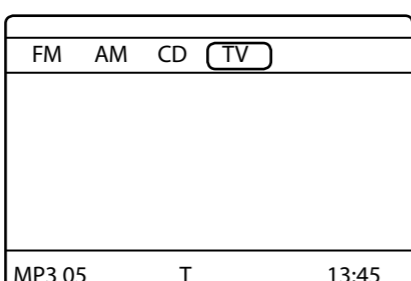

7. To view video, select the TV source from iDrive menu

AVR supports video playback on all current video capable iPods (iPod 5G Video, iPod Classic, iPod Nano 3G, iPod Nano 4G, iPod Touch, iPod Touch 2G, iPhone, iPhone 3G)

*In order to watch video on the RSE screens and listen to your car radio tuner in the same time, after starting the video file in the browser of CD Changer mode, switch on the TV tuner mode on the head unit, and then turn to radio source.

Disclaimer

If your car's electrical system begins to behave erratically, please disconnect your Dension Gateway interface immediately and have it checked by your installer. Dension and its authorised distributors and retailers are not liable for any incidental consequential or indirect damages and do not assume liability for any diagnostic fees.

The use of handheld devices while driving may be subject to government legislation. Please ensure that your use of the Dension Gateway complies with applicable traffic laws. Dension does not assume liability for any events resulting from the illegal or irresponsible use of handheld devices while driving.