

Last updated : 2012.03.29

MODEL : QVI-LVTX-1CH-V6.1 / Product code : LVTX-1CH-1201-003

Car Video Interface for

Mercedes-Benz C-Class (W204) 2012

and New E-Class 2012

User Manual

Contents

1. Before installation

1.1 Main specification	3
1.2 Features	4
1.3 System diagram	5
1.4 Components	6
1.5 Exterior	7

2. Setup

2.1 DIP switch	8
2.2 Remote control	9
2.3.1 OSD (on screen display)	10
2.3.2 OSD (on screen display)	11
2.4 Factory mode	12
2.5 Parking Guide line setting	13
2.6 Touch Calibration	14
2.7.1 Remote controller button	15
2.7.2 Remote controller button	16
2.8 DVD, DTV model selection	17
2.9 Switching mode via CAN wire	18

3. Troubleshooting

19

1.1 Main specification

1. Compatibility

2012Y Mercedes-Benz C-class 6.5/ 7 inch , New E-class 5.8 / 6.5 / 7 inch

2. Product composition

Multimedia Interface (made for specific models) * 1ea

Sub-board (made for specific models) * 1ea

3. MULTIMEDIA INTERFACE input spec.

3 * A/V (NTST&PAL) input

1 * CVBS (rear camera) input. (rear camera source)

1 * Analog RGB (Sync on Green)

1 * LCD input (car system input)

4. MULTIMEDIA INTERFACE output spec.

1 * LCD output(LCD Operation)

1 * Audio OUTPUT

2 * CVBS OUTPUT(Video Out for installing Headrest monitor)

5. POWER spec.

Input power : 8VDC ~ 16VDC

Consumption power : 4WATT (in maximum level)


6. Switch input mode

- Input video skip function : able to select whether to use the respective input video sources or not via DIP switch.
- Able to change input modes via the remote control.
- Able to switch modes via the Toggle switch.
- Able to switch modes via Original button of the car through CAN.


1.2 Features

- More convenience to install with plug & play (LVDS cable offered)
- Possible to move the displayed position of DVD, Navigation.
- Improved Display Screen (convenience-oriented Interfaces for users)
- Offered Remote controller for OSD settings.
- Add a safe function (show the main screen while driving)

1.3 System diagram

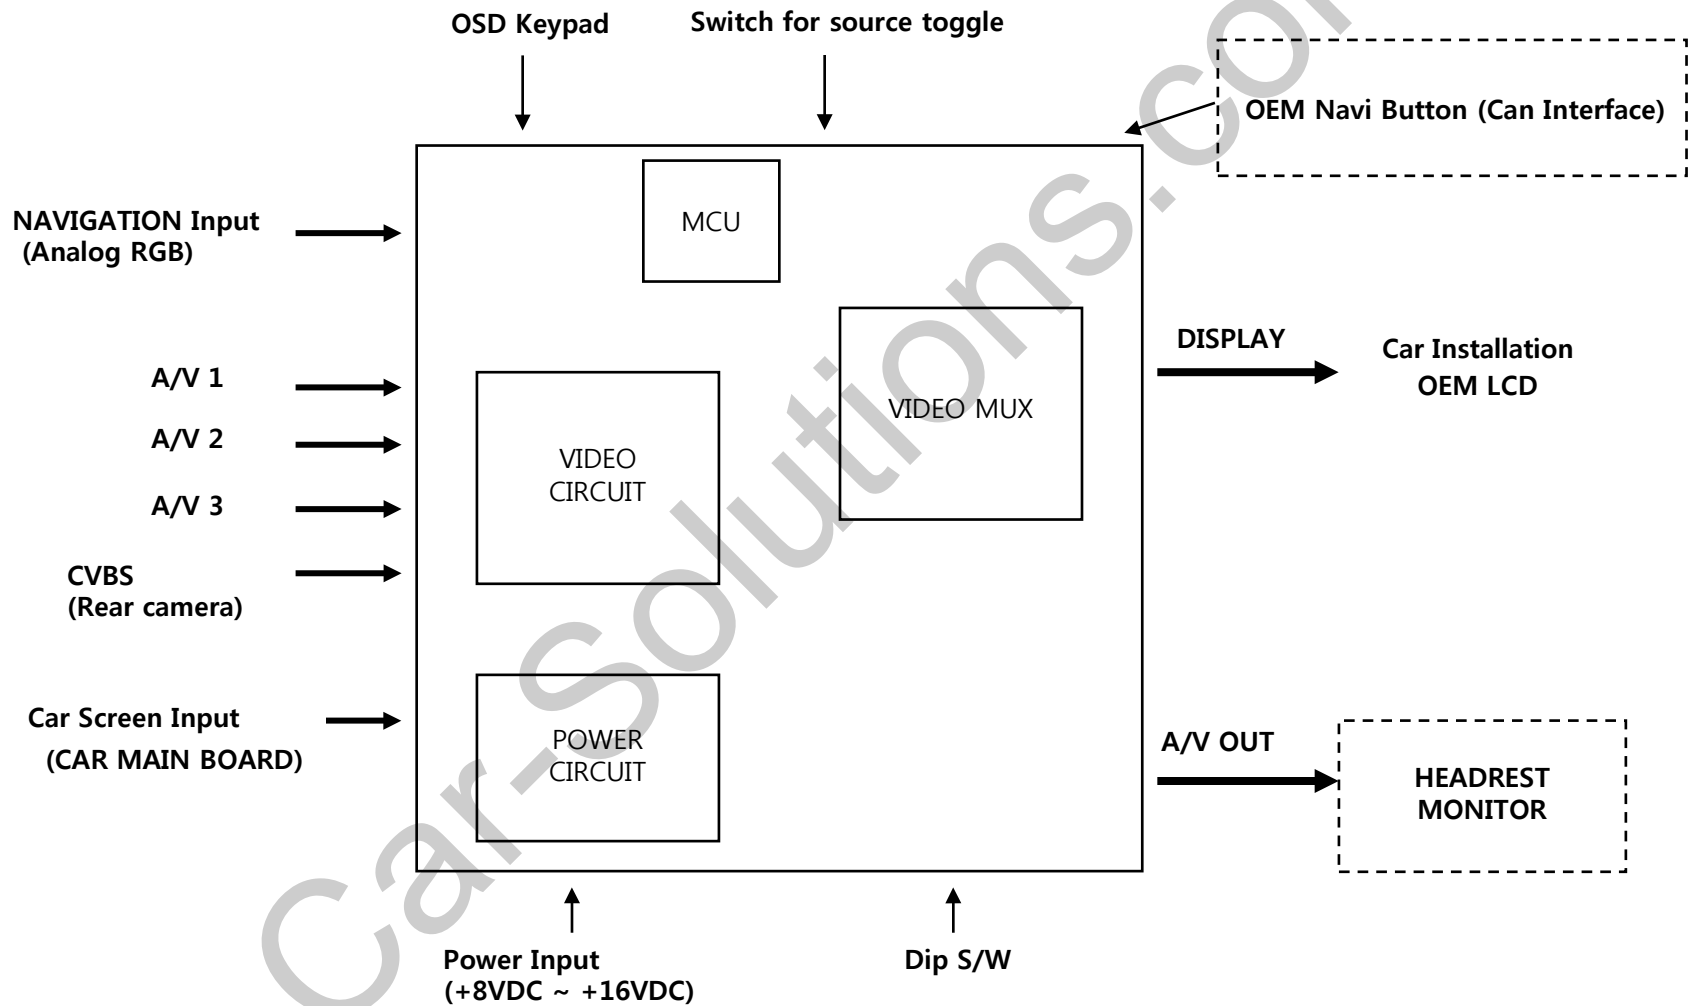

1.4 Components

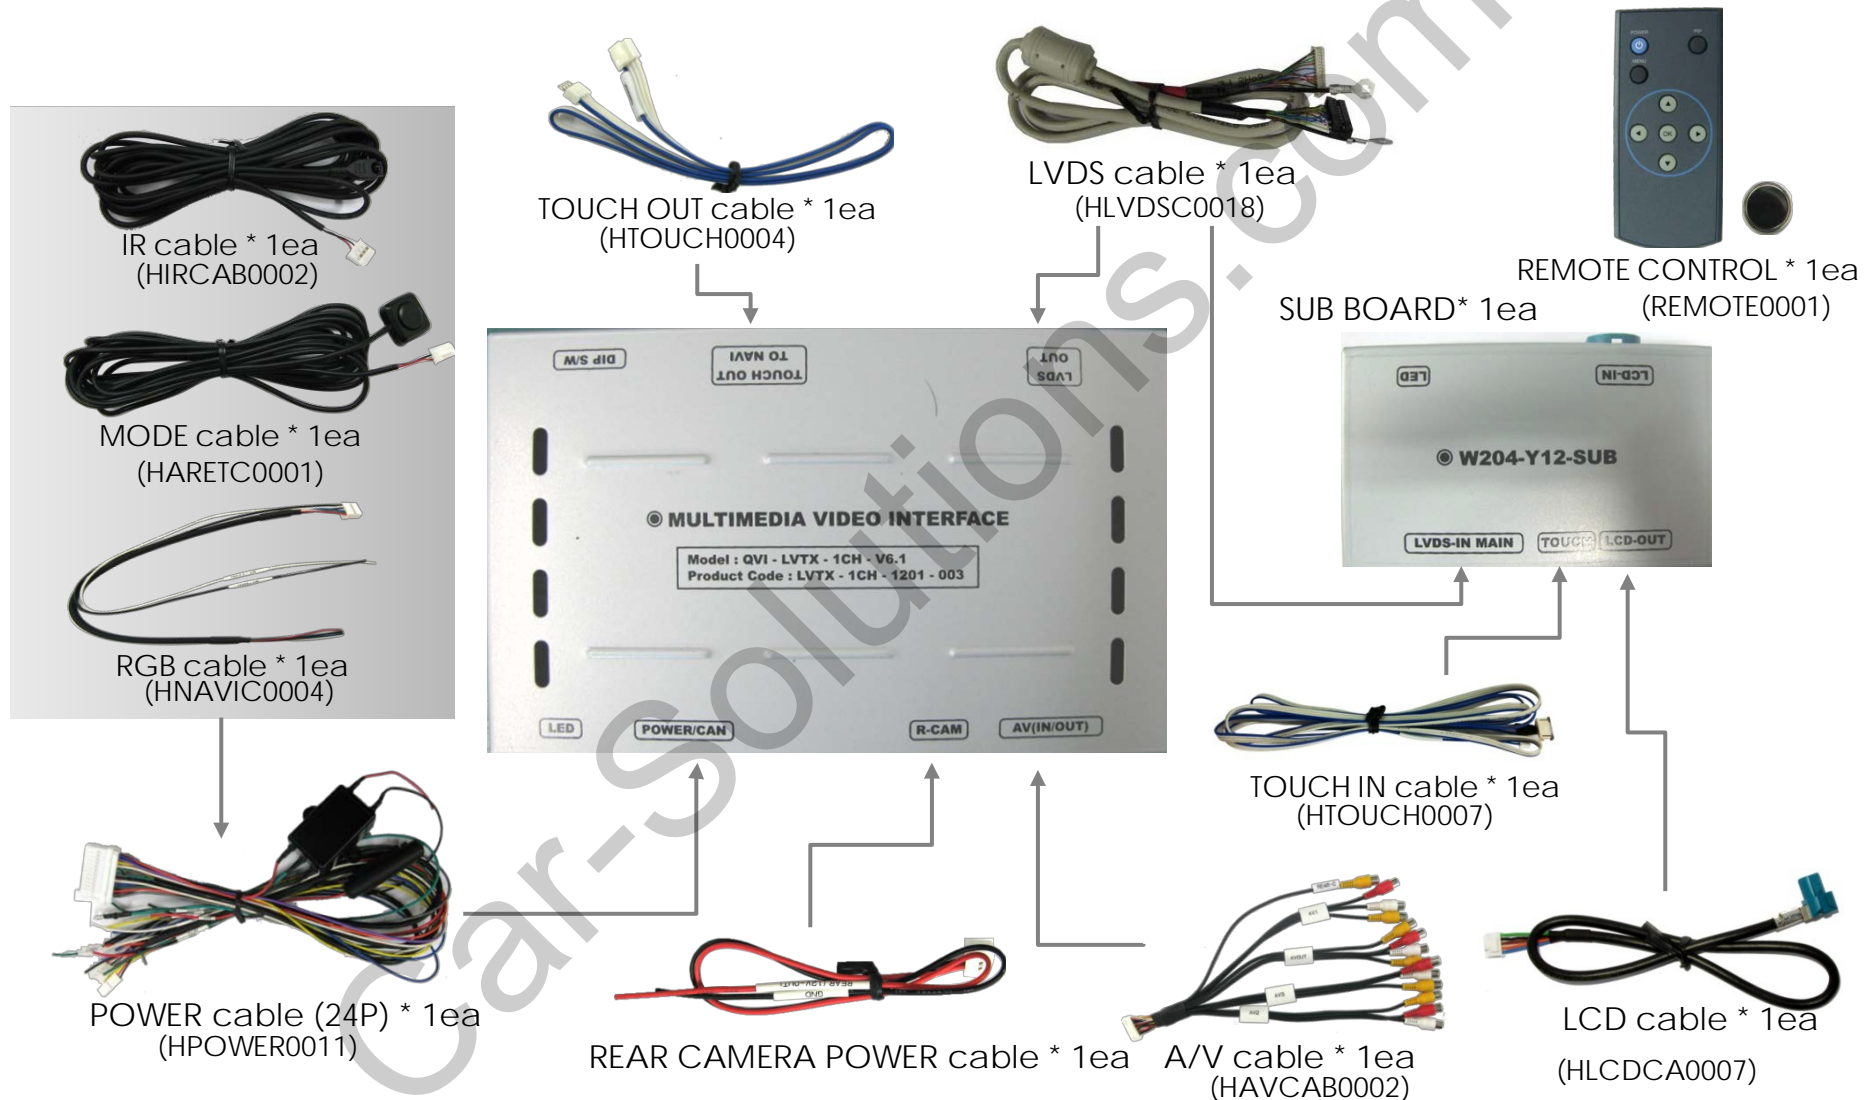

1.5 Exterior



Dimension

Horizontal length 125mm
Vertical length 105mm
Height 21mm

- ① LED
- ② POWER
- ③ R-CAM
- ④ AV(IN/OUT)
- ⑤ DIP Switch
- ⑥ TOUCH OUT TO NAVI
- ⑦ LVDS OUT

SUB BOARD

(75*47*20)



- ⑧ LVDS-IN
- ⑨ TOUCH
- ⑩ LCD-OUT
- ⑪ LED
- ⑫ LCD-IN

2.1 DIP switch

PIN	Function	Dip S/W Selection
1	RGB INPUT MUTE	ON : Skipping RGB Mode OFF : RGB Display
2	A/V 1 MUTE	ON : Skipping A/V 1 OFF : A/V1 Display
3	A/V 2 MUTE	ON : Skipping A/V 2 OFF : A/V2 Display
4	A/V 3 MUTE	ON : Skipping A/V 3 OFF : A/V3 Display
5	Car Models	ON : 6.5 inch (Low-Resolution) OFF : 7 inch (High-Resolution)
6		
7	Rear Mode	ON : External Rear Camera OFF : OEM Rear Camera
8	Dip s/w #8 must be "OFF"	

※ ON : DOWN / OFF : UP

※ DIP S/W usage example

- Input Mode : A/V3, Navigation (RGB)
- When original Navigation is not installed
- Rear camera : When to be installed on CVBS 4

- ▷ DIP S/W : 1 ☐ OFF
- ▷ DIP S/W : 2,3 ☐ ON (INPUT MODE SKIP)
- ▷ DIP S/W : 4 ☐ OFF (displaying A/V3)
- ▷ DIP S/W : 5,6 ☐ ON
- ▷ DIP S/W : 7 ☐ ON (displaying CVBS4)
- ▷ DIP S/W : 8 ☐ OFF



2.2 Remote control

Key	Function
POWER & PIP	Unavailable
MENU	Activating OSD menu
OK	Making a selection, changing image display
▲	Moving upward
▼	Moving downward
◀	Moving leftward (If you press this button 5 seconds long, you can get access to the factory mode.)
▶	Moving rightward (If you press this button 2 seconds long, you can reset all the data about user environment.)



*FACTORY MODE (Interface setting for **installer**)

: Operated by pressing ▲ → ▼ → ▲ → MENU button or press ◀ more than 5seconds long on the remote controller.

2.3.1 OSD (on screen display)

Analog RGB Mode



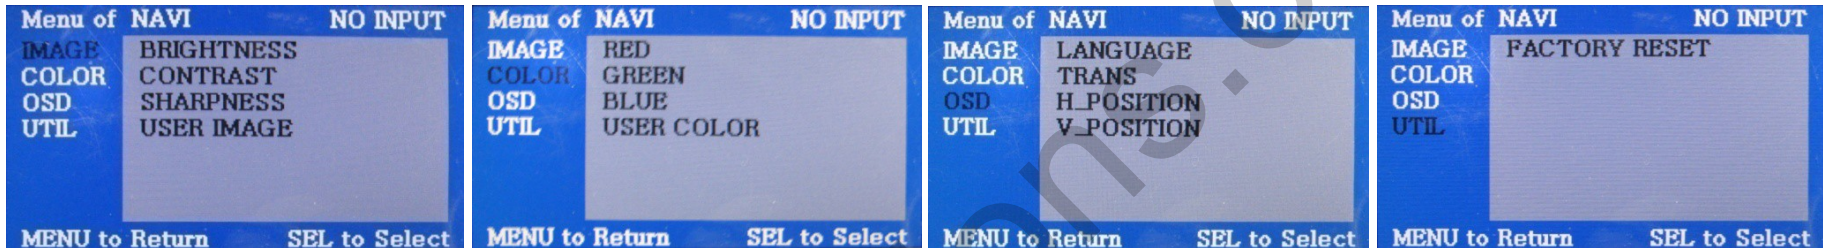


IMAGE	COLOR	OSD	UTIL
* BRIGHTNESS	* RED : Adjusting red	* LANGUAGE : Choosing interface language while changing mode between A/V and DVD	* FACTORY RESET : Resetting all the data about the relevant mode that applicable to navigation, DVD mode respectively.
* CONTRAST	* GREEN : Adjusting green	* TRANS : Adjusting transparency of OSD	(Impossible to reset of screen position, only available for color, OSD setting)
* SHARPNESS	* BLUE : Adjusting blue	* H_POSITION, V_POSITION : Positioning OSD menu	
* USER IMAGE : Selecting one among 4 color options.	* USER COLOR : Selecting a color option among set color options		

2.3.2 OSD (on screen display)

Video mode

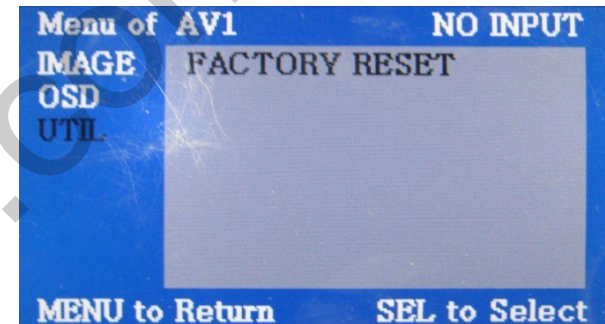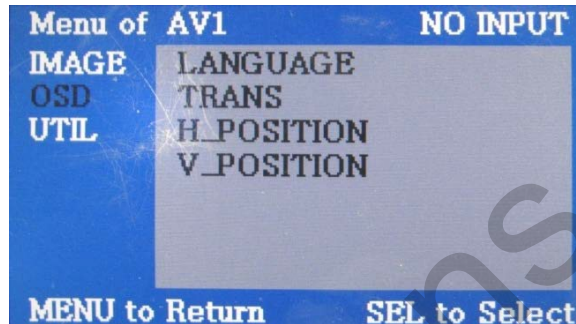

IMAGE

- * BRIGHTNESS
- * CONTRAST
- * SATURATION
- * HUE
- * SHARPNESS
- * USER IMAGE
: Selecting one among 4 color options.

OSD




- * LANGUAGE : Choosing interface language while changing mode between A/V and DVD
- * TRANS : Adjusting transparency of OSD
- * H-POSITION
: moving in horizontal direction
- * V-POSITION
: moving in vertical direction

UTIL

- * FACTORY RESET : Resetting all the data about the relevant mode that applicable to navigation, DVD mode respectively.
(Impossible to reset of screen position, only available for color, OSD setting)

2.4 Factory mode

FACTORY mode – Press ◀ button 5 seconds long on the remote controller.

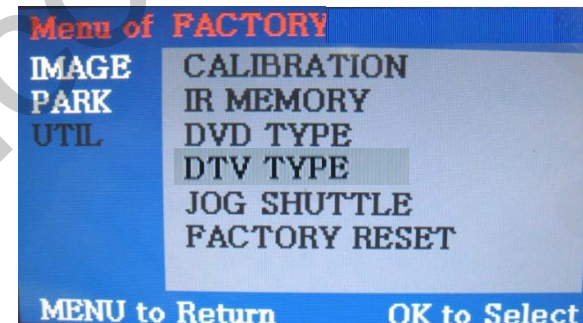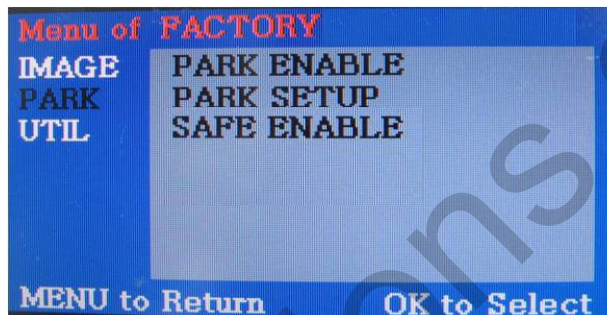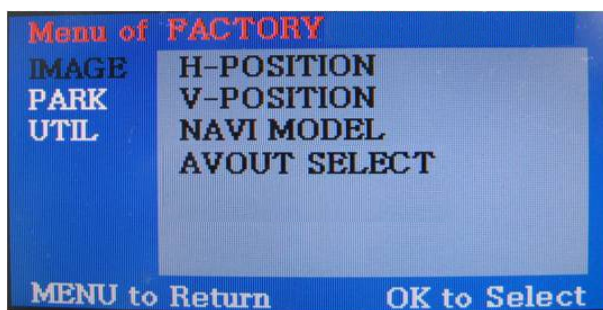

IMAGE

Adjusting the position of navigation

- * H-POSITION
: moving in horizontal direction
- * V-POSITION
: moving in vertical direction
- * NAVI MODEL : DEFAULT, KD900(WVGA), MD7000(WVGA), MYVI(WVGA), PAPAGO(WVGA)
- * AVOUT SELECT : DEFAULT, AV1, AV2, AV3

PARK


- * PARK ENABLE : Setup of rear view parking guide line
- * PARK SETUP : Control over position of rear view parking guide line
- * SAFE ENABLE : To select whether to use SAFE function(NOT to allow watch video while driving) or not

UTIL

- * CALIBRATION : Touch calibration
- * IR MEMORY : To register value of buttons on the remote controller
- * DVD TYPE : Setup for the type of DVD
- * DTV TYPE : Setup for the type of DTV
- * JOG SUTTLE : JOG SUTTLE ON/OFF setting, Control of DVD, DTV, OSD menu ON/OFF setting.
- * FACTORY RESET : To reset all the value in factory mode

2.5 Parking guide line setting

FACTORY mode – Press ◀ button 5 seconds long on the remote controller.

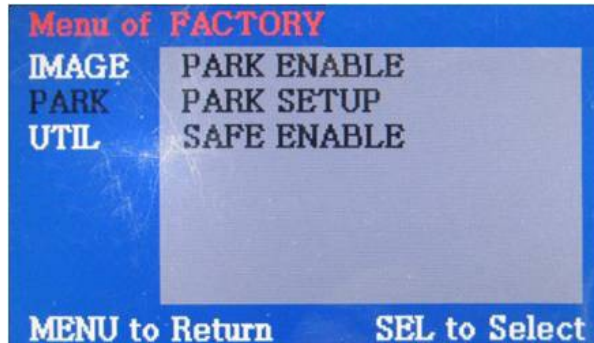

PARK

* **PARK ENABLE** : Selecting whether to display the parking guide line or not on rear gear (default : OFF)

■ **PARK SETUP** : Adjusting the position of the parking guide line (available in PARK SETUP -> V-POSITION, H-POSITION)

■ **SAFE ENABLE** : In case of Connecting "Safe" wire from the power cable to the hand break,
ENABLE – OEM Picture displays in Drive gear position
DISABLE – No display locked in any gear position


PARK - ENABLE

A. If you set 'PARK ENABLE' as "ON" state, there will be the rear view parking guide line. (as shown left picture)
B. Press the OK button of remote controller, "H_POS" will be shown on the right and control moving in horizontal direction.

PARK - ENABLE

A. Press the OK button of remote controller one more, "V_POS" will be shown on the right and control moving in vertical direction.

2.6 Touch calibration

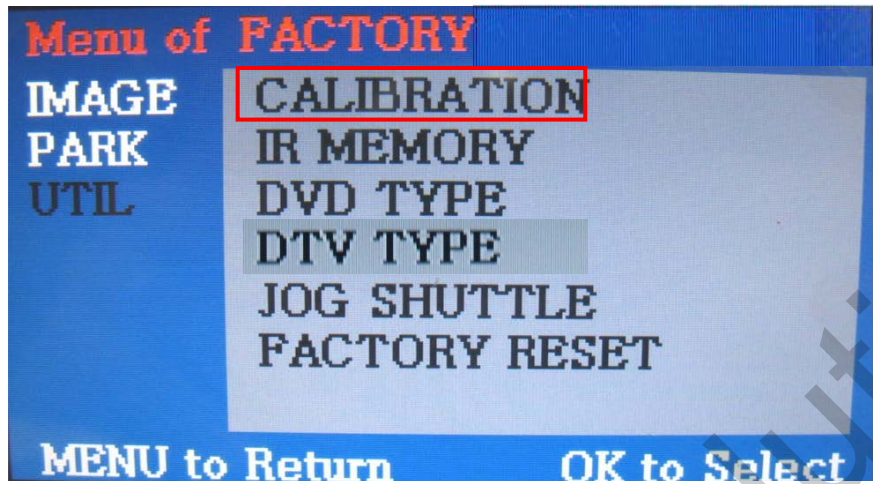


① First of all, press ◀ button on remote controller 2 seconds long. Then you can access to the FACTORY mode.

② Register "YES" when the CALIBRATION option is selected as shown above.

③ Then you can see "touch calibration" on screen **about 2 seconds long** as shown above. After the word "touch calibration" disappear, touch calibration function will implement. (Just touch "+" shape on screen.) If you succeed, you can see "success". If not, you will see "failure".

Registering value of remote controller buttons?

When you want to control DVD and DTV via touch screen (using OSD menu) with other models besides already registered option-SANYO and NECVOX, you can register value of DVD and DTV' s remote controller which you have. Then you can control DVD and DTV via touch screen.

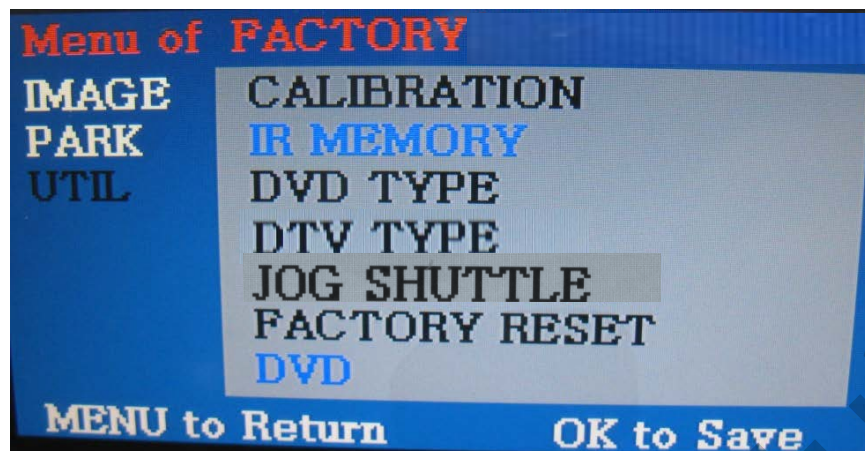

① First of all, press ◀ button on remote controller 2 seconds long. Then you can access to the FACTORY mode. And go to IR MEMORY, UTIL.


There are two options in IR MEMORY as shown above; DTV and DVD.

Then you select AV source that you want to set among them.

② This is a window for register of DVD' s remote controller button value. At the moment just select a menu that you want to save.
(Select "DTV in options of IR MEMORY" if you want to save values of DTV' s remote controller. And follow the instruction below.)

Instruction>

- Select "POWER" in OSD menu, then press "OK" on remote controller. (as shown above)
- If the marked area flickers as shown above, press "POWER" button on the remote controller of DVD that you want to use. (continued in the next page)

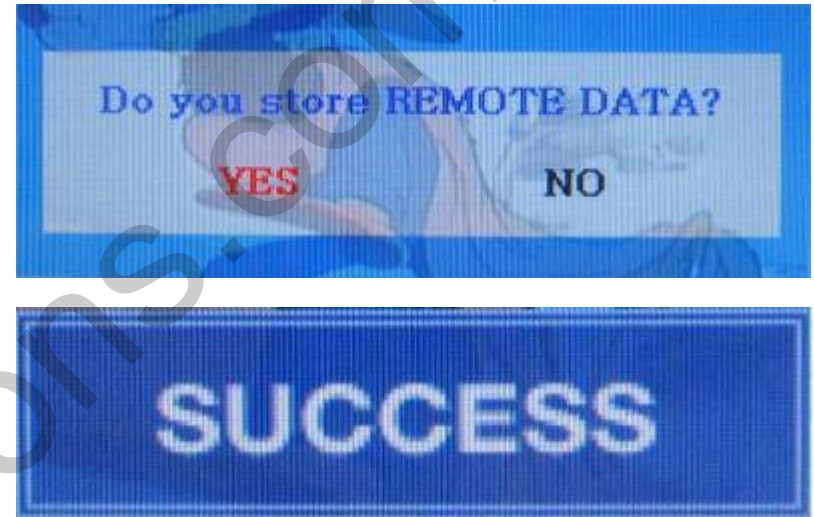

Instruction> continued...






c. The values that you registered will appear as green text in the marked area on pressing the button. And the values will be saved automatically.

d. Register remain buttons' value in OSD menu like the above-mentioned.



③ After register, select "INPUT" in OSD menu and press "OK". Then you can see confirmation window as shown above. At the moment, if you choose "YES", all the values that you entered will be saved. If you select "NO", the values won't be saved.

(If data is saved, DVD TYPE and DTV TYPE will be changed to "USER" automatically.)

If you see "SUCCESS" on screen, the data is saved clearly and you can control DVD via touch screen. BUT, you MUST change the option in DVD(DTV)/UTIL/FACTORY to "USER". (Refer to page18.)

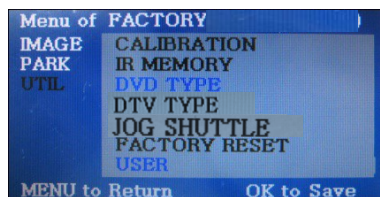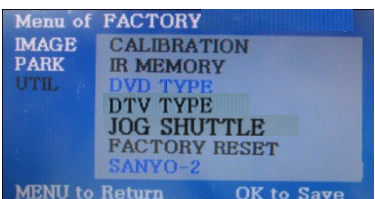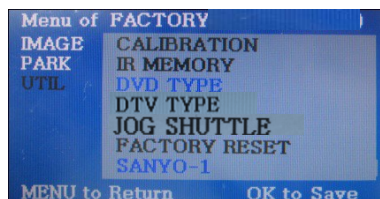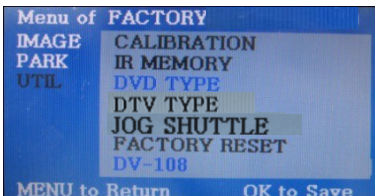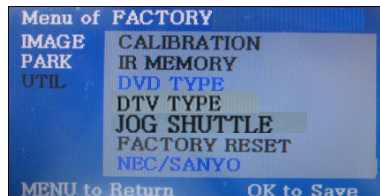

DVD TYPE

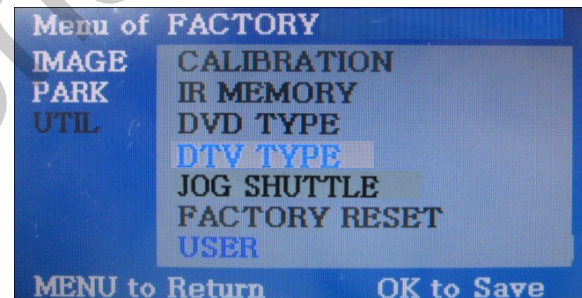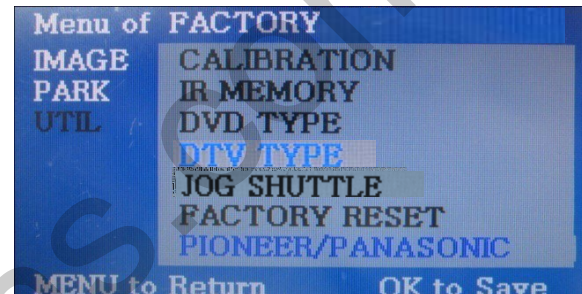

DTV TYPE

UTIL – DVD/DTV TYPE

If DVD/DTV type that you want to use is not NECVOX or SANYO, you have to register values of the remote controller that you want to use in the "IR MEMORY" section and set the "DVD TYPE"/"DTV TYPE" to "USER". Unless you do this process after saving the data, you can NOT control DVD/DTV via touch screen.

DVD TYPE : NEC/SANYO, DV-108, SANYO-1, SANYO-2, USER

DTV TYPE : PIONEER/PANASONIC, USER, CMMB

※ If you enter data in "IR MEMORY" section in FACTORY mode, "DVD TYPE"/ "DTV TYPE" will automatically be saved to "USER".

After wiring CAN of the car with offered CAN cable, you can switch A/V mode by the Factory button as below.



W204 7", 5"(C-Class), W212 5.8", 7" (E-Class) :

Switching Mode by Return Button of jog shuttle as shown left.

※ In W204 7 inch 's case, the button is written "Return"

3. Troubleshooting

Q. I can not switch A/V sources

A. Check IR or Ground cable connection. Check LED lamps in the interface, if it is not on, check power cable.

Q. All I got on the screen is black.

A. Check second LED lamp of the interface is on, if not, check A/V sources connected are working well. (Second lamp indicates AV sources connected works well.) Check interface connection has been done well.

Q. Displayed image color is not proper (too dim or not suitable color)

A. Try to select "INITIAL" in OSD menu, if it does not work, inform to manufacturer.)

■ I can watch the rear camera on the screen

A. Set the DIP switch #7 as state "ON".

■ Unwanted A/V mode is displayed. (A/V source switching order : OEM->RGB->AV1->AV2->AV3)

A. Check DIP Switch Setting.

■ OEM image is not displayed.

A. Check interface's LCD In/Out cable connection. If the status keeps on, inform to manufacturer.

■ Screen only displays white color.

A. Check LCD out cable is connected well, if this status keeps, inform to manufacturer.

■ After setting PIP function, I got only half OEM image at the right in the screen.

A. This is not an error, just caused by user's setting mistake, user should set to "Split Screen" in the OEM menu.

Q. Rear CAM does not appear, when car is in reverse after CAN wiring.

A. Operate "FACTORY MODE" like left picture, then select "UTIL ☐ Rear Select" If it is set as "LAMP", change it to "CAN" by remote or keypad.

※ LAMP : In case of connecting "Rear-C" wire of Power Cable to Rear Lamp in vehicle.

CAN : In case of detecting Rear Cam thru CAN signal. (CAN must be wired)

■ After moving gear to "P" or "D" from "Reverse", I can't get navigation, but half PDC Image in the screen.

A. Once, you starts driving, the screen displays navigation right away, this is not an system error.