





0. Contents

1.	Before installation 1.1 Specification 1.2 Components 1.3 Exterior		3 4 5
	1.4 Using remote control	<u> </u>	- 6
2.	User interface 2.1 MAIN MENU 2.2 EXPLORE 2.3 MUSIC 2.4 MOVIE 2.5 PHOTO 2.6 I-POD 2.7 SETUP 2.8 FIRMWARE UPDATE		7 - 8 - 9 10 11 12 13

3. Installation

3.1 Cautions on installation	15
3.2 Installation diagram	16

1.1 System Spec.

INDEX	CONTENTS	INDEX	CONTENTS
USB File format	FAT, FAT32, NTFS	Media	AVI, FLV, MPEG, MPG, VOB, DAT, MP4, MOV, WMV, RM, RMVB, DIVX, MKV, M4V, TP, TS, M2TS
Audio	MP3, WMA, APE, FLAC, AAC, AC3, DTS	Image	JPEG, JPG, BMP, PNG, GIF
External AV OUT	Video * 3ea / Stereo Audio * 1ea	Power	DC 12V
Operation Temperature	-20°C ~ 70°C		



1.3 Exterior





1.4 Using remote control



Key	Function		
(QVIX Power ON, OFF	πх	Select subtitle in movie
×	Volume MUTE		Select raido of movie
M	Play, Pause	×	Copy / Delete file
/5	Stop, move to the back	N/P	Select NTSC/PAL
N	Move to Previous/next Music or media	, 	
	Move to the next page		
▶	Fast forward, Fasr rewind		
۲	Setup for music, movie, picture		
	Move to the explore folder		
00	Move to the movie folder		
Л	Move to the music folder		
	Move to the photo folder		
*	Setup for system		
Ś.	Connect the external input(I-Pod)		
O	Select repeat option		
Q ⁺	Photo Zoom in		
GOTO	Play time in movie		
AAC	Select audio format in movie		

2.1 User interface / main menu

* The user can control using remote control



- 1) Explore : Able to search and play all files (Music, Movie, Picture) in HDD, USB, SD card
- 2 Music : Able to search and play music file(can not see other file)
- ③ Movie : Able to search and play movie file(can not see other file)
- ④ Picture : Able to search and play picture file(can not see other file)
- (5) Setup : Able to confirm and select Language, Screen saver, Deault setting, System information

1.4.1 User interface / Explore



- 1) If you select explore menu, you can see all files
- Play the file in list (music, movie, picture)
- 3 Can not play 1 file

2.2.1 User interface / music

If you don't stop the music, You can keep listening the music (Except for movie)





This is the picture of selecting music file

- ① Information of music
- Play time
- ③ Repeat option : able to selcet the file using theO button of remote control
 - (Repeat all, repeat one, none)
- ④ EQ mode Sound Jazz, classic, pop, etc.
- (5) The time of rest of music

If you press setup button, you can see the bar above of the screen

 EQ MODE : NORMAL, DBB, POP, ROCK, CLASSIC, JAZZ VOCAL, DANCE, SOFT
FOCUS COLOR LYRICS : (GREEN, WHITE, BLACK etc)
UNFOCUS COLOR LYRICS : (WHITE, BLACK, GRAY etc)
PLAY MODE : KALAOKE, LINE ROLL

2.2.1 User interface / Movie





This is the picture of selecting movie file

Using button of remote control

- GOTO : Play time
- AAC : Select audio
 - 1/1 mono R AC3, 1/1 mono L AC3, 1/1 AC3 2CH)
- : Fast forward/Fast rewind (±1.5X, 2X, 4X, 8X, 16X, 32X)
 - : Select ratio of screen
- (Screen full screen, Defualt size, 4:3, Video full screen)

If you press setup button, you can see the bar above of the screen

1) Subenable : Display Subtitle(ON/OFF)

- 2 Subtitle :
- ③ Color: Select color of subtitle(White, Gray, Red etc)
- ④ Rimcolor : Select rimcolor of subtitle(White, Gray, Red etc)
- (5) Size : Select size of subtitle (24,36,48,60,72,84,96)
- 6 Text encoding : Select subtitle type(Unicode(UTF-8), 5-Chinese(GBK), UTF-16BE etc.)
- ⑦ Time Sync : Synchronization movie with subtitle
 - $(0, \pm 0.5s, \pm 1s, \pm 1,5s)$
- (8) Offset : Adjustment of postion of subtitle

2.2.1 User interface / Photo





This is the picture of selecting Photo file

Using button of remote control



: Zoom in the picture

If you press setup button, you can see the bar above of the screen

 Switch mode : Select exchanging type of picture (Default, slid up, strach up, Zoom in, Zoom out, etc)
Play interval : Select the time for exchangin picture (1s, 3s, 5s, 7s, 9s)

③ Background music : Select ON/OFF for background music

2.2.1 User interface / I-Pod





If you connect the I-pod with Qvix via I-Pod cable, you can see the media thru monitor using the apple button of the remote control If you play the Media in I-Pod, the monitor of I-Pod is appeared "Connect TV" and you can see the media in the monitor of the car

If The media isn't streaming type, you can just listen the sound.

2.2.1 Setup

Language Screen Saver Restore Default Setting System information	Korean English Simplified Chinese Traditional Chinese	3 Language Screen Care Restore Der System In Yes	Korean or o default setting? No
2 Language Screen Saver Restore Default Setting System information	1 minutes 2 minutes 5 minutes 10 minutes 30 minutes 1 hour 2 hours ✓ Off	(4) Language Screen Saver Restore Default Setting System information	QVIX 1.0 Mar 13 2012 17:53:16

1) Language : Setup the Language

(Korean, English, Simplified Chinese, Traditional Chinese)

- ② Screen Saver : Select the time to operate the screen saver
- ③ Restore Default Setting : able to restore default setting
- (4) System Information : Version of the system's hardware.



You can find the firmware file in HDD,USB,Sdcard Using the explore in main menu. And you can complete the update as click the firmware file.

3.1 Cautions on installation

- Ignition key should be taken off before starting installation, interface power connection must be the last step in installation.
- Should be no any electronic devices or magnetic pole around installation place.
- All steps of installation should be done by well-trained specialist.
- Dismantling without manufacturer's permission can not be guaranteed, (No permission to break attached label on the board.)
- Kindly check all parts are in the box, when receiving the product, if anything missing, inform the supplier or manufacturer of that.
- According to our sales policy, any problems caused by user's mistake, careless can not be guaranteed.

