

Update date : 2015.01.26  
model : QVI-PG208-MAIN-V1.1 / product code : PG208-1210-003

# Peugeot 208

## Video Interface

### Specification & Installation

# Contents

## 1. Before installation

1.2 Features-----	3
1.4 What is in the box?-----	4

## 2. SETUP

2.1 DIP switch -----	5
2.2 Original buttons in car -----	6
2.3 OSD (on screen display) -----	7
2.4 FACTORY mode -----	8
2.5 Rear view parking guide line -----	9
2.6 Touch calibration -----	10
2.7 Remote controller button -----	11
2.8 DVD, DTV model selection -----	13

## 3. Installation

3.1 Installation diagram -----	14
3.2 Installation -----	15

4. Troubleshooting -----	17
--------------------------	----


# 1.1 Features

- External DVD, DTV control via Touch Screen as IR code memorizing from each video source remote.

Controllable displayed position of each external video sources on RGB, A/V modes.

- Dual RGB inputs (RGB IN-2, for Smartphone Mirroring with SMI only.)
- Selecting how to detect the rear view camera(LAMP or CAN)
- Able to switch videos via the original buttons
- Compatible Model – Peugeot 208, Peugeot 308

# 1.2 What is in the box?

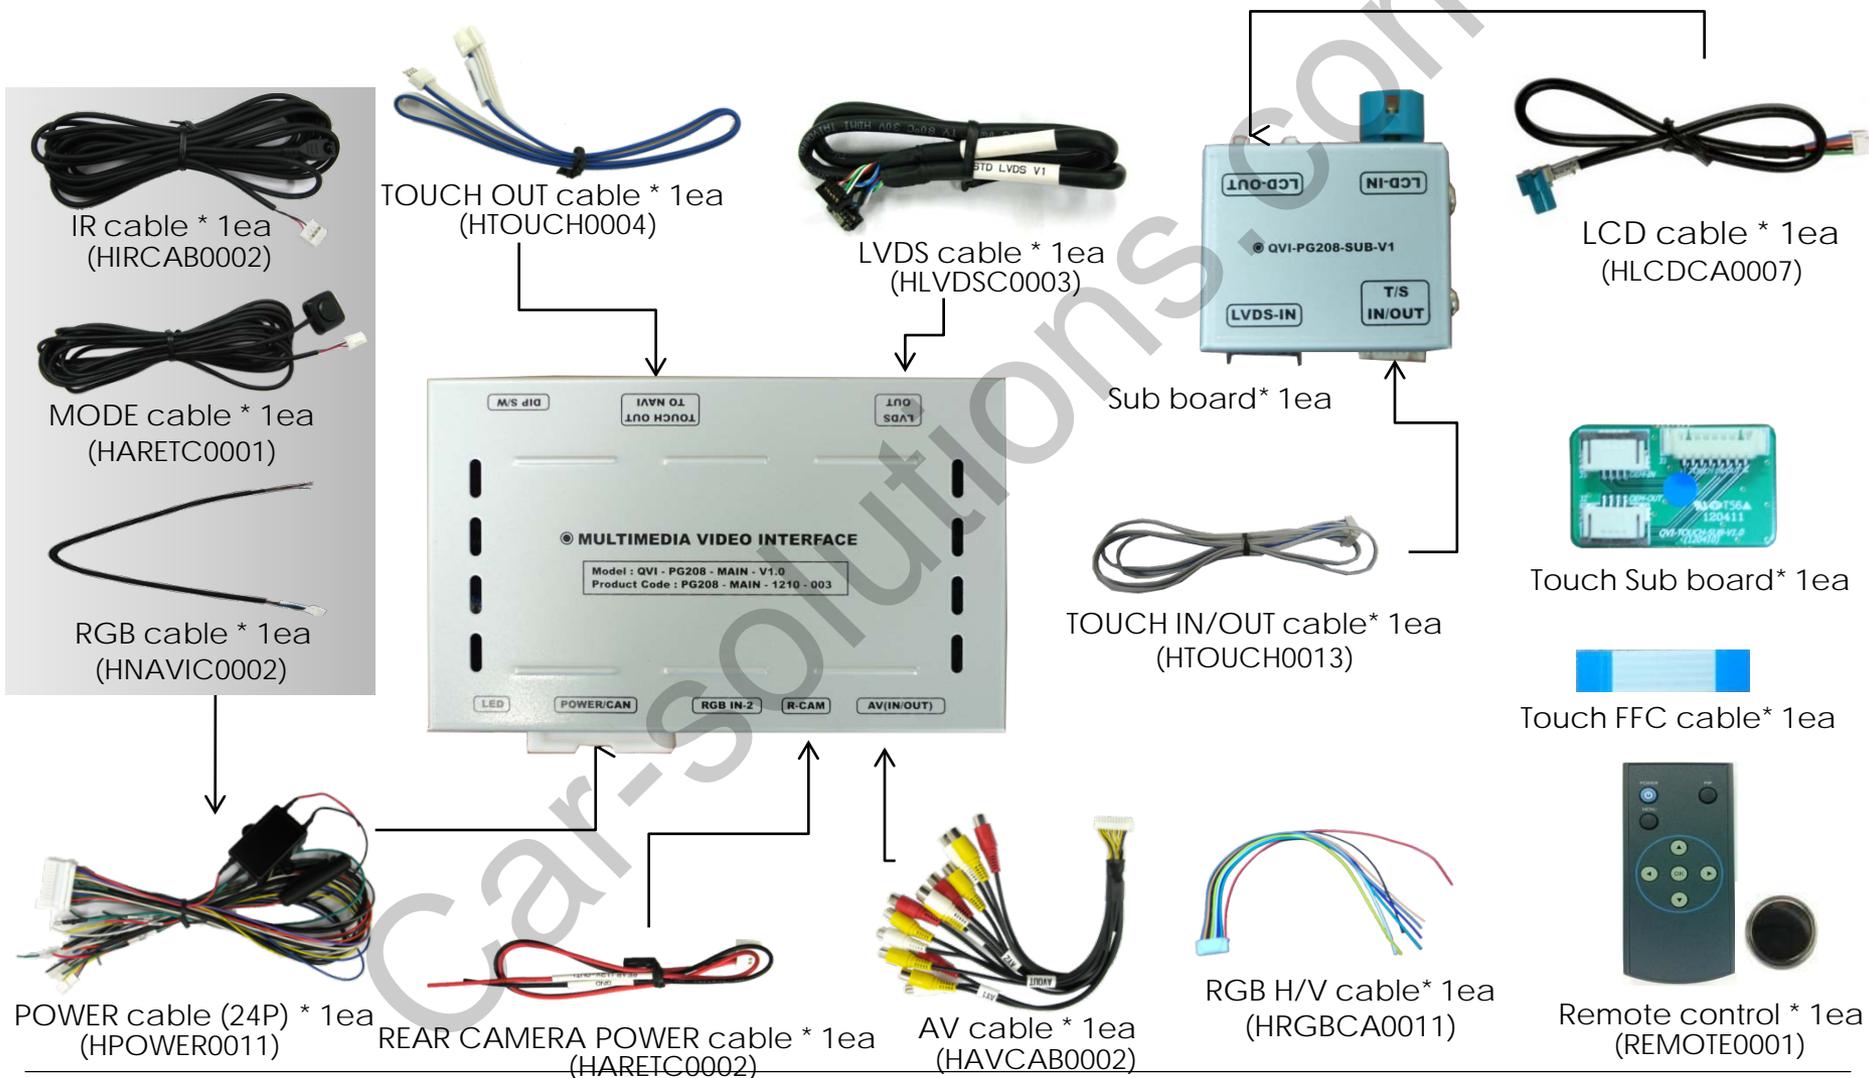

# 2.1 DIP switch

#PIN	function	DIP S/W selection
1	RGB INPUT skip	ON : Skipping RGB Mode OFF : RGB Display
2	A/V 1 skip	ON : Skipping A/V 1 OFF : A/V 1 Display
3	A/V 2 skip	ON : Skipping A/V 2 OFF : A/V 2 Display
4	A/V 3 skip	ON : Skipping A/V 3 OFF : A/V 3 Display
5	Select Car model	ON : Peugeot 308 OFF : Peugeot 208
6		N.C
7	Rear Mode	ON : External Rear Camera OFF : OEM Rear Camera
8	RGB IN-2 INPUT skip	ON : Skipping RGB Mode OFF : RGB Display

※ ON : DOWN, OFF : UP

※ DIP S/W usage

- Input mode to intend to use : A/V3(DVD), Navigation (RGB)
- Rear view camera : installation on CVBS4
- When the original navigation is NOT installed

- ▷ DIP S/W : 1 → OFF
- ▷ DIP S/W : 2,3,4 → ON (Input mode skip)
- ▷ DIP S/W : 5 → OFF
- ▷ DIP S/W : 6 → OFF
- ▷ DIP S/W : 7 → ON (External rear camera available)
- ▷ DIP S/W : 8 → ON (RGB IN-2 mode skip)




※ Please make sure to disconnect the power cable of the interface and reconnect the power cable again to apply the dip switch setting whenever changing DIP switch. Otherwise, DIP switch setting will not be applied.

## 2.2 Original buttons in car

After Connecting original can wire in car with offered can wire, user can use original button

### PG 208

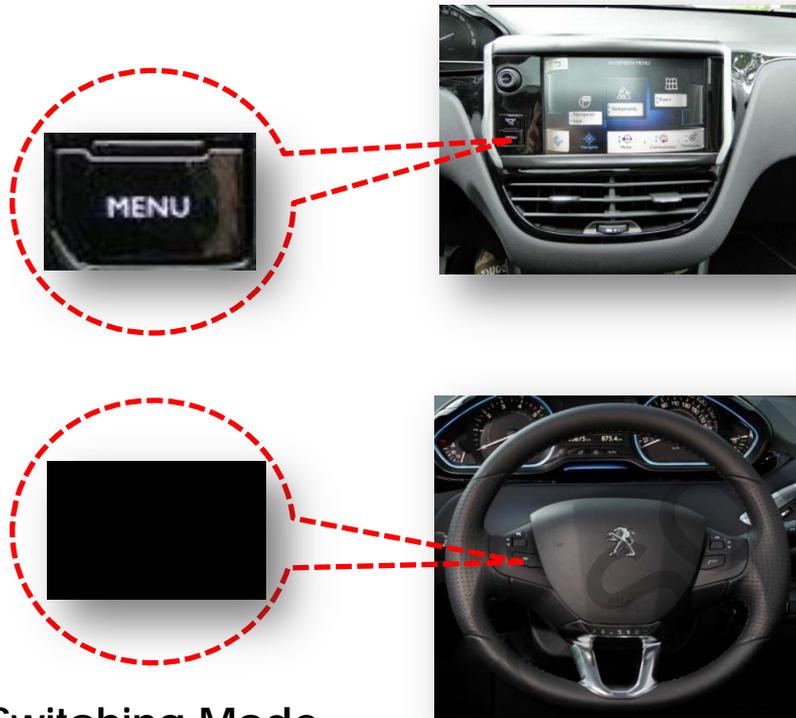

### Switching Mode

Press long : Switching mode  
Press short : Return to original  
Mode directly

### PG 308

### Switching Mode

Press long : Switching mode  
Press short : Return to original  
Mode directly




⊗ The others button : go to original mode

## 2.3 OSD implementation

### OSD implementation - DVD

To implement DVD OSD menu, installer must install DVD system on AV1 and connect "IR-AV1" cable among power cables with remote sensor cable of DVD.

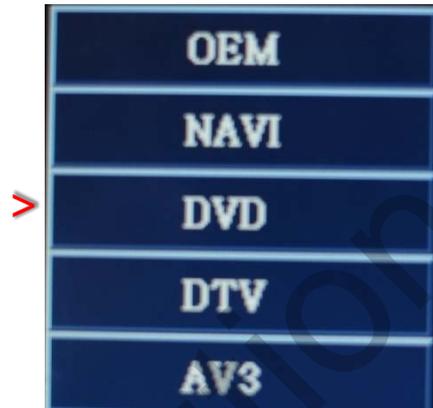



First of all, if you touch the screen on mode "AV1", you can see the menu as shown left. And then if you do NOT touch anything on the screen 5 seconds or more long; or if you touch the screen except the menu, the menu will disappear.

At that time, if you choose "INPUT", you can get out of the menu and see the mode change menu.(left picture)

Here is a picture of the mode change menu. If you select the channel which you want, then the channel will be changed to that.(right picture)

### OSD implementation - DTV, NAVI

DVD, DTV, navigation menu is available in English or Chinese. After implementing OSD menu with pushing "MENU" button on remote controller, choose the language that you want to use. In DTV case, connect remote control cable to "IR-AV2" of power cable.

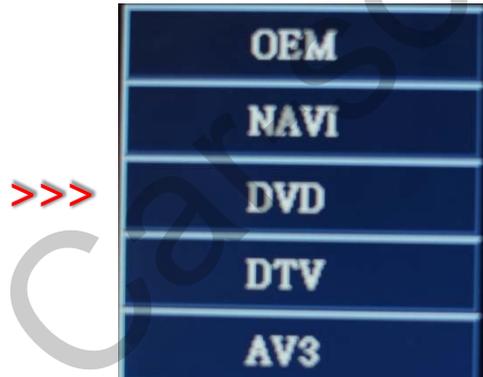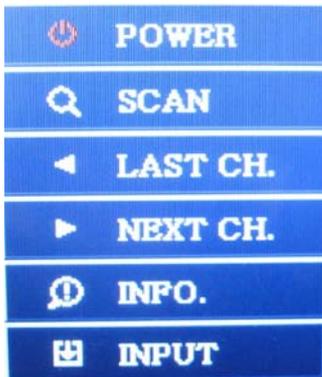


As shown above, if you touch the screen on mode "AV2", you can see the menu as shown left. And then if you do NOT touch anything on the screen 5 seconds or more long; or if you touch the screen except the menu, the menu will disappear.(left picture)

Here is a picture of the mode change menu. If you select the channel which you want, then the channel will be changed to that.(right picture)

# 2.4 Factory mode

Factory mode: press ◀ button 2 seconds long.

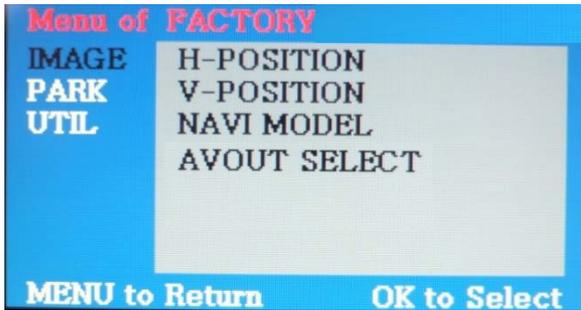


## IMAGE

- H-POSITION : Control over horizontal movement of screen
- V-POSITION : Control over vertical movement of the screen
- NAVI MODEL : DEFAULT, KD900(WVGA), MD7000(WVGA), MYVI(WVGA), GI5000(WVGA), WP9200(WVGA)
- AVOUT SELECT : DEFAULT, AV1, AV2, AV3



## PARK

- PARK ENABLE : Setup of rear view parking guide line
- PARK SETUP : Control over position of rear view parking guide line (Refer to page9.)
- SAFE ENABLE : To select whether to use SAFE function (NOT to allow watch video while driving) or not
- REAR SELECT : Selecting how to detect the rear view camera
  - \* LAMP : Detecting the rear view camera via rear lamp (Installer must connect "Rear-C" cable of the power cable to the rear lamp of the car.)
  - \* CAN : Detecting the rear view camera via CAN signal (Installer must connect "CAN" cable of the power cable to the "CAN" cable of the car.)

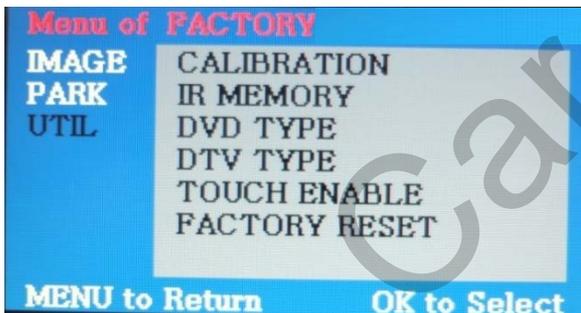

## UTIL


- CALIBRATION : Touch calibration (Refer to page10.)
- IR MEMORY : To register value of buttons on the remote controller (Refer to page11~12.)
- DVD TYPE : Setup for the type of DVD (Refer to page13.)
- DTV TYPE : Setup for the type of DTV (Refer to page13.)
- TOUCH ENABLE : Set up touch enable.
- FACTORY RESET : To reset all the value in factory mode

# 2.5 Rear view parking guide line


Factory mode: press ◀ button 2 seconds long.



① Register the value needed on the "PARK ENABLE" as "ON" in the PARK section as shown left. **(default - ON)**


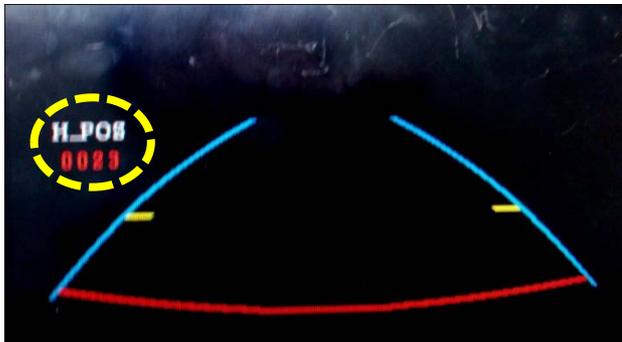


② If you get rear gear after setup, parking guide line will appear on screen as shown left. Now that you push "OK" button, you can see "H-POS" on the left of screen. Then adjust horizontal position of the guide line.

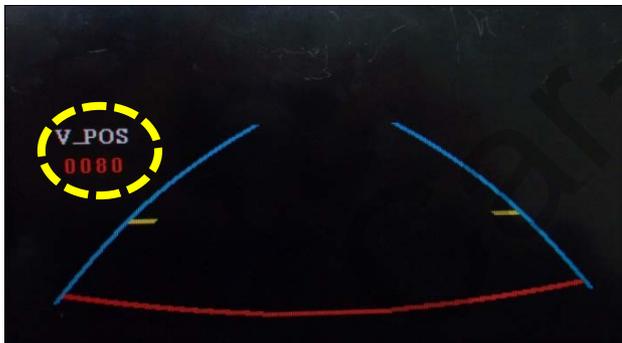

③ After adjusting horizontal position, press "OK" on the remote controller. Then you can see "V-POS" on the left of screen. At that time you can adjust vertical position of the guide line.

## 2.6 Touch calibration

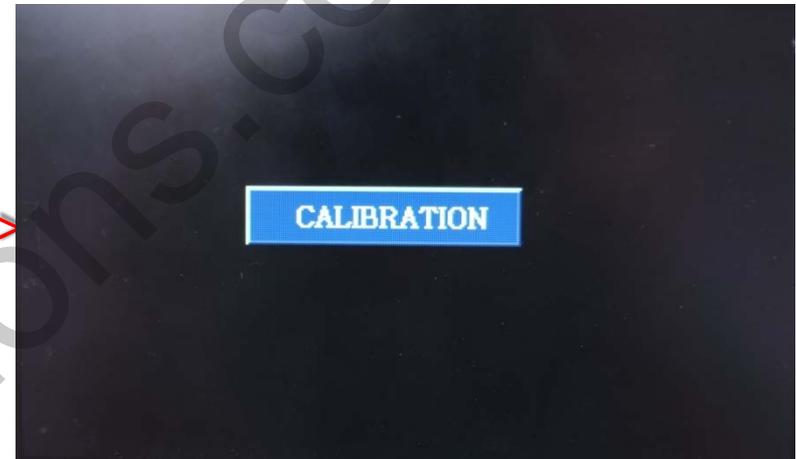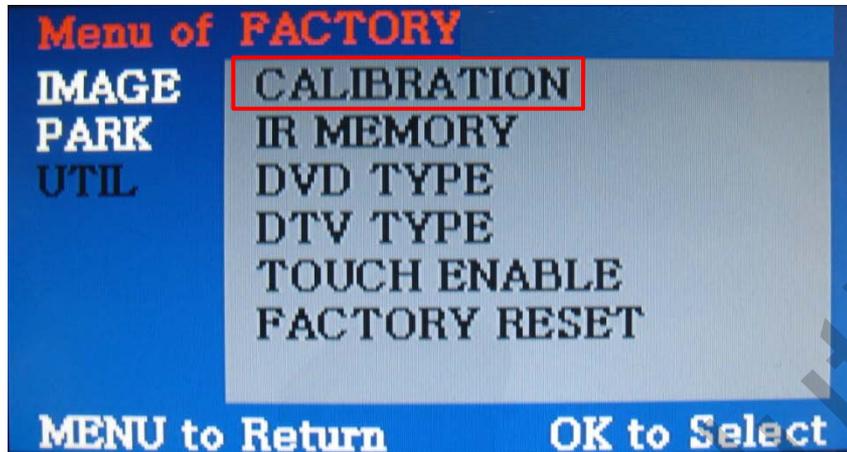

① First of all, press ◀ button on remote controller 2 seconds long. Then you can access to the FACTORY mode.


② Register "YES" when the CALIBRATION option is selected as shown above.

③ Then you can see "touch calibration" on screen **about 2 seconds long** as shown above. After the word "touch calibration" disappear, touch calibration function will implement. (Just touch "+" shape on screen.) If you succeed, you can see "success". If not, you will see "failure".

## 2.7.1 Remote controller button

### Registering value of remote controller buttons?

When you want to control DVD and DTV via touch screen (using OSD menu) with other models besides already registered option-SANYO and NECVOX, you can register value of DVD and DTV' s remote controller which you have. Then you can control DVD and DTV via touch screen.

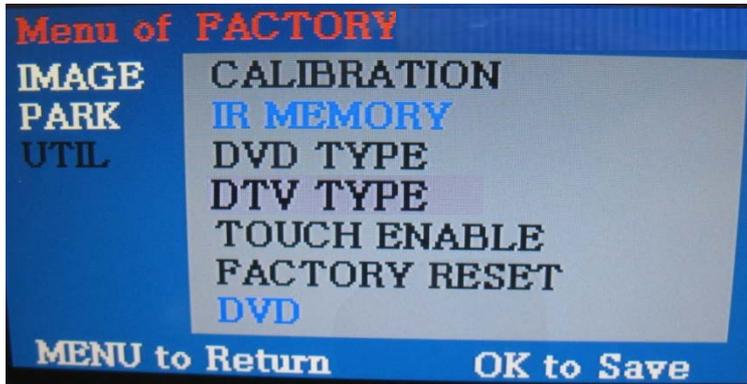

>>>



① First of all, press ◀ button on remote controller 2 seconds long. Then you can access to the FACTORY mode. And go to IR MEMORY, UTIL.

There are two options in IR MEMORY as shown above; DTV and DVD. Then you select AV source that you want to set among them.

② This is a window for register of DVD' s remote controller button value. At the moment just select a menu that you want to save. (Select "DTV in options of IR MEMORY" if you want to save values of DTV' s remote controller. And follow the instruction below.)

Instruction>

- Select "POWER" in OSD menu, then press "OK" on remote controller. (as shown above)
- If the marked area flickers as shown above, press "POWER" button on the remote controller of DVD that you want to use. (continued in the next page)

## 2.7.2 Remote controller button



Instruction> continued...

c. The values that you registered will appear as green text in the marked area on pressing the button. And the values will be saved automatically.





d. Register remain buttons' value in OSD menu like the above-mentioned.

③ After register, select "INPUT" in OSD menu and press "OK". Then you can see confirmation window as shown above. At the moment, if you choose "YES", all the values that you entered will be saved. If you select "NO", the values won't be saved.



(If data is saved, DVD TYPE and DTV TYPE will be changed to "USER" automatically.)

If you see "SUCCESS" on screen, the data is saved clearly and you can control DVD via touch screen. BUT, you MUST change the option in DVD(DTV)/UTIL/FACTORY to "USER". (Refer to page13.)

## 2.8 DVD, DTV model selection

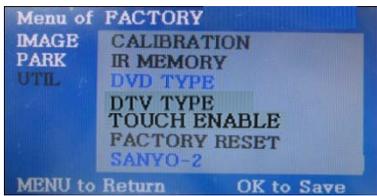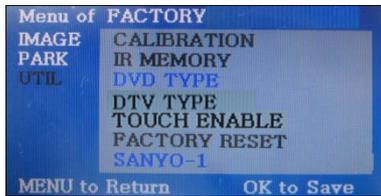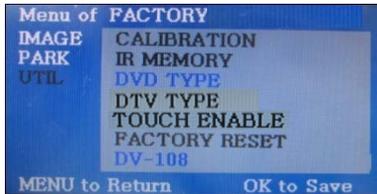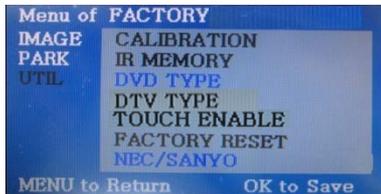

DVD TYPE

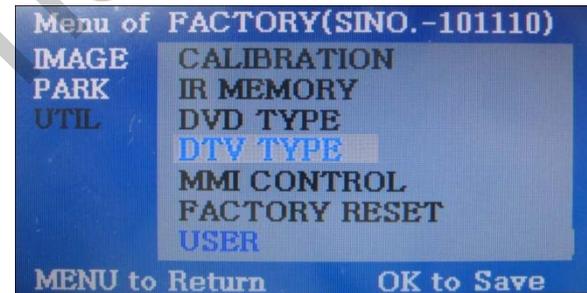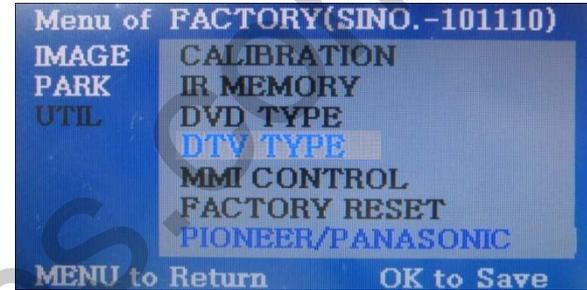

DTV TYPE

### UTIL – DVD/DTV TYPE


If DVD/DTV type that you want to use is not NECVOX or SANYO, you have to register values of the remote controller that you want to use in the "IR MEMORY" section and set the "DVD TYPE"/"DTV TYPE" to "USER". Unless you do this process after saving the data, you can NOT control DVD/DTV via touch screen.

DVD TYPE : NEC/SANYO, DV-108, SANYO-1, SANYO-2, USER

DTV TYPE : PIONEER/PANASONIC, USER, CMMB

✳ If you enter data in "IR MEMORY" section in FACTORY mode, "DVD TYPE"/ "DTV TYPE" will **automatically** be saved to "USER".



# 3.1 Installation diagram

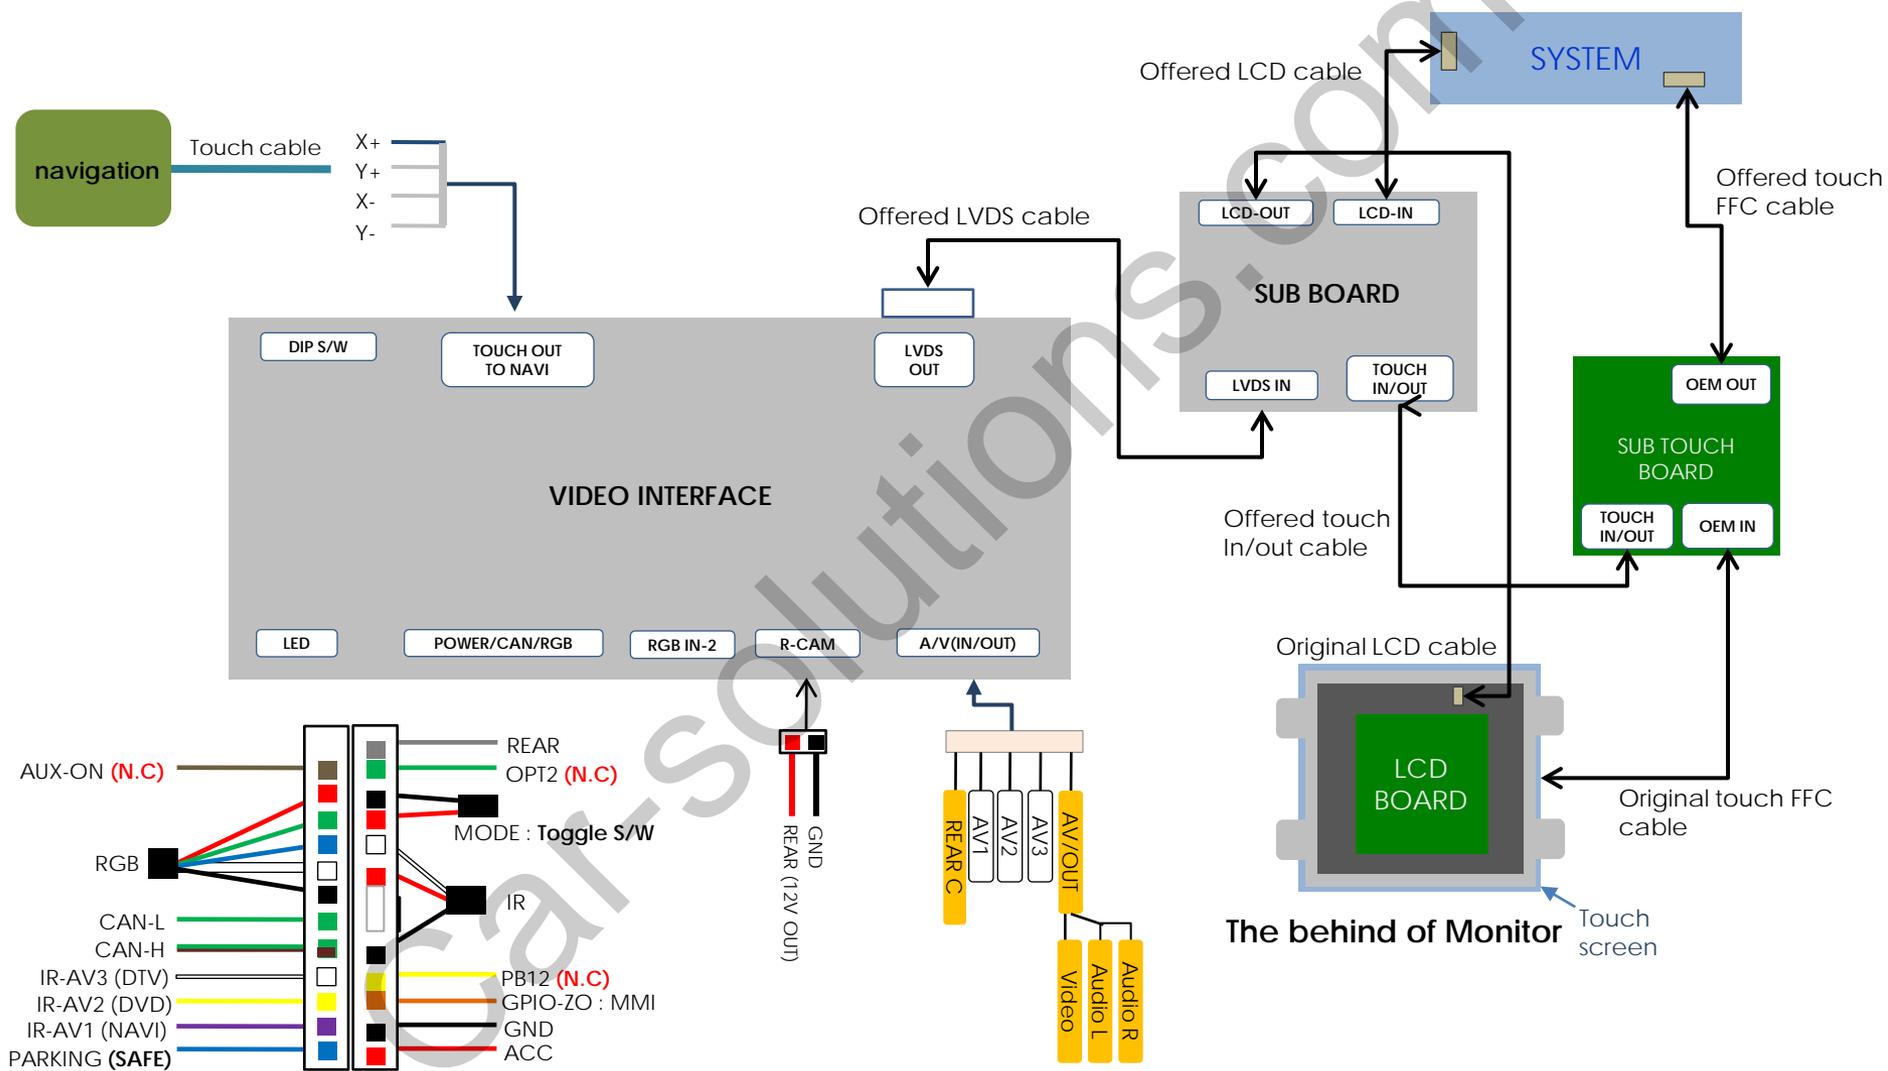

# 3.2 Installation

## 1. Connecting touch cable


### Original Touch cable

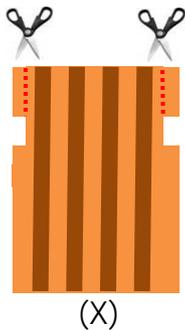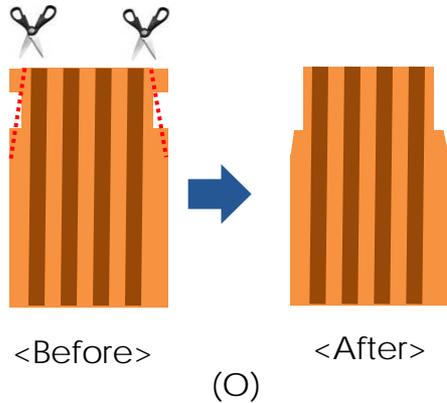

### Caution)

As shown on the left, if cut only upper part of touch cable except for lower part, may be connected wrong with touch sub-board because of a remaining space inside of "OEM-IN" connector

### Original Touch cable

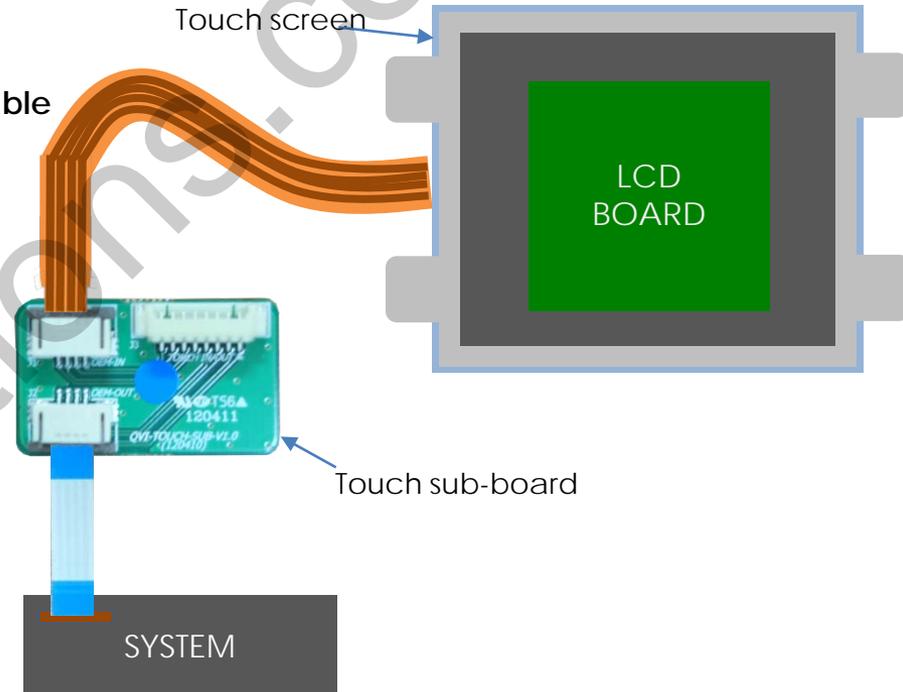


① After separating an original touch cable from system box, To connect with offered touch sub-board, Cut the cable as above.

② Cut original touch cable connect to "OEM-IN" in offered touch sub-board, offered touch FFC cable connect to "OEM-OUT" in touch sub-board and system box.

# 3.2 Installation

## 2. Connecting CAN cable respectively

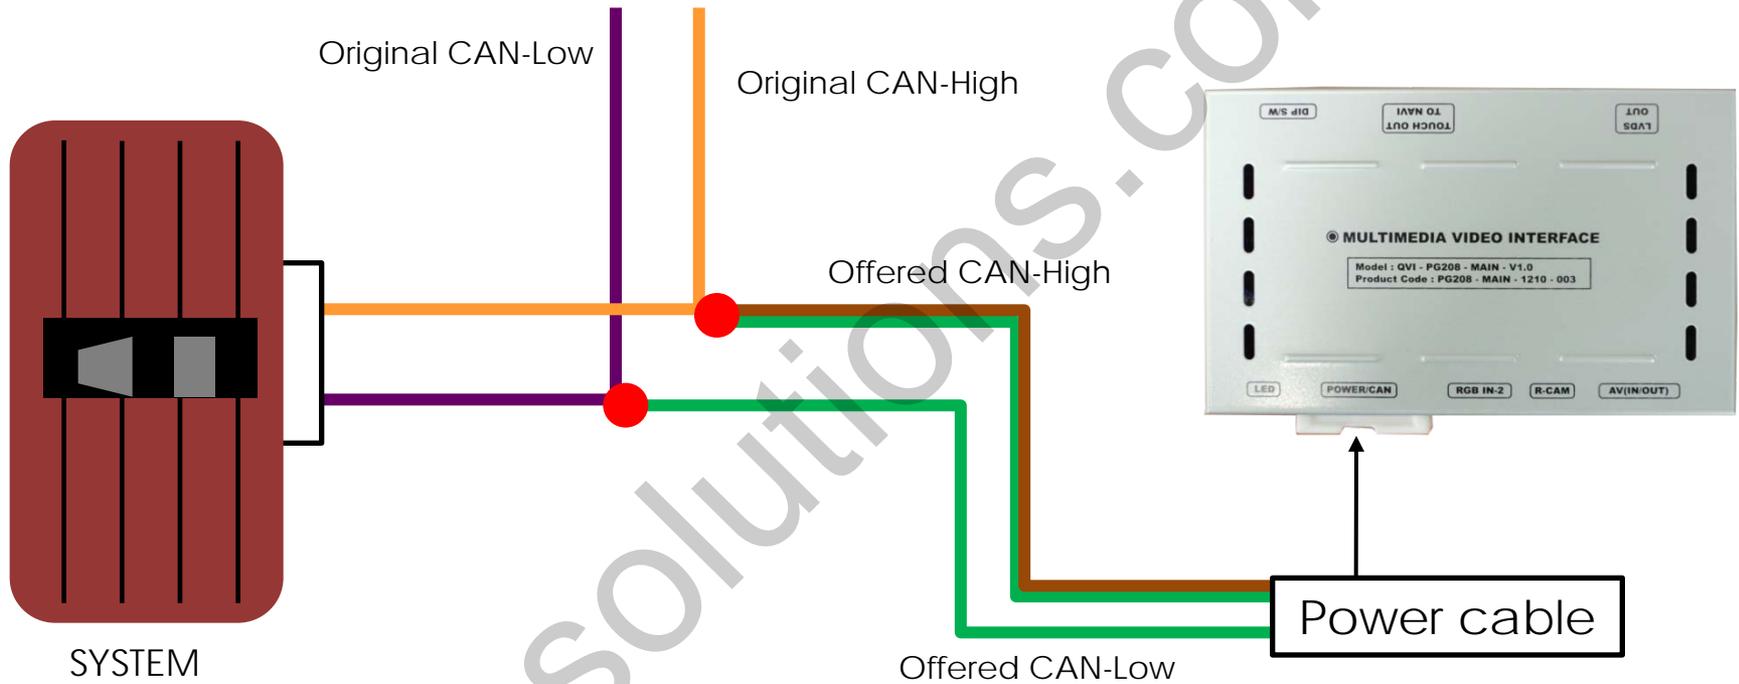

1. Connecting CAN HIGH(Brown+Green) in interface with CAN HIGH(Orange) in the car
2. Connecting CAN LOW(Green) in interface with CAN LOW(Purple) in the car

# 4. Troubleshooting

**Q. I can not switch A/V sources.**

A. Check IR or Ground cable connection. Check LED lamps in the interface, if it is not on, check power cable.

**Q. All I got on the screen is black.**

A. Check second LED lamp of the interface is on, if not, check A/V sources connected are working well.

(Second lamp indicates AV sources connected works well.) Check interface connection has been done well.

**Q. Displayed image color is not proper. (too dim or not suitable color)**

A. Try to select "INITIAL" in OSD menu, if it does not work, inform the manufacturer.)

**Q. Rear camera image does NOT appear.**

A. Set DIP switch #7 in "ON"

**Q. Unwanted A/V mode is displayed. (A/V source switching order : OEM->RGB->AV1->AV2->AV3)**

A. Check DIP Switch Setting.

**Q. OEM image is not displayed.**

A. Check interface's LCD In/Out cable connection. If the status keeps on, inform the manufacturer.

**Q. Screen only displays white like left picture.**

A. Check LCD out cable is connected well, if this status keeps, inform the manufacturer.