www.car-solutions.com

support@car-solutions.com

G wagen





www.car-solutions.com

## CONTENTS



#### **1. DIP SWITCH SETTINGS**



#### **1-1. CLA, A, B-CLASS BEFORE AND AFTER**

	ORIGINAL – 5.8"LCD with 480 LOW RESOLUTION SCREEN	NAVMAX – 8"LCD with 800 HIGH RESOLUTION SCREEN
Screen		
		1. RGB INPUT X 1
		2. AV OUT X 1
Function		3. AV IN X 2
	C 0	4. VIDEO IN X 1
		5. REAR VIEW CAMERA IN X 1
	ww.car-solutions.com	6. DTV, DVD, NAVI, IR CONTROL CALIBRATION support@car-solutions.com

## 2-1. HOW TO USE ORIGINAL CAR BUTTONS FOR CLA, B, A-Class

#### **SCREEN MODE SWITCHING (INPUT SOURCE CHANGE)**

MODEL	MODE	KEY	OPERATION	ном то
	1 CHANGE SCREEN	1	2SEC LONG	SWITCHING THE INPUTS BY PRESSING 2SECONDS (ORIGINAL-NAVI-AV1-AV2-AV3-MIRROR LINK-ORIGINAL)
2	2 DIRECT TO AV1		2SEC LONG	DIRECT TO AV1 INPUT BY PRESSING 2SECONDS
5 OK	3 DIRECT TO AV2	$\triangleright$	2SEC LONG	DIRECT TO AV2 INPUT BY PRESSING 2SECONDS
	4 DIRECT TO AV3		2SEC LONG	DIRECT TO AV3 INPUT BY PRESSING 2SECONDS
	<b>5</b> DIRECT TO WSML MIRROR LINK(OPTIONAL)		2SEC LONG	DIRECT TO MIRROR LINK INPUT BY PRESSING 2SECONDS
MODEL	MODE	KEY	OPERATION	ном то
	DIRECT TO OEM SCREEN		PRESS SHORT	DIRECT TO OEM SCREEN BY PRESSING ONCE
6 7	DIRECT TO MENU SETTING MODE	C	30SEC LONG	DIRECT TO MENU SETTING MODE BY PRESSING 7SECONDS
	8 (MENU) TO THE LEFT	¥	-	MOVING LEFT FROM THE MENU
11 12	9 (MENU) TO THE RIGHT	V	-	MOVING RIGHT FROM THE MENU
	10 CANCLE	-	-	PRESS "C" BUTTON TO EXIT AFTER SELECTING "OK" BUTTON
1, 6 SAME FUNCTION	11 MOVE LEFT ONE LEVEL	←	_	USED FOR MOVING LEFT ONE LEVEL WHILE SETTING NAV DSP or REAR VIEW CAMERA
www.car-solutions.com	12 MOVE RIGHT ONE LEVEL	$\rightarrow$	-	USE FOR MOVING RIGHT ONE LEVEL WHILE SETTING NAV DSP or REAR VIEW CAMERA support@car-solutions.com

#### 🗅 🙆 🗘 🙂 🛱

## **3. COMPONENTS**

#### **COMPONENTS**



#### 4. MAIN CABLE



www.car-solutions.com

## 5. P.A.S. CAN CONNECTION WITH PLUG AND PLAY CONNECTOR



www.car-solutions.com

## **5. P.A.S. CAN CONNECTION WITHOUT CONNECTOR**





www.car-solutions.com

#### 🗅 🕢 🗘 🗘 🖗 🗐 🗘

## 7-1. SCREEN CONFIGURATION AND SETTINGS - NAVI

#### MENU –NAVI





- PRESS 'C' BUTTON FOR 7SECONDS TO ENTER SETTING MENU
- TO USE NAVI, CHOOSE NAVI → NAVI SEL, AND THAN SELECT NO.10, AFTER THAT, PRESS 'C' BUTTON SHORT TO ENTER UPPER MENU AND EXIT.

#### 🔶 🕢 🗘 🗘 🖗 🗐 🗘

#### 7-2. SCREEN CONFIGURATION AND SETTINGS – AV INPUTS

#### MENU – AV System System System Tel Tel Гel AUUIU 1 Don't You Worry Child orry Child orry Child I DETERTION I I MART CD 1 Now 44 CD 1 Now 44 CD 1 Now 44 Track list Media Track list Track list Tel System System System Tel Tel orry Child orry Child orry Child 1111 THE REPORT OF MARINE I I I I I I I I I CD 1 Now 44 CD 1 Now 44 CD 1 Now 44 Track list Track list CD



- PRESS 'C' BUTTON FOR 7SECONDS TO ENTER SETTING MENU
- TO USE AV, CHOOSE AV  $\rightarrow$  AV SEL, AND THAN SELECT NO.10, AFTER THAT, PRESS 'C' BUTTON SHORT TO ENTER UPPER MENU AND EXIT.

#### 🗅 🕢 🗘 🗘 🖗 🗐 🖒

#### 7-3. SCREEN CONFIGURATION AND SETTINGS - SETTINGS

MENU – SET





PRESS 'C' BUTTON FOR 7SECONDS TO ENTER SETTING MENU

• TO USE SET, CHOOSE SET  $\rightarrow$  BT CALL(BLUETOOTH), AND THAN SELECT NO.10,

AFTER THAT, PRESS 'C' BUTTON SHORT TO ENTER UPPER MENU AND EXIT.

BT-CALL(BLUETOOTH) FUNCTION ON/OFF
WHEN THERE IS A BLUETOOTH PHONE CALL FROM NAVI or AV SCREEN, IT SHOWS
THE OEM SCREEN FOR 3SECONDS
support@car-solutions.com

# Image: Im





PRESS 'C' BUTTON FOR 7SECONDS TO ENTER SETTING MENU
TO USE INFO, CHOOSE INFO → MODEL SEL, AND THAN SELECT NO.10,
AFTER THAT, PRESS 'C' BUTTON SHORT TO ENTER UPPER MENU AND EXIT.

#### $\bigcirc \quad ( ) \quad$

#### 7-5. SCREEN CONFIGURATION AND SETTINGS – OK & EXIT

## MENU – EXIT NAVL AV SET INFORMATION AUGUNT Tel System PODN't You Worry Child CD Track list Media Sound



PRESS 'C' BUTTON FOR 7SECONDS TO ENTER SETTING MENU
EXIT FUNCTION IS TO MOVE UPPER MENU

## 8. FRONT CAMERA MODE SETTING

#### >> MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
RAVE     SET     DIFO     EXT       BTCALL     OFF     Tel     System       V-MOVICAN     OFF     orry Child       VIDEO-AD3     OFF     Image: Source of the system       CO     1 Now 44		.× S		SET THE FRONT CAM ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.

MODEL	MODE	KEY	OPERATION	ном то
1	4 DIRECT TO FRONT CAM		PRESS 2SEC LONG	PRESS 2SECONDS LONG FOR FRONT CAMERA
2				
5 OK 3	0			
	)			
4 www.car-solutions.com				support@car-solutions.com

#### 🕩 🗭 🗘 🙂 🛱

#### 9-1. REAR VIEW CAMERA MODE SETTING

51

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
NAVI AV Set INFO EXET     Tel     System       BT-CALL     ON     Drive Exet     Tel     System       V-MOVION     FRON CAN     Drive Child     Drive Child       VIDEO-ADJ     Drive 44     Drive Communication     Drive Child       CD     Track list     Media     Sound		Š		SET THE REARCAM ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.

#### 9-2. REAR VIEW CAMERA MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
PC ON/OFF PC ON/OFF PC POSITION WARNING ON/OFF	$\sim$	Š		SET THE FPG ON/OFF FROM THE SETTING MENU, THAN PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.
FPG ON/OFF FPG POSITION PG POSITION WARNING ON/OFF WARNING ON/OFF	2			SET THE PDC ON/OFF FROM THE SETTING MENU, THAN PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.

#### 9-3. REAR VIEW CAMERA MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
FPG ON/OFF PDC ON/OFF PFG POSITION PDC ON/OFF WARNING ON/OFF		Š		SET THE FPG POSITION ON/OFF AND THAN MOVE LEFT AND SET, EXIT
FPG ON/OFF FPGC ON/OFF FPGC ON/OFF WARNING ON/OFF WARNING ON/OFF	3			SET THE PDCPOSITION ON/OFF AND THAN MOVE LEFT AND SET, EXIT

### 9-4. REAR VIEW CAMERA MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
FPG ON/OFF FPG OS/TION PDG POSITION PDG P		Š		SET THE WARNING ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.
PDC ON/OFF FPG POSITION PDC POSITION MARVING LANGUAGE	3			SET THE WARNING LANGUAGE ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.

#### 🕩 🐼 🗘 🗳 🖗 🖬

## 9-5. REAR VIEW CAMERA MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
FPG POSITION WARNING ON/OFF WARNING ON/OFF FOUR CAMERA FOUR CAMERA	$\sim$	Š		SET THE FOUR CAMERA ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.
PDC. POSITION MARNING ON/OFF MARNING LANGUAGE PERAULT SETTING DEFAULT SETTING	3			SET THE DEFAULT SETTING ON/OFF FROM THE SETTING MENU, THAN SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.

## 9-6. REAR VIEW CAMERA MODE SETTING

MODEL	MODE	KEY	OPERATION	ном то
		С	PRESS 7SEC LONG	PRESS 7SECONDS LONG TO ENTER SETTING MENU
WARNING ON/OFF WARNING LANGUAGE FOUR CAMERA DEVILT SETTING WINFO		Š		AFTER CHECKING THE FW INFO, SELECT N0.10. AFTER THAT PRESS 'C' BUTTON TO MOVE UPPER MENU AND THAN CHOOSE EXIT.
WARNING LANGUAGE FOUR CAMERA DEFAULT SETTING EXIT	3			SELECT EXIT.