

6Q1/6Q2/6Q2L USER MANUAL


CATALOG

1 . Hardware connection :.....	4
2 . Set screen parameters.....	6
3 . Set IP information.....	8
4 . Scan mode configuration.....	9
5 . Edit and sending program.....	10


6Q1/6Q2/6Q2L USER MANUAL

1 . Hardware connection :


LAN mode connection:

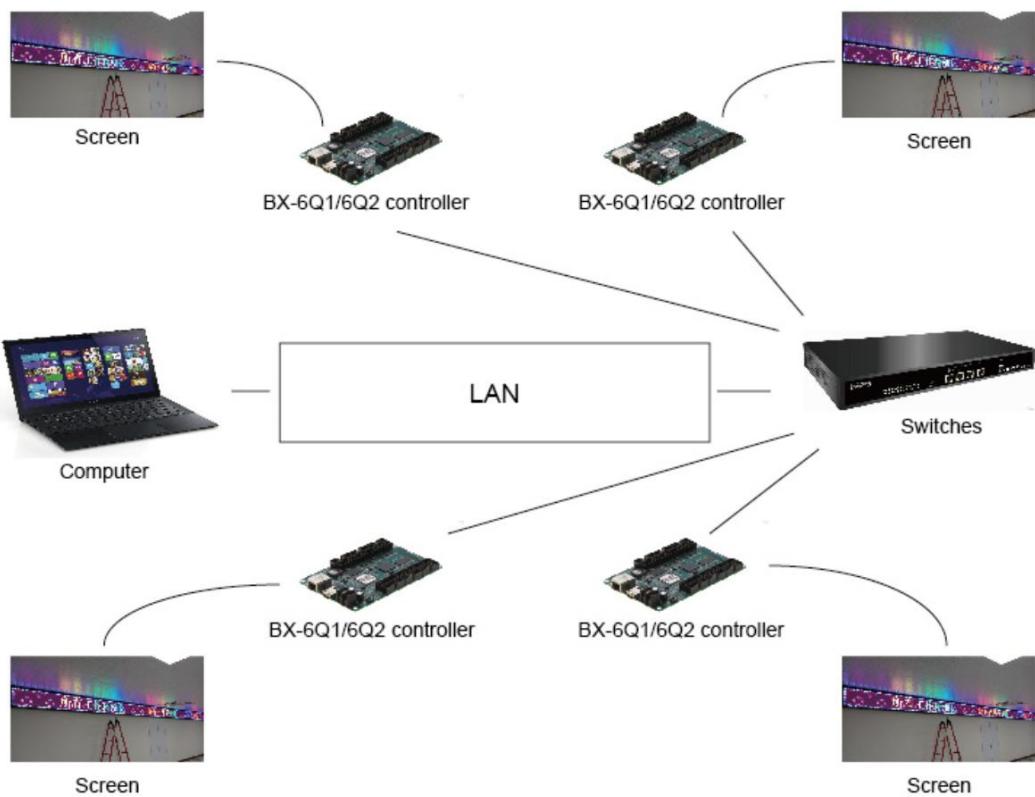

Server mode connection :

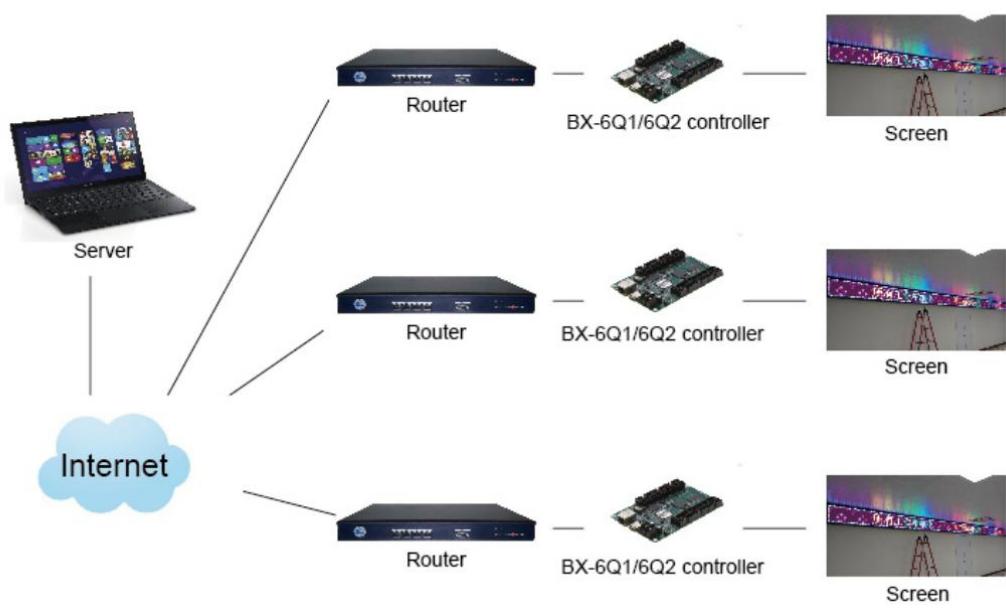


Wireless mode connection :

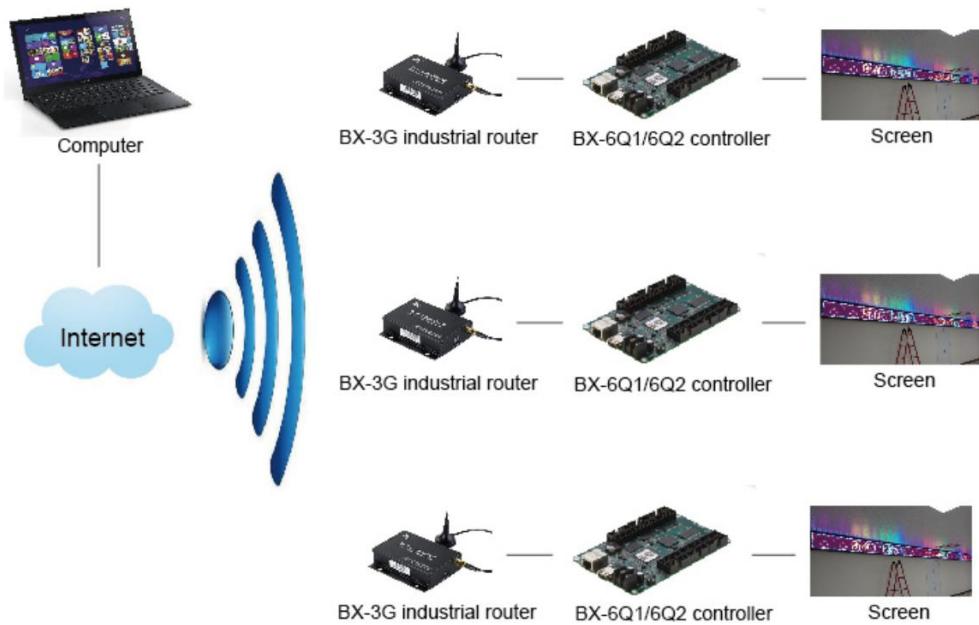

2 . Set screen parameters

Step 1:

Open the Ledshow TW 2016 ,Click “set” then“ set screen parameters” :

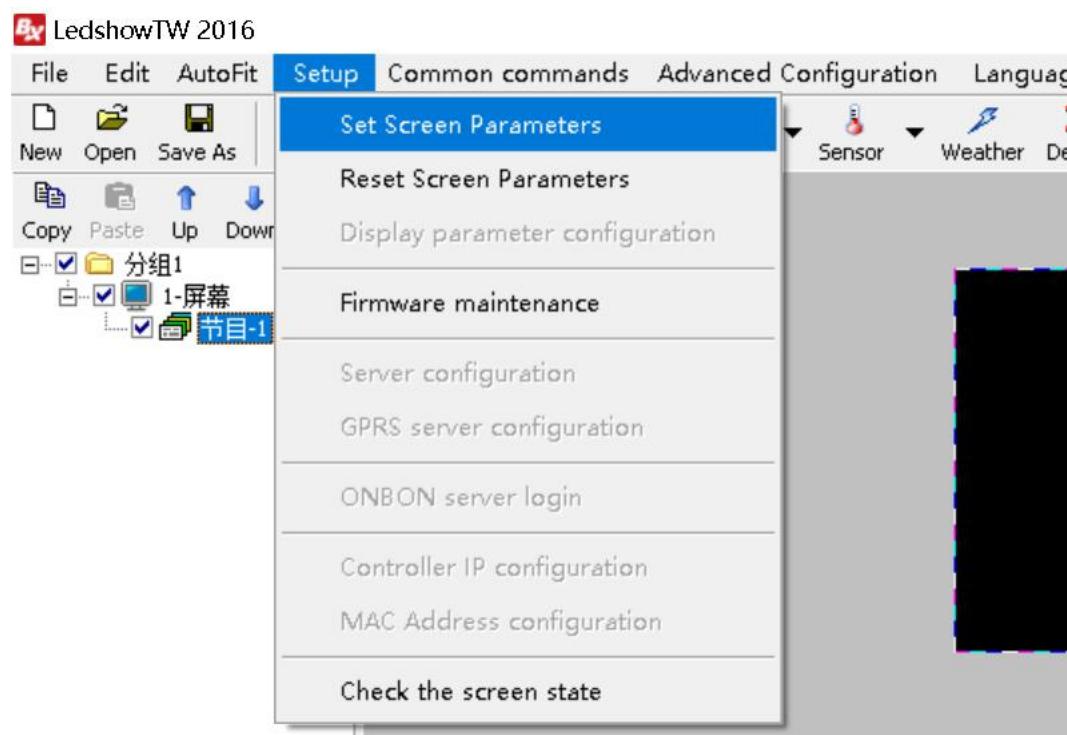


Step 2

Input password" 888" ,then click ok :




Step 3

Automatically read-back the screen parameters then click ok button then add the screen :

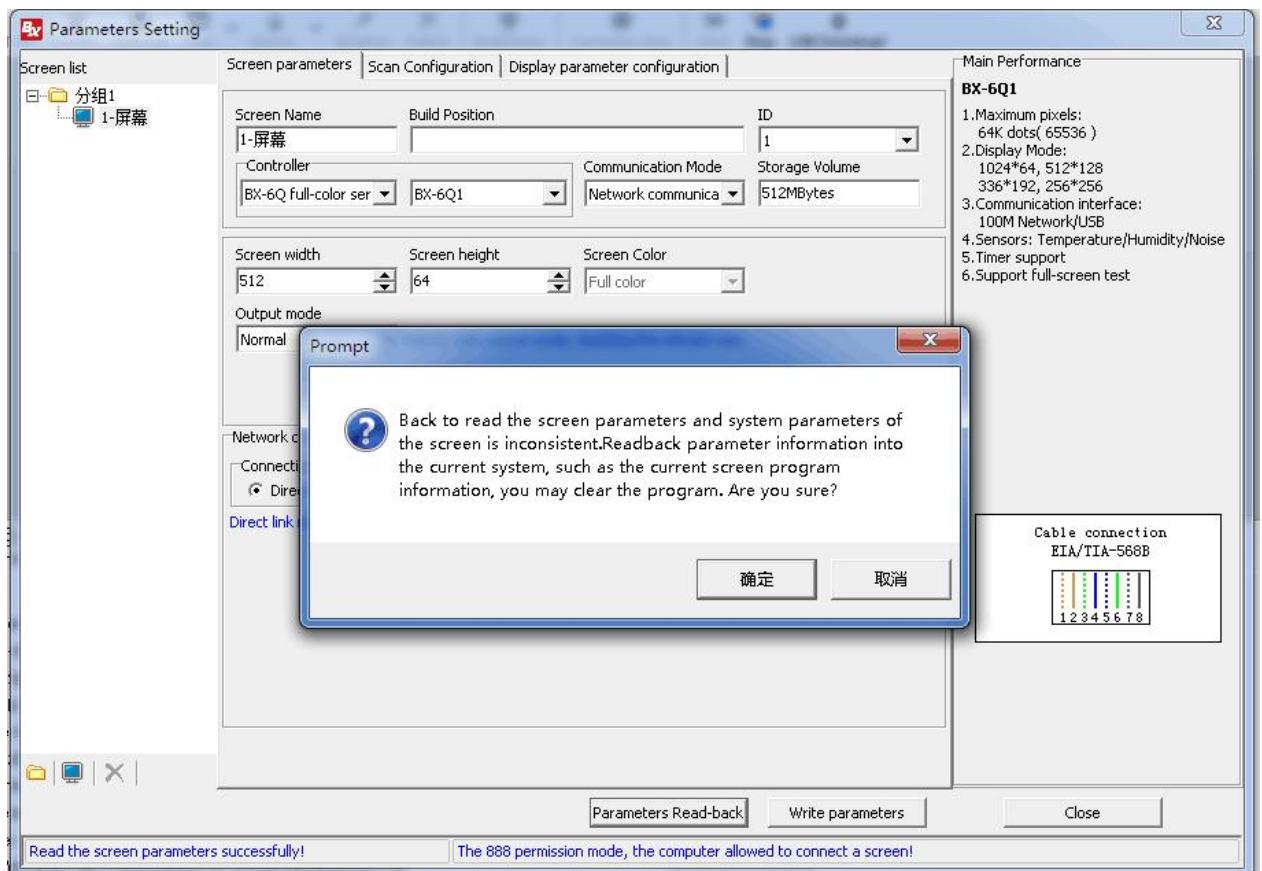

Step 4


Set the screen width and height, click "upload parameters" then prompt that "upload parameters successfully" as below:

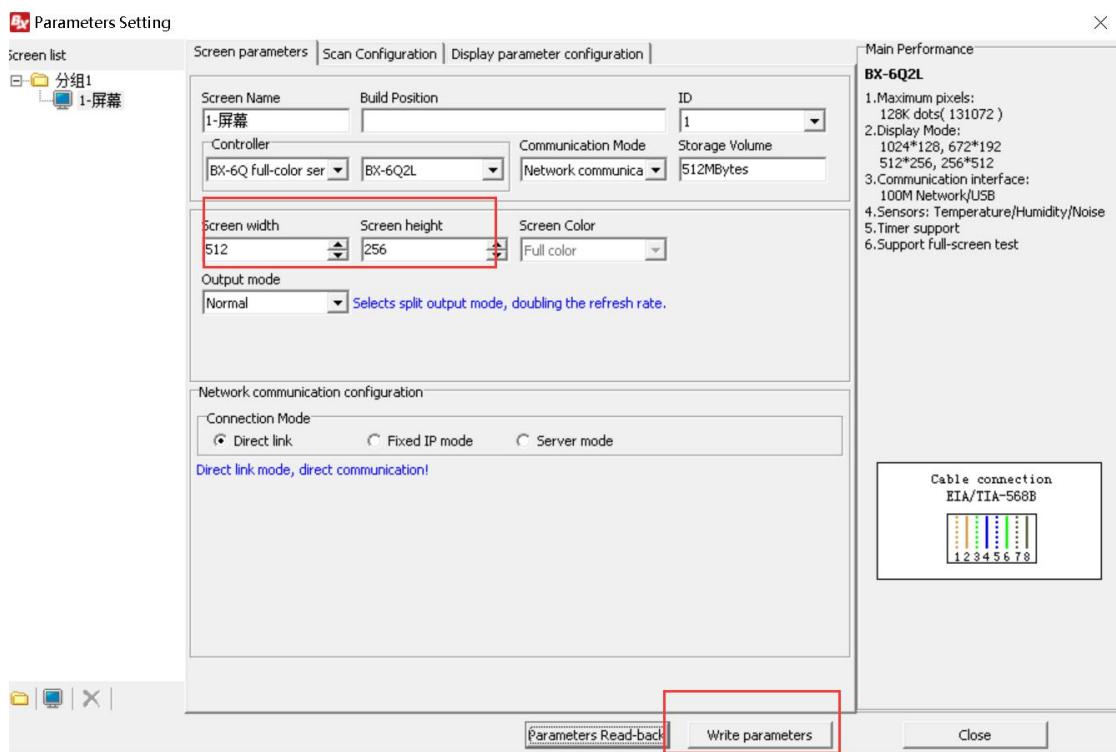

3 . Set IP information

Step 1


Go the set screen parameters, and select the communication mode ,select the communication mode firstly ,then select the network mode, then click the "set controller IP" :

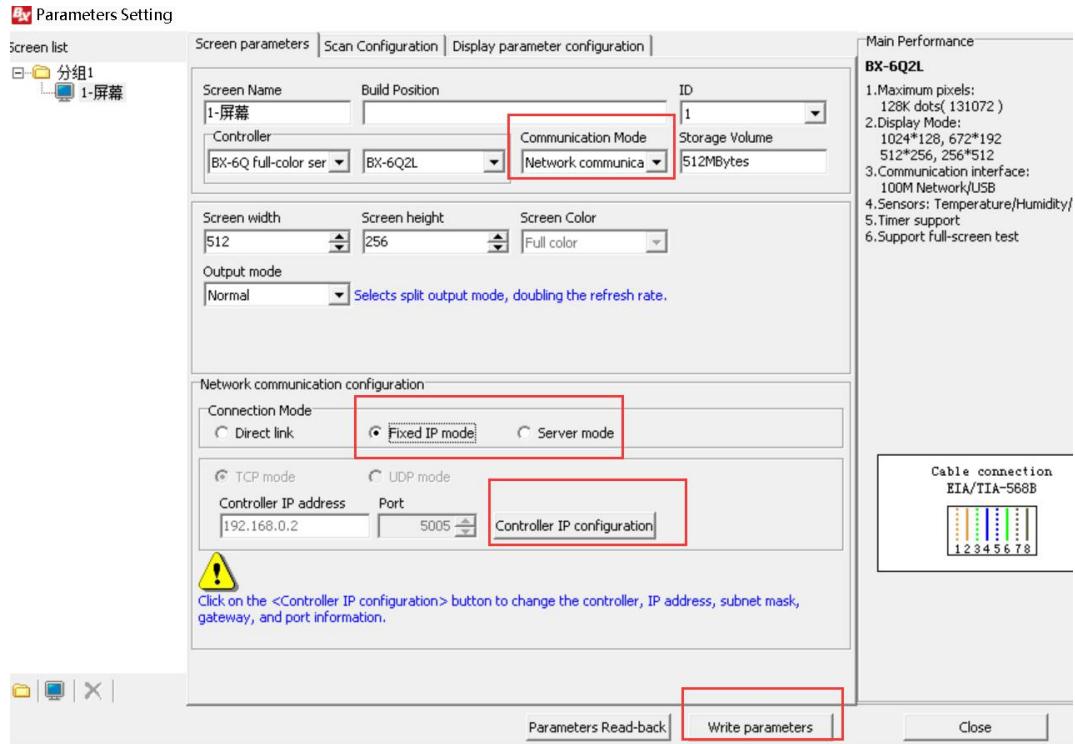

Step 2

Go to the page of controller IP configuration ,write the IP information ,click


"set" button ,then finish the IP setting:

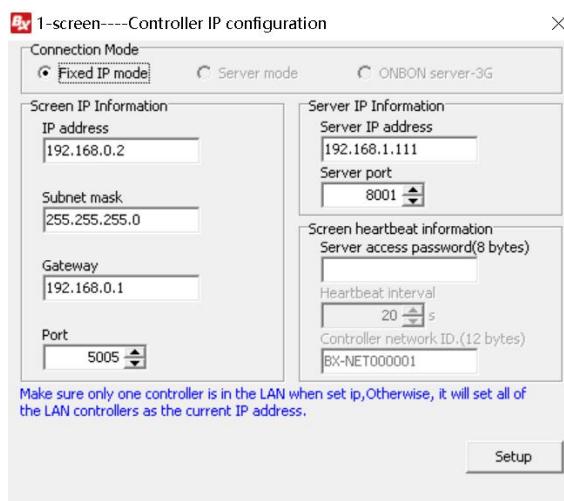

4 . Scan mode configuration

Step 1


Go to set screen screen parameters then click "scan configuration" :

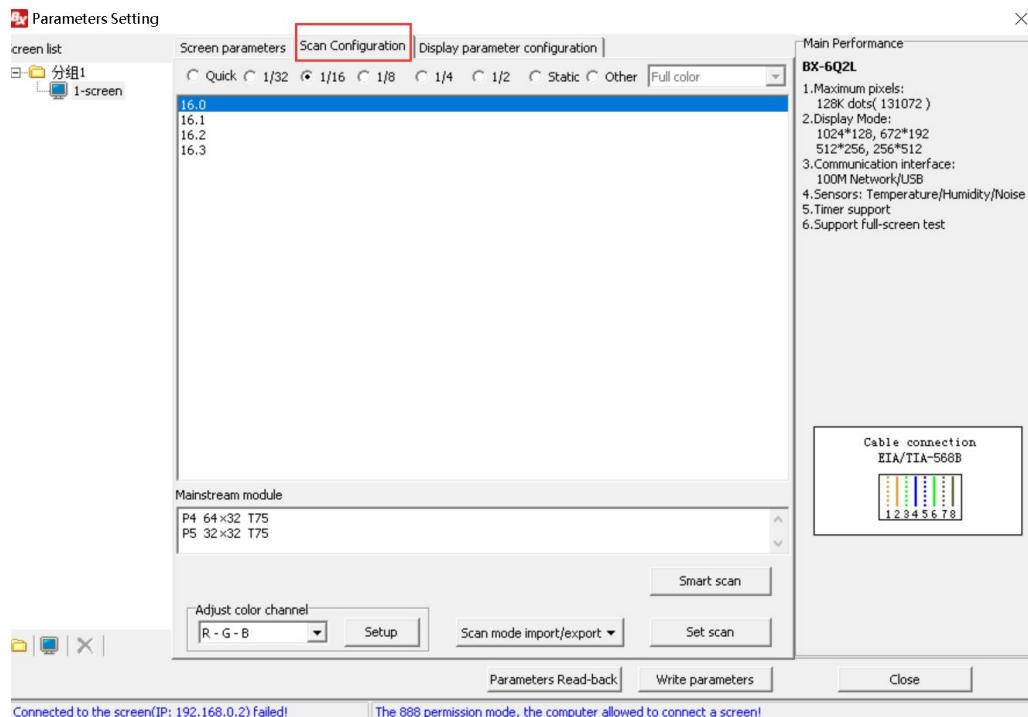

Step 2

Select the controller scan mode according to module scan mode ,then


click" upload the scan configuration" screen will display as follow :

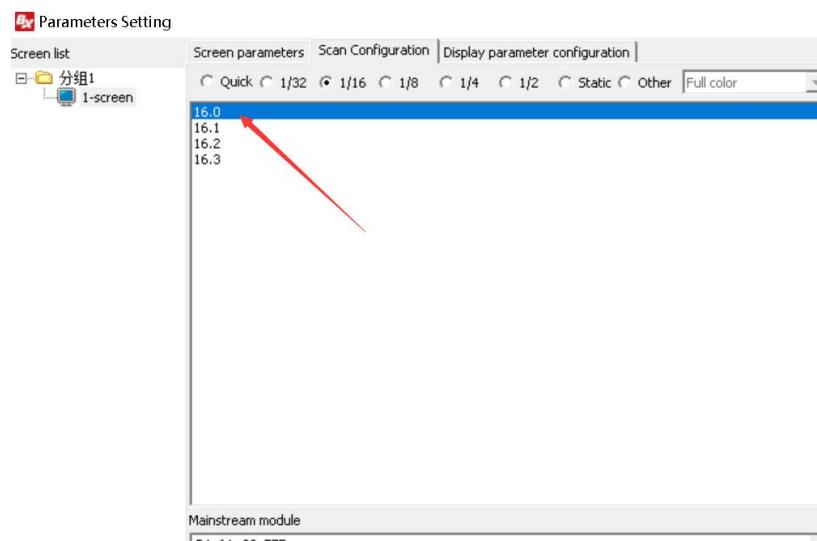

5 . Edit and sending program

Step 1

Select the program as : picture&text ,subtitle, time zone, weather zone, timing zone and lunar calendar as following;

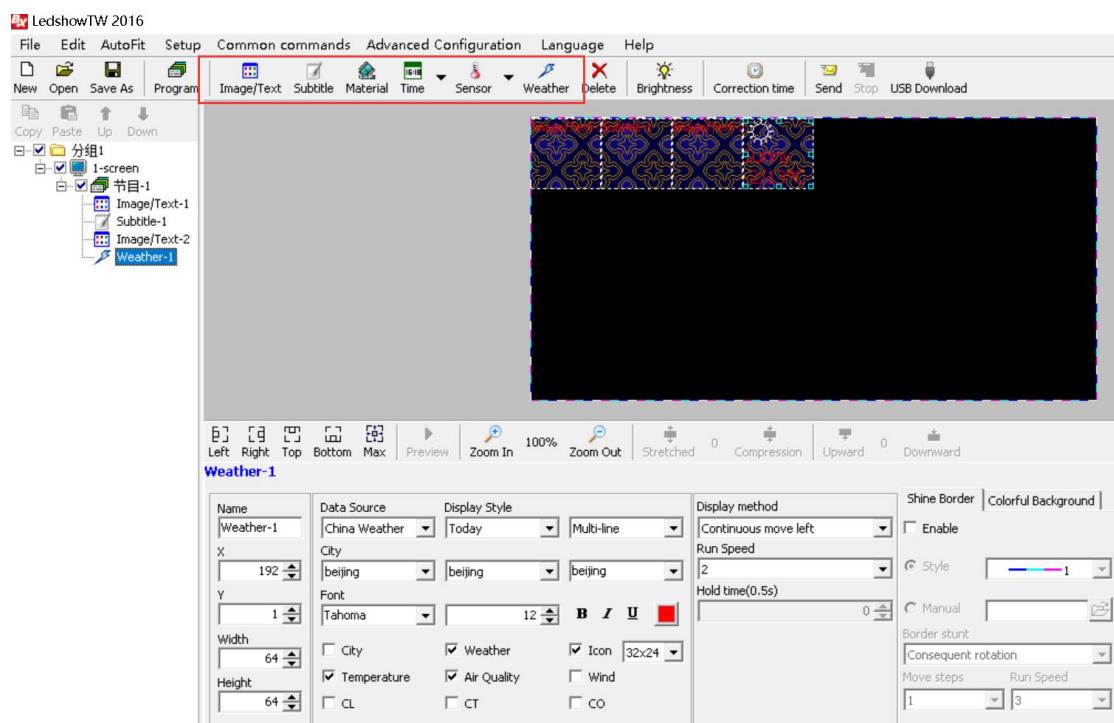

Step 2

Click "sending" then edit the program then sending it to the controller:

