




How to Activate FRP Tool

Step 1. Connect your box/dongle to PC


Step 2. Install the latest version of OctoPlus FRP Tool software

Visit <https://octoplusbox.com/> → Downloads → Software

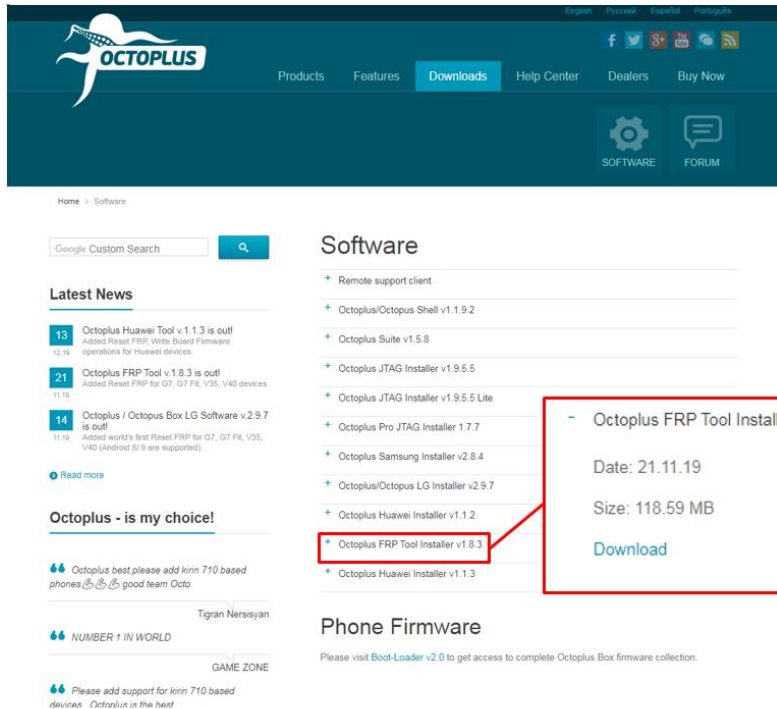

Step 3. Open a folder where OctoPlus FRP Tool software was installed.

Run Updater.exe (located inside the OctoPlus FRP Tool software folder)

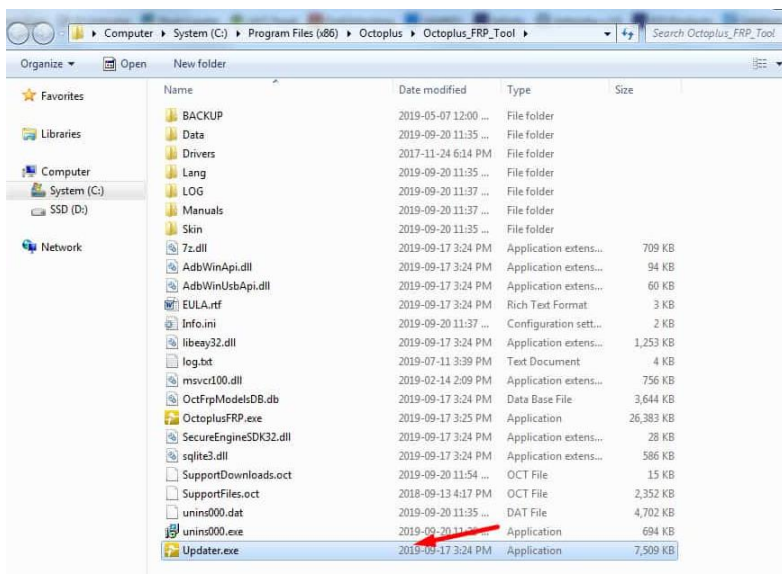



Step 4. Press the Next button



Step 5. Complete the activation process with the activation code you received

Hint! Copy (Ctrl+C) and paste it (Ctrl+V)





Step 6. Press the Finish button to complete the activation process



If you've bought **OctoPlus FRP Tool Dongle**, activation will be completed automatically