



Interface Installation Guide


Wiring diagram:

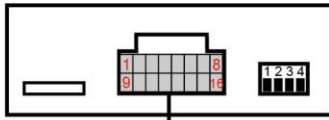

Note:
Please turn ignition OFF before installing the interface.

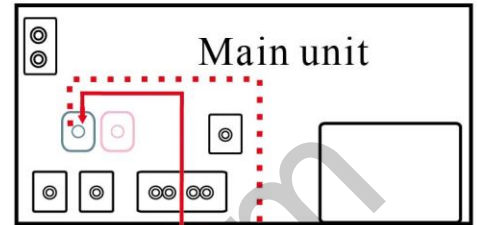

9	Signal GND	Signal GND	1
10	Rearview Video Input	Front-view Video Input	2
11	Camera Power Supply (5V)	Camera Power Supply(5V)	3
12			4
13	IR Signal Output	Reverse Detection Input	5
14	Power GND	Right Turn Signal Output	6
15	CAM Power Supply (12V)	Left Turn Signal Output	7
16	B Output	ACC Output	8

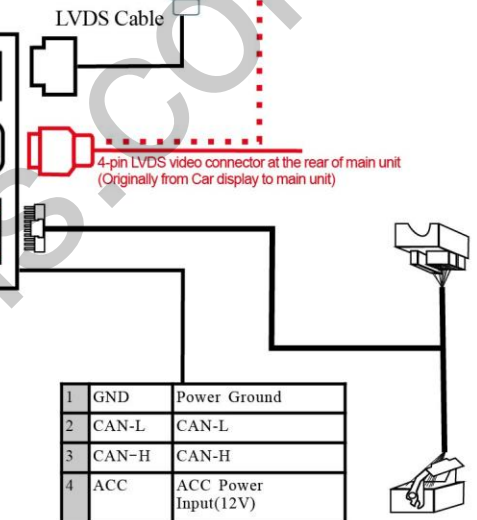

1	GND	Power Ground
2	CAN-L	CAN-L
3	CAN-H	CAN-H
4	ACC	ACC Power Input(12V)


Interface Installation Guide

Notice:

1. Keep flameout & unplug car key before installation
2. Please make sure this interface matches with your car model




1. Take out of Quad_Lock connector (a) at rear of car main unit;

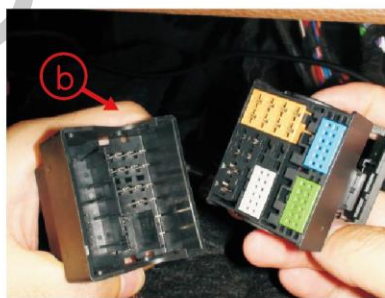

2. Connect it to one end of Interface Quad_Lock connector (b);



3. Connect the other end of interface Quad_Lock connector to original position on main unit.

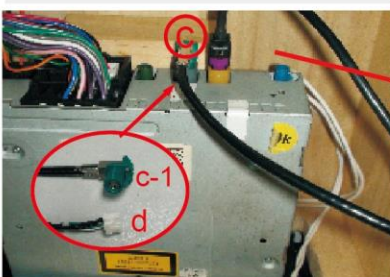

4. Connect interface LVDS c-1 to position on main unit; original LVDS (c) to Interface.

support@car-solutions.com



5. Finish interface harnesses on interface box;



6. Performance of interface. (Auto-Display when shift into Reverse gear)

www.car-solutions.com