



How to Register Hua Dongle Gold (for HDE)

Step 1. HDE Activator



Download and launch the latest version of [HDE ON HUA Activator](#) software.
Indicate your personal data.

Press Pre-Activate HDE on HUA. Then press Exit.


Step 2. HDE software

Download and launch the latest version of [HDE](#) software.

Update the software if needed.

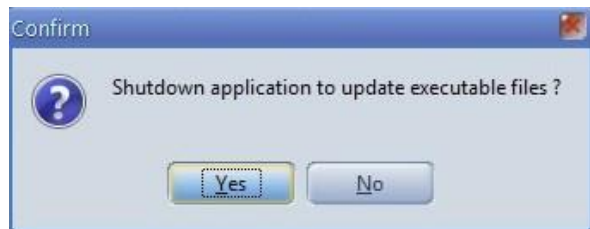
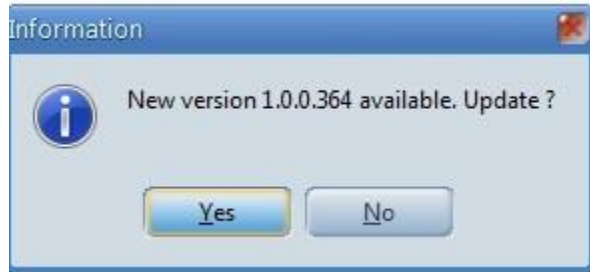


Choose HDE dongle (SN will be different from SN that appears on Hua software).

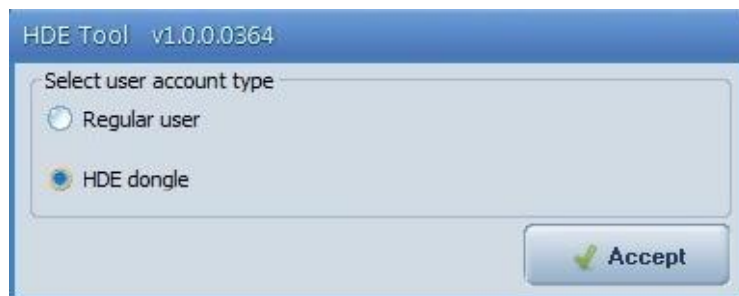




Press Check Account.

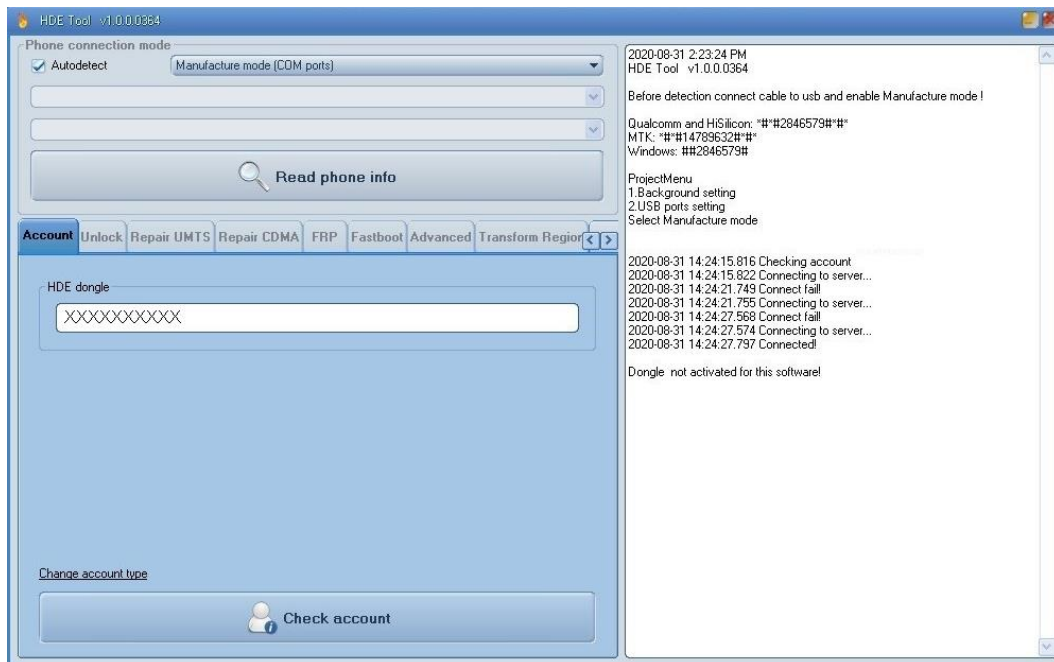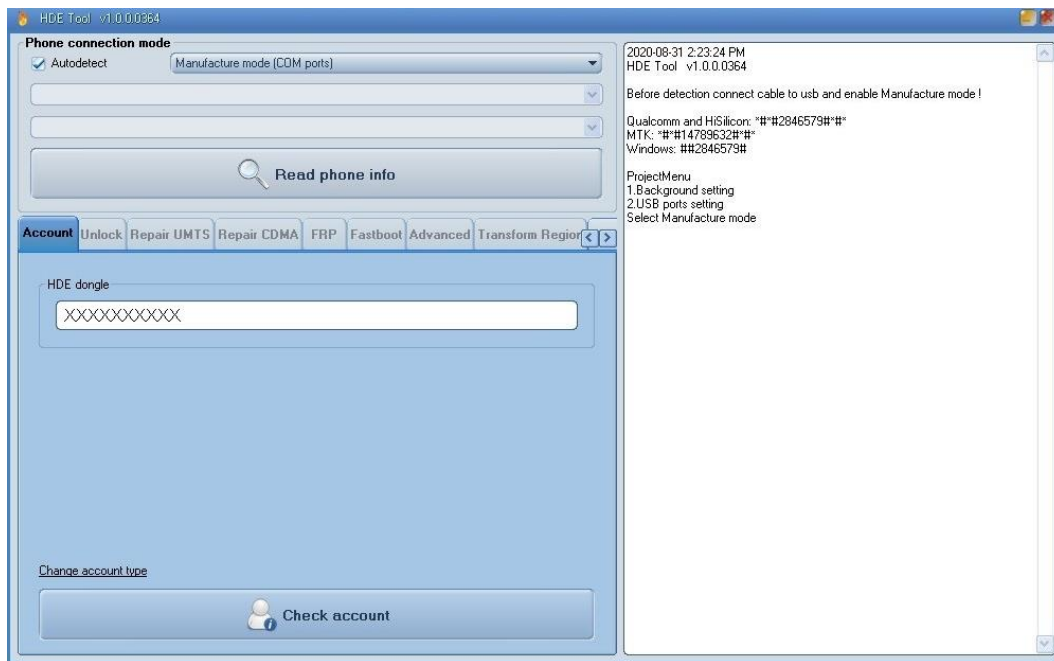



Close the software. Activation process takes up to **72 hours**.

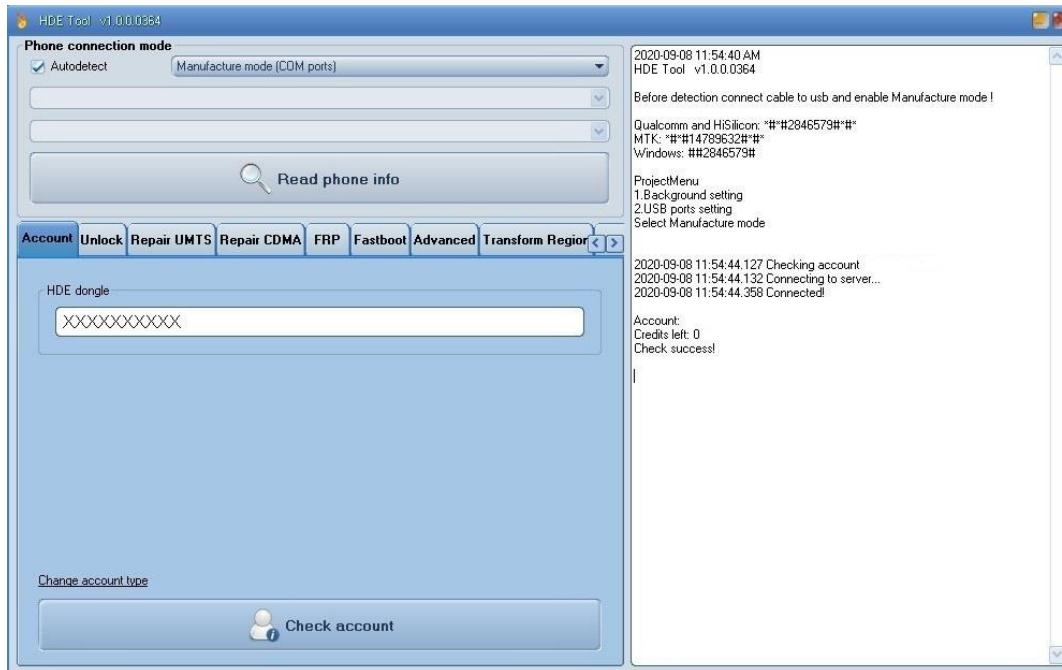

Done!