

## Как зарегистрировать Hua Dongle Gold

- 1. Отключите все антивирусы и файерволы на вашем ПК.
- 2. Установите последнюю версию ПО <u>All-in-One Software</u>.
- 3. Запустите HGenT.exe (Hua Generic Tool).



- 4. Автоматически запустится HUA Dongle Manager.
- 5. Выберите Smartcard Reader и нажмите **Check Dongle**.
- 6. Выберите Register Dongle и нажмите **Do Job**.





7. Укажите ваши данные и закройте ПО.

101 IV IV	• • • • • • • • • • • • • • • • • • •		52	
elect Reader	• Registeration	Form		· Check Don
	- Registration For	rm		
inging Smart-Carg IV	First Name:			
Checking Card is Healt	Til Stridine.			
ecure Connecting to	Last Name:		* **	
esting Card (1/2) H esting Card (2/2) H	-			[
Connecting to Server.	Email:		*	
ending Identify Requ	Mobile no:			
Valting for Answer				
ongle SN: 000100336	Whatsapp:			
our HUA Dongle Not F	1000 mag	Anne me and a		
lease Select <u>Register</u>	<ul> <li>Mandatory Fi</li> </ul>	ield Must Be Filled		
	دار الزاميست *	ير كردن آيتمهاي ستاره		
( III	Diarrow Line T	and the Latter Museline Cali		•
olact Eurotian	** Please Use El	ngiish Letter/Number Only		
elect Function	ستفاده نمایید **	فقط از حروف و اعداد انگلیسی ا	لطفا	
unction Register D	1000			÷
		OK		
Ľ			)	
		-		=
HUA Dongle Manage	r			Σ
HUA Dongle Manage	r			Σ
HUA Dongle Manage lect Reader	r			τ Check Dong
HUA Dongle Manage elect Reader	r	200200		τ Check Dong
HUA Dongle Manage elect Reader	r			τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA	r (			τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363	r			τ Check Dong
HUA Dongle Manage elect Reader Log Naiting for Answer Ok Dongle Type: HUA Dongle SN: 000 100 3363 (our HUA Dongle Not Re Dease Select Register Dr	r gister yet	w and Click on Do job Button		τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Register Do Disconnect from Server	r gister yet ungle from List Belor . <b>OK</b>	w and Click on Do job Button.		τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Rep Please Select <u>Register Do</u> Disconnect from Server	r gister yet <u>angle</u> from List Belor . OK OK	w and Click on Do job Button.		τ Check Dong
HUA Dongle Manage elect Reader Jog Naiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Rep Please Select <u>Register Do</u> Disconnect from Server Sonnecting to Server Sending Register Request	r gister yet <u>ongle</u> from List Belov . OK OK	w and Click on Do job Button.		τ Check Dong
HUA Dongle Manage elect Reader .og Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 (our HUA Dongle Not Re Please Select <u>Register Do</u> Disconnect from Server Connecting to Server Of Sending Register Request Waiting for Answer Of Jicense Received and Sa	r gister yet ongle from List Belor . OK OK VK VK C Ved,	w and Click on Do job Button.		τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Re- Please Select <u>Register Do</u> Disconnect from Server Connecting to Server Sending Register Reques Waiting for Answer Of License Received and Sar Please Close software	r gister yet <u>ongle</u> from List Belor . OK OK UK UK OK C ved. e an Start it agaa	w and Click on Do job Button.		τ Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Res Please Select <u>Register Do</u> Disconnect from Server Of Sending Register Reques Waiting for Answer Of License Received and Sar Please Close software Disconnect from Server	r gister yet <u>ongle</u> from List Belor . OK OK it OK C ved. e an Start it agaa . OK	w and Click on Do job Button. HUA Tool ain!	n OK Button to cl	Check Dong Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Rep Please Select <u>Register Do</u> Disconnect from Server Connecting to Server Of Sending Register Reques Waiting for Answer Of License Received and Sar Please Close software Disconnect from Server	r gister yet <u>ongle</u> from List Belov . OK OK it OK ( ved. e an Start it agaa . OK	w and Click on Do job Button. HUA Tool ain!	n OK Button to cl	<ul> <li>Check Dong</li> <li>Check Dong</li> <li>α</li> <li>α</li></ul>
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Rei Please Select <u>Register</u> Disconnect from Server Disconnect from Server Of Sending Register Reques Waiting for Answer Of License Received and Sar Please Close software Disconnect from Server	r gister yet <u>ongle</u> from List Belor . OK OK et OK ( ved. e an Start it agaa . OK	w and Click on Do job Button. HUA Tool ain!	n OK Button to cl	Check Dong Check Dong χ ose Software!
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Rey Please Select <u>Register Doc</u> Disconnect from Server Connecting to Server Of Sending Register Requess Waiting for Answer Of License Received and Sar Please Close softward Disconnect from Server	r gister yet <u>ongle</u> from List Belor OK OK it OK ( ved, e an Start it agaa . OK	w and Click on Do job Button. HUA Tool in! Click o	n OK Button to ch	Check Dong
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Ree Please Select <u>Register Doc</u> Disconnect from Server Connecting to Server Of Sending Register Reques Waiting for Answer Of License Received and Sar Please Close softward Disconnect from Server	r gister yet ongle from List Belov . OK OK ot ved. e an Start it agaa . OK	w and Click on Do job Button. HUA Tool	n OK Button to cl	Check Dong
HUA Dongle Manage elect Reader Log Naiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 four HUA Dongle Not Rep Please Select <u>Register Do</u> Disconnect from Server Sending Register Reques Naiting for Answer OF License Received and Sar Please Close software Disconnect from Server	r gister yet ongle from List Belor . OK OK it OK c ved. e an Start it agaa . OK	w and Click on Do job Button.	n OK Button to cl	Check Dong Check Dong Sose Software! OK
HUA Dongle Manage elect Reader Log Waiting for Answer Ok Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Ree Please Select <u>Register Do</u> Disconnect from Server Of Sending Register Reques Waiting for Answer Of Sending Register Reques Waiting for Answer Of License Received and Sa Please Close softward Disconnect from Server	r gister yet ongle from List Belor . OK OK ved. e an Start it agaa . OK	w and Click on Do job Button. HUA Tool Click o	n OK Button to cl	Check Dong Check Dong Sose Software!   OK
HUA Dongle Manage elect Reader Log Waiting for Answer OK Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Rep Please Select <u>Register Do</u> Disconnect from Server Connecting to Server Sending Register Reques Waiting for Answer Of License Received and Sar Please Close softward Disconnect from Server	r gister yet ongle from List Belor . OK OK ved. e an Start it agaa . OK	w and Click on Do job Button.	n OK Button to cl	Check Dong Check Dong ose Software! OK



## 8. Запустите ПО снова.

HUA Gener	ic Tool ver3.2.7		
Tools Online	e Support		
Port / BaudRa Port	Platform Setting     Platform Setting SP MT6572,MT6583-2-9 NAND,EMMC	•	
Mediatek Qualcomm Spreadtrum ALLWINNER Exynos Marvell Android	Unlock / IMEI / Service Qualcomm Android LG Samsung Xiaomi Asus Huawei ZTE         Network Lock         Method         Direct Unlock         Generic Unlock         Skip Reset Security         Backup Security         Repair		
.og Window —			
4			*

Теперь ваш Hua Dongle успешно зарегистрирован!