

## Як зареєструвати Hua Dongle Gold

- 1. Відключіть усі антивіруси і файєрволи на вашому ПК.
- 2. Встановіть останню версію ПЗ <u>All-in-One Software</u>.
- 3. Запустіть **HGenT.exe** (Hua Generic Tool).



- 4. Автоматично запуститься HUA Dongle Manager.
- 5. Оберіть Smartcard Reader і натисніть **Check Dongle**.
- 6. Оберіть Register Dongle і натисніть **Do Job**.





## 7. Вкажіть ваші дані і закрийте ПЗ.

alact Baadar	0 0 0	_	57	
elect Readel	Registeration	Form		<ul> <li>Check Dong</li> </ul>
	- Registration Fo	rm		
Log				
Checking Card is Healt	First Name:		* **	-
Secure Connecting to (	the state of the s			
Testing Card (1/2) F	Last Name:		* **	
Testing Card (2/2) F	Empile			
Connecting to Server	Citidii:			
Sending Identify Requi	Mobile no:			
Waiting for Answer	Problic no.			E
Dongle Type: HUA	Whatsapp:			
Your HUA Donale Not R				
Please Select Register	* Mandatory E	ield Must Re Filled		
Disconnect from Serve	- Manuatory P	iela Masche Fillea		1022
	دار الزاميست 🍍	ير كردن آيتمهاي ستاره ا		-
۲ III				•
	** Please Use E	nglish Letter/Number Only		
Select Function —		فقط از جروف و اعداد انگلیسی ای	léhi	
		حقيد او مروب و است. استياسي		
Register D				· · · · · · · · · · · · · · · · · · ·
		OK		
	-			
-			6	
				53
HUA Dongle Manage	er			
elect Reader				* Check Dongle
44 A				
Log				
Waiting for Answer O	K			
walung for Answer Of				
Dongle Type: HUA				
Dongle Type: HUA Dongle SN: 0001003363	and the second second			
Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re	egister yet			
Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select Register D	egister yet l <u>ongle</u> from List Belo	w and Click on Do job Button.		
Valuing for Answer Of Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server.	egister yet ongle from List Belo OK	w and Click on Do job Button.		
Waing for Answer O Dongle Type: HUA Dongle SN: 000 1003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Connecting to Server Sending Register Perme	egister yet ongle from List Belo OK OK St OK	w and Click on Do job Button.		×
Waiting for Answer O Dongle Type: HUA Dongle SN: 000 1003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer.	egister yet <u>iongle</u> from List Belo OK OK st OK K	w and Click on Do job Button.		<u>×</u>
Waiting for Answer Of Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Connecting to Server Sending Register Reque: Waiting for Answer Of License Received and Sa	egister yet <u>ionqle</u> from List Belo OK OK st OK K Neved.	w and Click on Do job Button.		<u>x</u>
Waiting for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Connecting to Server Sending Register Reque: Waiting for Answer O License Received and Sa Please Close softwar	egister yet <u>ionqle</u> from List Belo OK OK st OK K wed. re an Start it aga	w and Click on Do job Button.		<u>×</u>
Waiting for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet <u>onqle</u> from List Belo OK OK st OK K aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Waiting for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet <u>ionqle</u> from List Belo OK OK st OK K Aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuation for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet oongle from List Belo OK OK st OK K aved, re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuary for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet ongle from List Belo OK OK st OK K aved. OK OK	ain!	n OK Button to clo	se Software!
Valuation for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet longle from List Belo OK OK stOK K aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuation for Answerth of Con- Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Requee Waiting for Answer O License Received and Server. Values Close softwar Disconnect from Server.	egister yet iongle from List Belo OK OK st OK K aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuation for Answer Of Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Server. Values Close softwar Disconnect from Server.	egister yet oongle from List Belo OK OK st OK K aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuation for Answerth of Con- Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Requee Waiting for Answer O License Received and Server. Values Close softwar Disconnect from Server.	egister yet iongle from List Belo OK OK st OK K aved. re an Start it aga OK	ain!	n OK Button to clo	se Software!
Valuing for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Connecting to Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server. III Select Function Function Register Do	egister yet iongle from List Belo OK OK st OK K aved. OK ongle	ain!	n OK Button to clo	se Software!
Valuation for Answer O Dongle Type: HUA Dongle SN: 000 1003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Connecting to Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server. III Select Function Function Register Do	egister yet iongle from List Belo OK OK st OK K aved. OK ongle	ain!	n OK Button to clo	se Software!
Valuing for Answer O Dongle Type: HUA Dongle SN: 0001003363 Your HUA Dongle Not Re Please Select <u>Register D</u> Disconnect from Server Sending Register Reque: Waiting for Answer O License Received and Sa <b>Please Close softwar</b> Disconnect from Server.	egister yet onale from List Belo OK OK st OK K aved, re an Start it aga OK	ain!	n OK Button to clo	se Software!



8. Запустіть ПЗ знову.



Тепер ваш Hua Dongle успішно зареєстрований!