

# **DIP Switch Settings**



핀 번호	ON(▼)	OFF(▲)		
1	HDMI Mode	Skip HDMI Mode		
2	Navigation Mode	Skip Navigation Mode		
3	External Rear View Camera	Original Rear View Mode (OEM CAMERA)		
4	External Front View Camera(AV1 Mode)	Skip External Front View Camera(AV1 Mode)		
5	AV2(DVBT) Mode	Skip AV2(DVBT) Mode		
6	Not Used (default OFF)			
7 8 9 10	Select car model			

**Head Unit Main Connector** 

No.7	No.8	No.9	No.10	Car Model
OFF: ▲	OFF: ▲	OFF: ▲	OFF: ▲	2019 ~ ES300h 2019 ~ NX300h
OFF: ▲	OFF: ▲	OFF: ▲	ON:▼	2019~ UX 7inch

12V Out (ACC)


for GPS Device Power

**Activation by** original buttons



Buttons	Function	Operation	Remarks
1	Changing	Press the button 2 seconds long.	Order :
MAP	Modes		OEM → HDMI → NAVI → NAVI
2	Changing	Press the button 2 seconds long.	Order :
BACK	Modes		OEM,HDMI ,NAVI → NAVI
3 ♠ Button	Changing screen ratio	Press the button 2 seconds long.	Fit Size & Full Size


Mode Switch

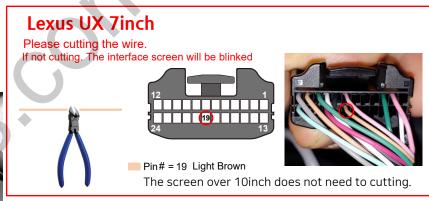

# **Monitor Main Connector**

Please cutting the wire. for installation Around view camera

 If not cuting. The interface can not change screen to "External rear camera.AV1"





# **OEM Screen**



 


\* The OEM wire color may different, Please, checking with PIN number


※ The OEM wire color may different, Please, checking with PIN number



2019 NX300h 2019 ES300h support@car-solutions.com



(Gray) ACC 6 = # Pin

 



**\* Important** 

Look closely at the cable for correct IN / OUT

Remove the **OEM GVIF** cable and Connect Provied GVIF cable

### **OEM Head Unit**

