


#	CONNECTION DIAGRAM ELEMENTS DESCRIPTION
1	OEM head unit, rear view *
2	OEM navigation unit, rear view **
3	Front view camera (not included in the package)
4	Rear view camera (not included in the package), OEM or additionally installed with the controller
5	Rear / Front view camera controller – RFCC
6	Front view camera connection input – F-CAM
7	Rear view camera connection input – R-CAM
8	Front view camera power output – 12V OUT
9	Rear view camera power output – 6V OUT
10, 11, 12	Adapter connectors for Plug&Play connection to OEM wiring
13, 14, 15	Adapter sockets for Plug&Play connection to OEM wiring

* A camera controller is connected solely behind the head unit.


** Depending on the car configuration, there may be no OEM nav unit.

CONTROLLER AUTOMATIC MODE

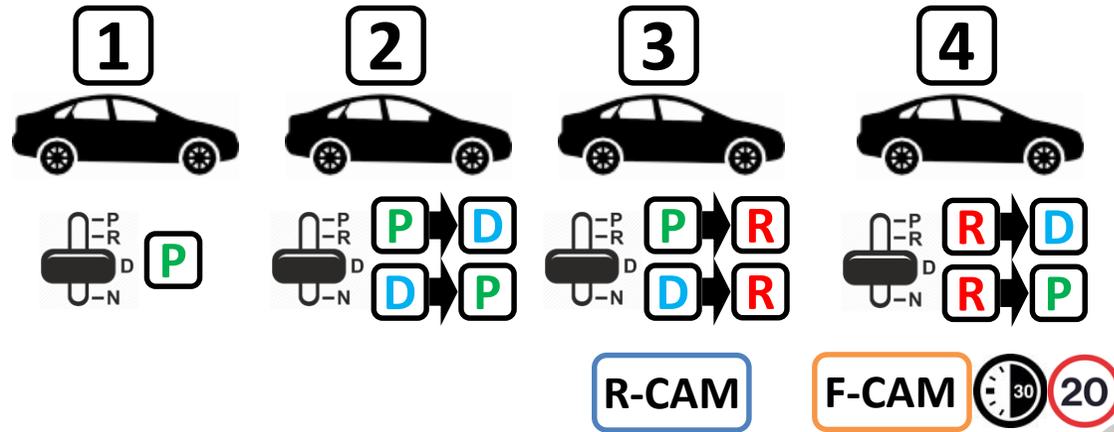


#	CONTROLLER MODE DESCRIPTION
1	STANDBY MODE
2	STANDBY MODE
3	PRIORITY (<i>OEM/FUNCTION</i>) ACTIVATION OF A REAR VIEW CAMERA (<i>OEM / AFTERMARKET REAR VIEW CAMERA ACTIVATION</i>)
4	FRONT CAMERA ACTIVATION AFTER 20-40 SEC OR UNTIL THE CAR SPEED EXCEEDS 20 KM/H

CONTROLLER MIXED MODE

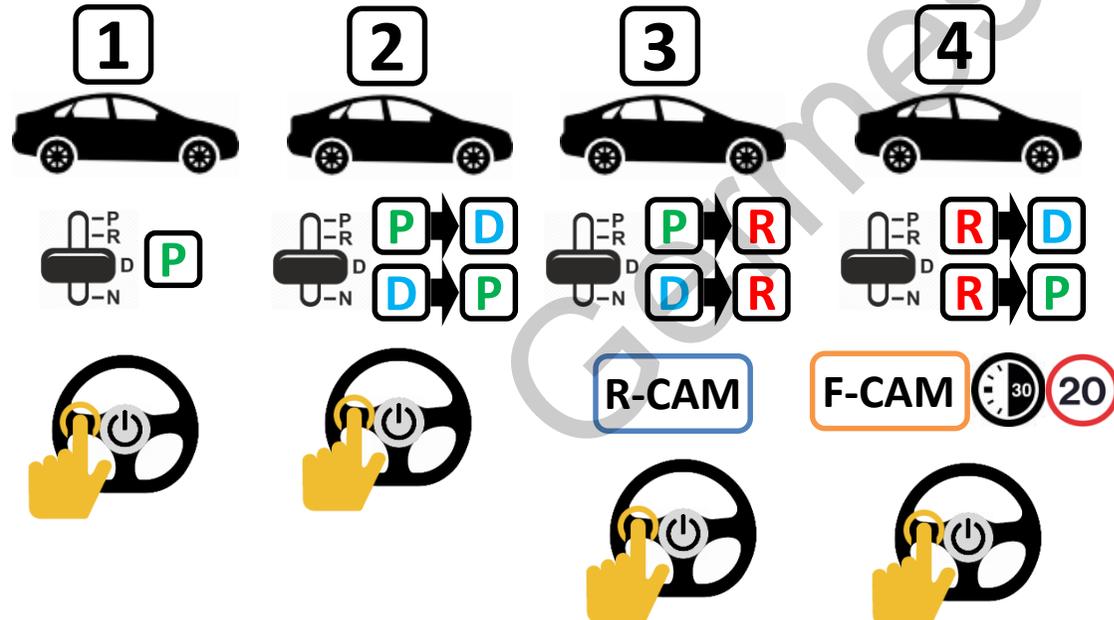

#	CONTROLLER MODE DESCRIPTION
1	<ul style="list-style-type: none"> Standby mode Manual activation mode of the front view or rear view camera with the off timer after 20-40 s Forced activation mode with the front view or rear view camera image retention
2	<ul style="list-style-type: none"> Standby mode Manual activation mode of the front view or rear view camera with the off timer after 20-40 s Forced activation mode with the front view or rear view camera image retention
3	<ul style="list-style-type: none"> Priority rear view camera activation Manual activation mode of the front view camera at 0 km/h
4	<ul style="list-style-type: none"> Front view camera activation for 20-40 sec or until the car speed exceeds 20 km/h Manual activation of the front view or rear view camera with the off timer after 20-40 s Forced activation mode with the front view or rear view camera image retention

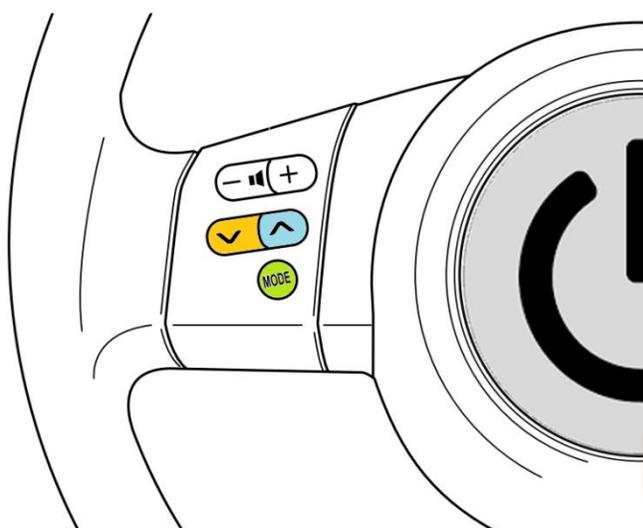

In **mixed control mode**, the user can activate any connected camera with OEM steering wheel controls. For this purpose 3 buttons are used: «**MODE**», «**SEEK+**», «**SEEK-**». Bellow are the control algorithms (choosing different modes) with OEM steering wheel controls.

- MODE** button - double press for 1 s. *Manual activation mode*
- MODE** button - press once. *Exiting active mode*
- SEEK+** button - press once in manual mode. *Front view camera activation*
- SEEK-** button - press once in manual mode. *Rear view camera activation*
- SEEK+** button – press and hold in manual mode. *Image retention mode activation*

ATTENTION! Number of steering wheel control buttons, their location and appearance can be different from those in the manual.

#	CONTROLLER MODES	MODE ACTIVATION
1	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer after 20-40 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
2	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer after 20-40 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
3	<ul style="list-style-type: none"> • Manual activation mode of the front view camera at 0 km/h 	<ul style="list-style-type: none"> ➤ Camera switching – SEEK+ / SEEK- buttons
4	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer 20-40 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once