

Instruction Manual

Dodge Ram/Jeep Cherokee 2019



Index

1. Main Spec
2. Block Diagram
3. Dimension
4. External Appearance
5. Connector Pin Assignment
6. Product Composition
7. DIP S/W Setting
8. Mode Change
9. Touch Control
10. OSD(On Screen Display) Control
11. Installation
12. Q&A

1. Main Spec.

1. Input Spec. (MULTI VIDEO INTERFACE)

- 1 x Digital RGB Input (Navigation System source)
- 1 x Analog RGB Input (Navigation System output)
- 1 x CVBS(REAR CAMERA) Input. (Rear camera source)
- 1 x CVBS(FRONT CAMERA) Input. (Front camera source)
- 1 x LVDS Input. (Car Command System)

2. Output Spec.

- 1 x Virtual Analog Touch (Navigation System source)
- 1 x Uart Digital Touch (Navigation System source)
- 1 x LVDS Output (LCD Operation)


3. Power Spec.

- Input Power : 8VDC ~ 24VDC
- Consumption Power : 12Watt, Max


4. Switch Input mode

- Possible to select CAR model while switching mode by DIP S/W
- By button on the Commander in the car via CAN


2. Block Diagram

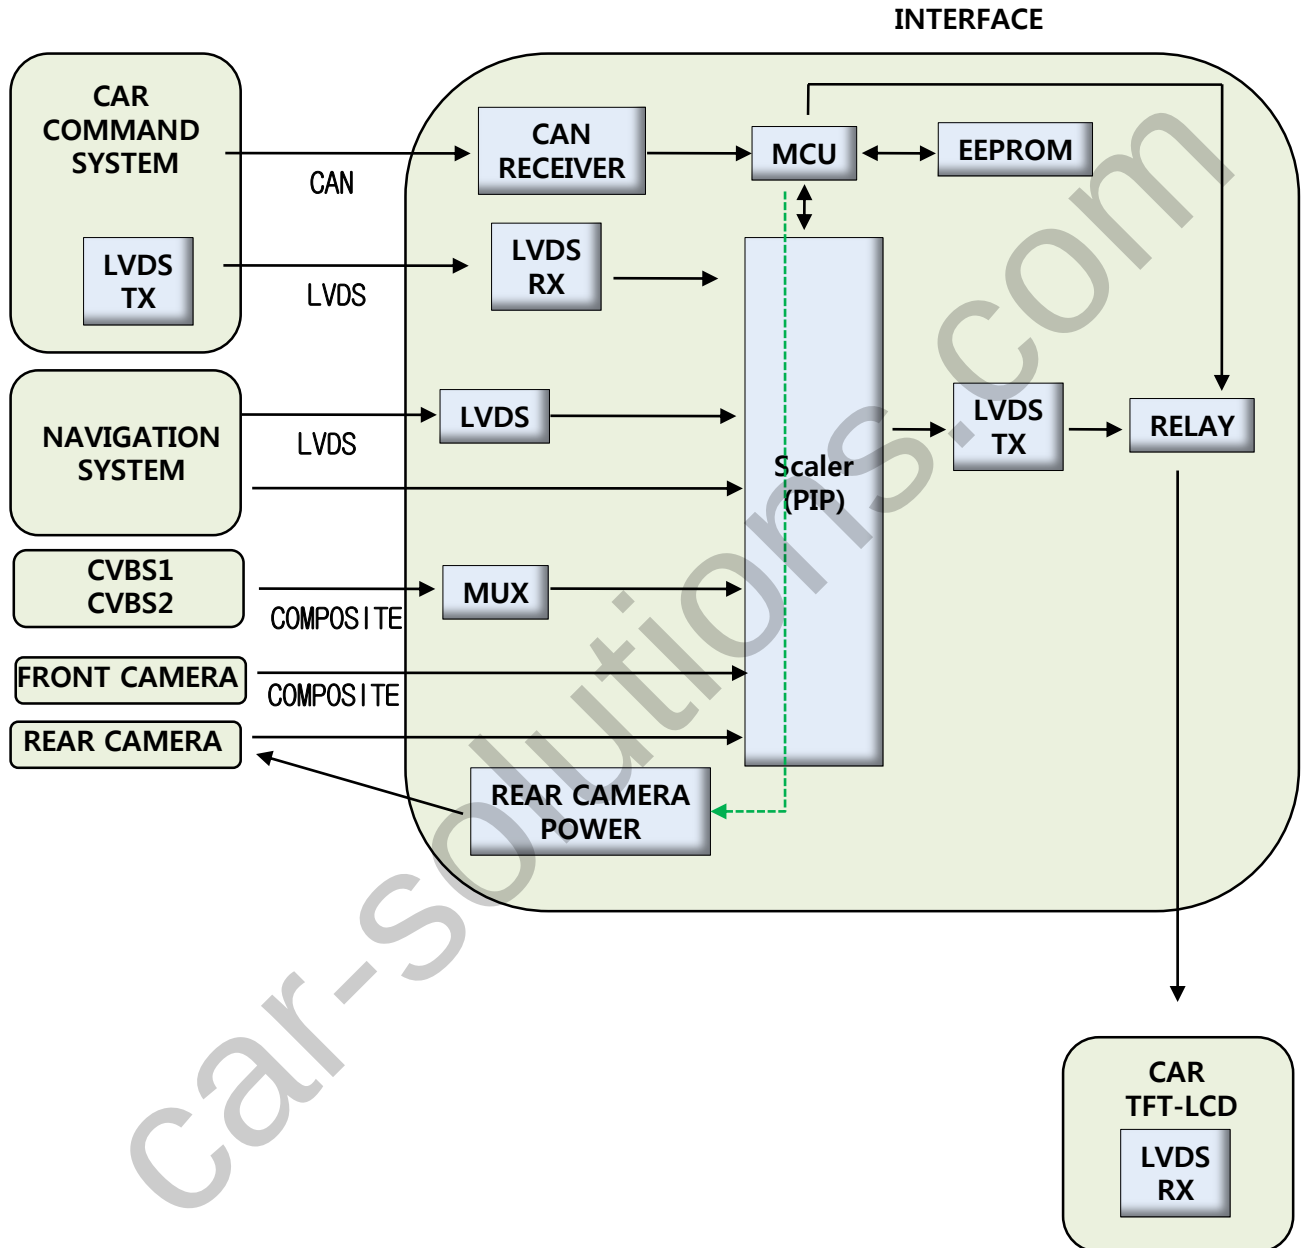

3. External Appearance

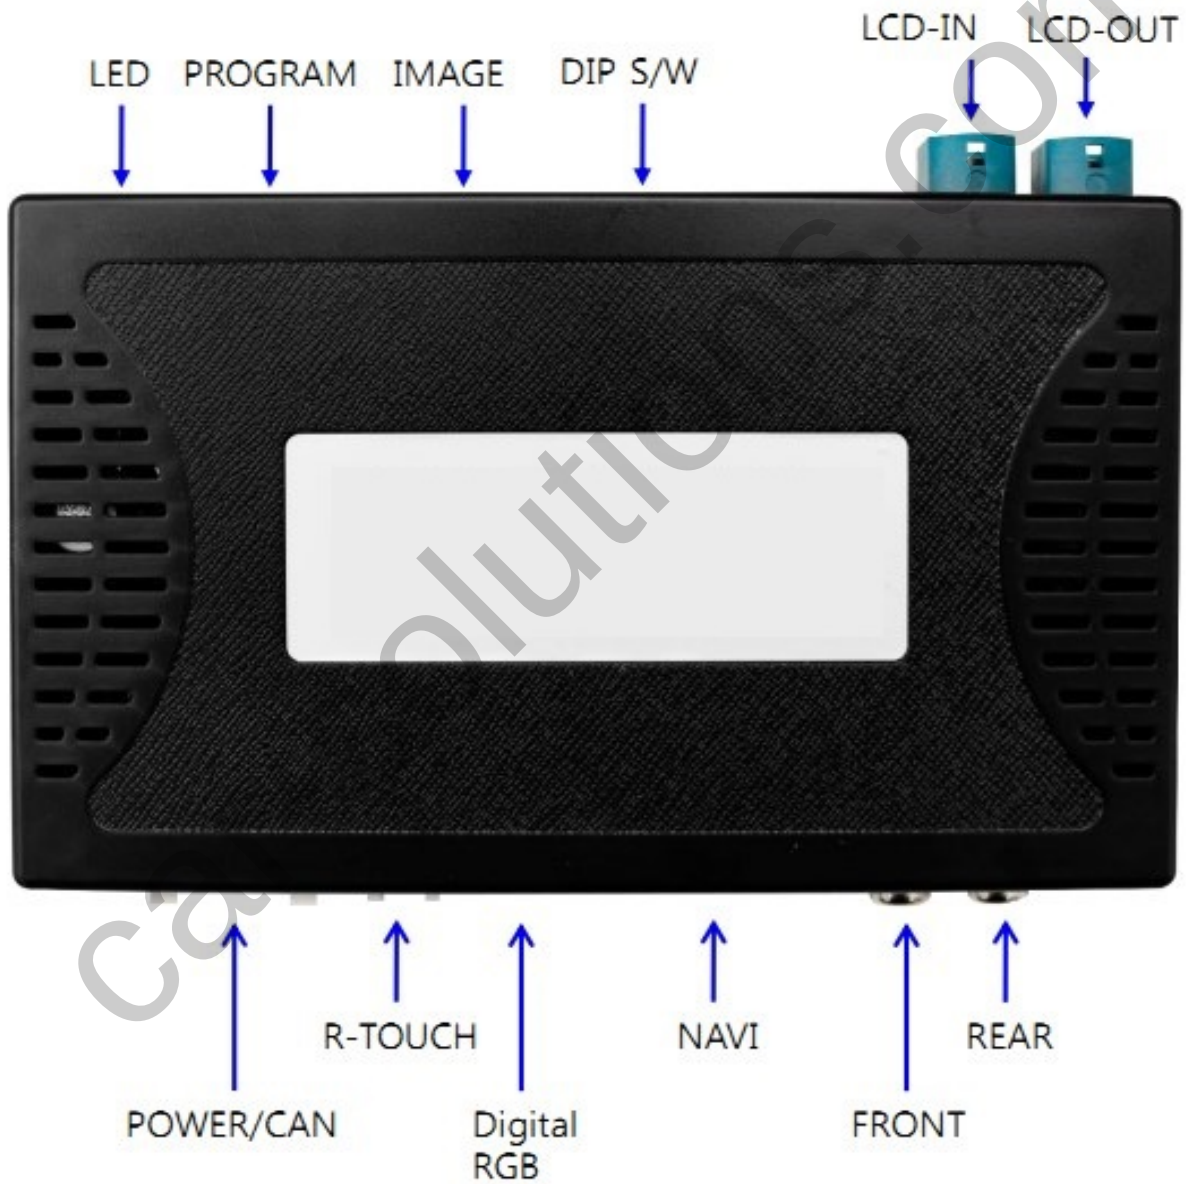

4. External Appearance

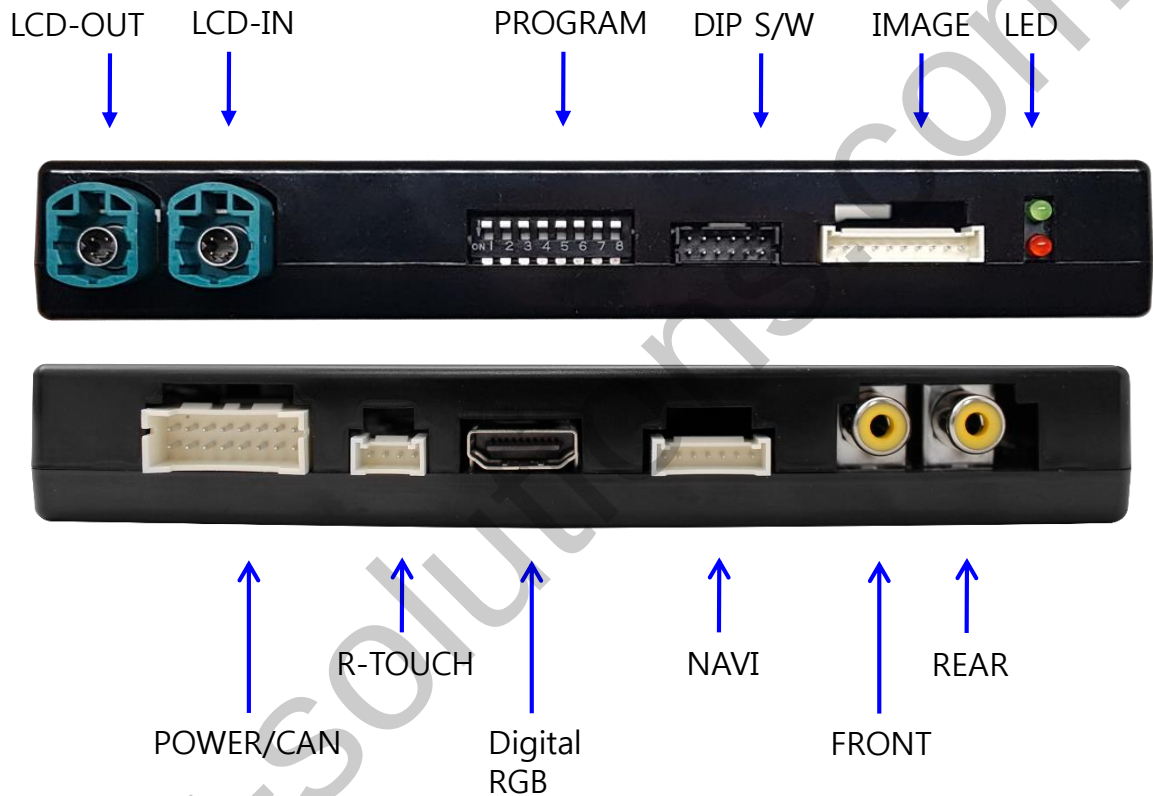

5. Connector Pin Assignment



*POWER Connect

1	Red	Brown	White	Blue	Green	White	Red	Black	15
2	Red	Blue	Purple	Red	Orange	Red	Green	White	16

- | | |
|---------------------|-----------------------|
| 1. Battery (Red) | 9. CAN-L (Green)) |
| 2. Battery (Red) | 10. CAN-H (Orange) |
| 3. Rear-DET (Brown) | 11. ACC-Power (Red) |
| 4. Front-DET (Blue) | 12. Rear-Power (Red) |
| 5. CAN-L (White) | 13. Front-Power (Red) |
| 6. CAN-H (Purple) | 14. Mode (Green) |
| 7. CAN-L (Blue) | 15. GND (Black) |
| 8. CAN-H (Red) | 16. GND (Black) |

*NAVI Connect

①	Red	②	Green	③	Blue	④	White	⑤	Black	⑥	Green	⑦	Orange
---	-----	---	-------	---	------	---	-------	---	-------	---	-------	---	--------

- ① R DATA (Red)
- ② G DATA (Green)
- ③ B DATA (Blue)
- ④ SYNC (White)
- ⑤ GND (Black)
- ⑥ DVB-T-IR (Green)
- ⑦ DVD-IR (Orange)

*Touch Connect


①	Red	②	Grey	③	Blue	④	White
---	-----	---	------	---	------	---	-------

- ① Y-
- ② X-
- ③ Y+
- ④ X+


6. Product Composition



 Interface 1 EA



OSD Board 1 EA

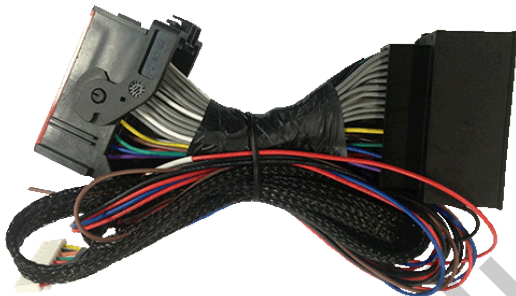

Power Cable 1 EA



LVDS Cable 1 EA



(Z-Type Extension)

7. DIP S/W Setting

* ON : DOWN , OFF : UP

PIN	FUNCTION	DIP S/W Selection
1	NAVI	ON : Not Used OFF : Used
2	DVB-T(AV1)	ON : Not Used OFF : Used
3	DVD(AV2)	ON : Not Used OFF : Used
4	N.C	
5	N.C	
6	N.C	
7	CAR type SEL	Right Picture
8		

* DIP S/W Example




JEEP Grand Cherokee 8.4" 2019year



DODGE RAM 12.0" 2019year

8. Mode Change

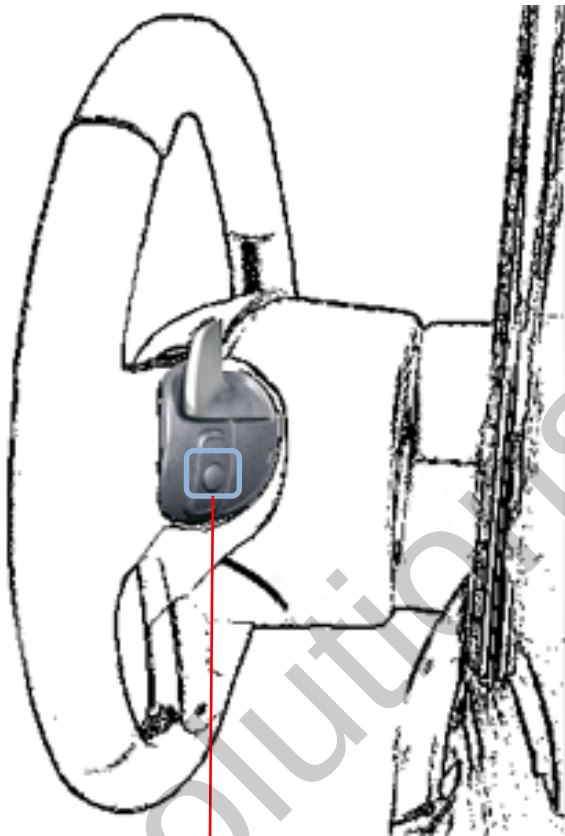

mode change : 1ms press

MENU	Option / Steering Wheel		REAR
Config	FrontCam-Det	ExtWire	
Option	AV Out	AV1	
Image	Back Button	On	
Screen	Steering Wheel	On	Off
Parking	Reset	Execute	Cancel

9. Touch Control

Touch control - Calibration




Press and hold for more than 11 seconds on NAVI, DVB-T, DVD screen.
(Note that it only works the first time after switching screens)

OR

MENU	Calibration	NAVI
OSD	Factory Reset	Execute Cancel
IR-Ctrl	Calibration	Execute Cancel
Utility	Version	FDSHOOKRX-180112


OSD menu -> Utility -> Calibration

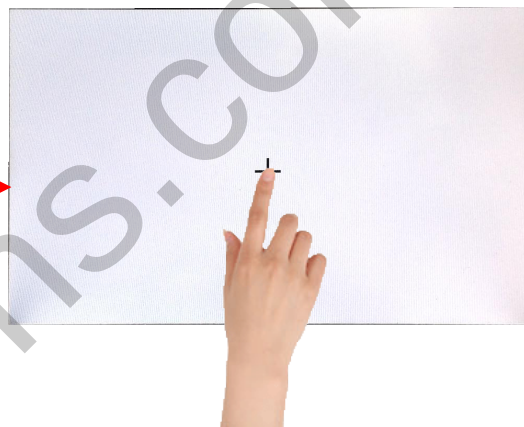

+ Touch according to the shape coordinates.

9. Touch Control

- Touch calibration

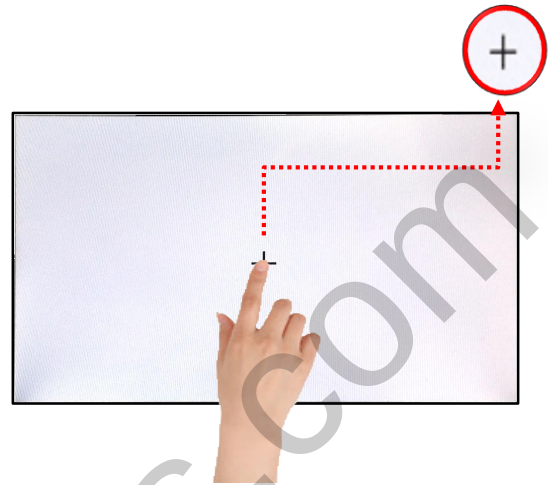

Touch OEM screen in any mode more than 7sec. For calibration
(This function can be activated only one time after switching mode)


Touch the "+" correctly

- DVB-T/DVD Control

Press Touch (Anywhere)




DVB-T

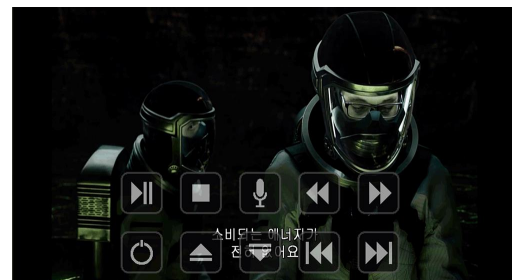

DVD

9. Touch Control

Touch size

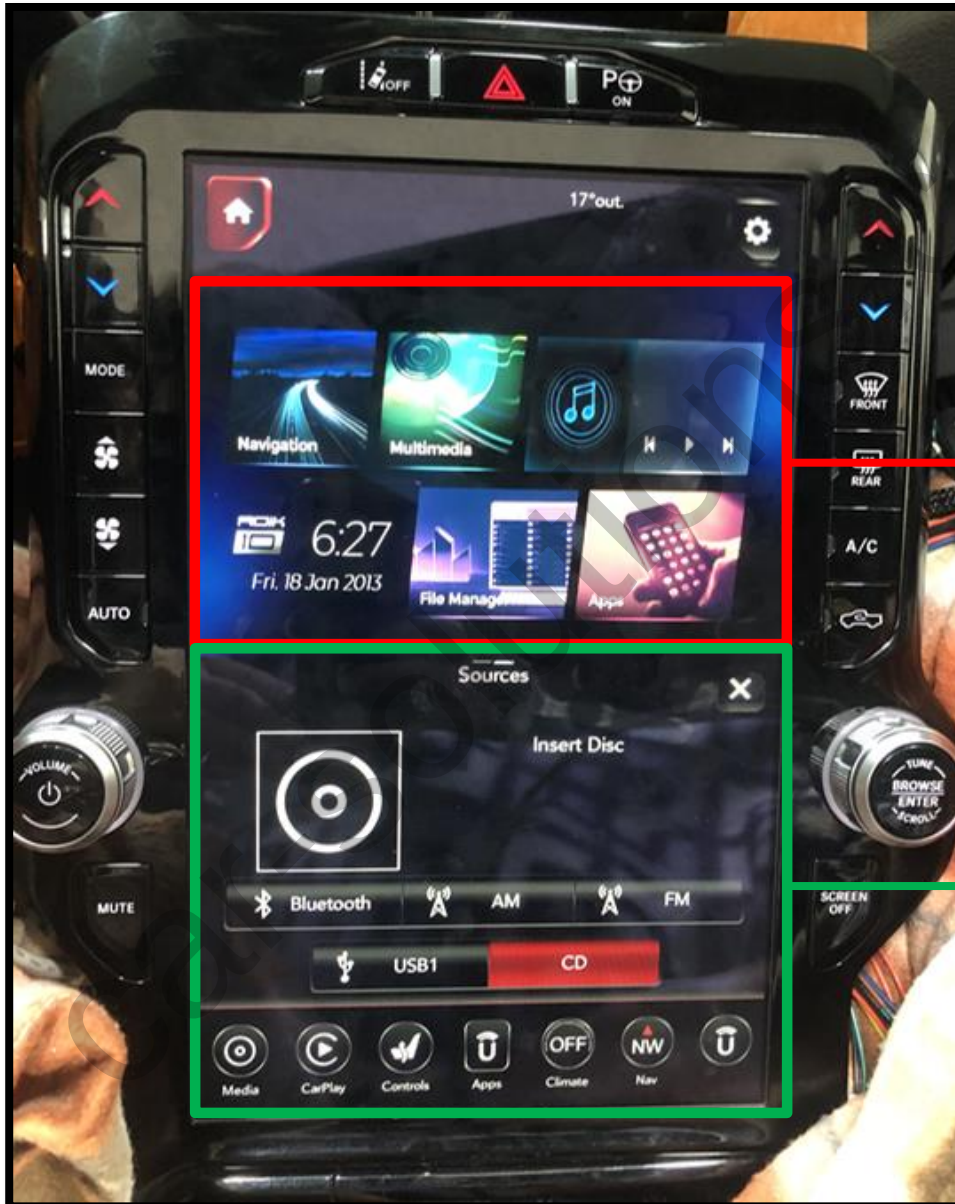


Interface
Touch
Size

OEM
Touch
Size

10. OSD Control

OSD control

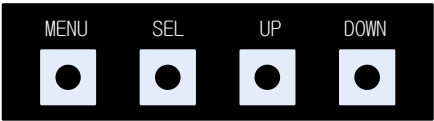

MENU	Press to display when there is no OSD screen. When OSD screen is on, press it to EXIT or OFF.
SEL	Item Selection, Value Selection
UP	Item up Increase selected value
DOWN	Item down Decrease selected value

Mode State		
MENU	Option	
Config	RearCam-Type	ExtDevice
Option	RearCam-Power	Auto
Image	RearCam-Det	GEAR
Screen	AV Mode	Off
Parking	FrontCam-Type	ExtDevice

First Menu

Second Menu

Third Menu

10. OSD Control

OSD Config

First Menu	Second Menu	Third Menu	Description
Config	NAVI-RGB	DIGITAL-INAVI :	Setting the Connected NAVI Model
	DVB-T(DMB)	ELT_DVBT20 :	Setting the Connected DVB-T Model
	DVD	ELT_980XU Slim :	Setting the Connected DVD Model
	RearCam	AVM VIDEO :	Setting the Connected RearCam Model
	Reset	Execute	Reset to default value of Config menu

MENU	Config		NAVI
Config	NAVI-RGB	DIGITAL-INAVI	
Option	DVB-T(DMB)	ELT_DVBT20	
Image	DVD	ELT-980XU Slim	
Screen	Reset	Execute	Cancel
Parking			

10. OSD Control

OSD - Option Menu

First Menu	Second Menu	Third Menu	Description
Option	NAVI COM	HMS FINE :	Set up manufacturer of woodworking device for UART Touch use
		OFF	Do not use features.
	RearCam-Type	OEM	Original Camera
		ExtDevice	Equipped with external camera
	RearCam-Power	ON	+ 12V continuous supply
		AUTO	+ 12V supply only in Rear camera mode
		OFF	+ 12V off
	RearCam-Det	GEAR	Detected by CAN
		WIRE	Detected by Rear-Det Wire
	FrontCam-Type	OEM	Original Camera
		ExtDevice	Equipped with external camera
	FrontCam-Power	ON	+ 12V continuous supply
		AUTO	+ 12V supply only in Front camera mode
		OFF	+ 12V off
	FrontCam-Det	GEAR	Detected by CAN
		WIRE	Detected by Front-Det Wire
	FrontCam-RcvOpt	ON	After RearCam shows FrontCam and returns to previous state
		OFF	Disable feature
	AV Mode	ON	Use "REAR" video input port as VIDOE input.
		OFF	Do not use features.

10. OSD Control

OSD - Option Menu

First Menu	Second Menu	Third Menu	Description
Option	SteeringWheel Btn	ON	"Mode" Switching screen by using Steering wheel button
		OFF	Do not use features.
	UI DVB-T (DMB)	ON	DVB-T device control UI output function
		OFF	Disable feature
	UI DVD	ON	DVD device control UI output function
		OFF	Disable feature
	ScrChg-Call	On	When a Bluetooth phone comes in, the screen is forcibly switched.
		Off	Disable feature
	Reset	Execute	Option Menu all Reset

10. OSD Control

OSD Option -> FrontCam-RcvOpt


Front Camera Auto Mode

0 second = FrontCam-RcvOpt menu OFF

1~30 second = FrontCam-RcvOpt menu ON & time control

MENU	FrontCam-RcvOpt		NAVI
Config	FrontCam-Power	Auto	
Option	FrontCam-Det	ExtWire	
Image	FrontCam-RcvOpt		0s
Screen	Steering Wheel	Voice	
Parking	Reset	Execute Cancel	

MENU	FrontCam-RcvOpt		NAVI
Config	FrontCam-Power	Auto	
Option	FrontCam-Det	ExtWire	
Image	FrontCam-RcvOpt		30s
Screen	Steering Wheel	Voice	
Parking	Reset	Execute Cancel	

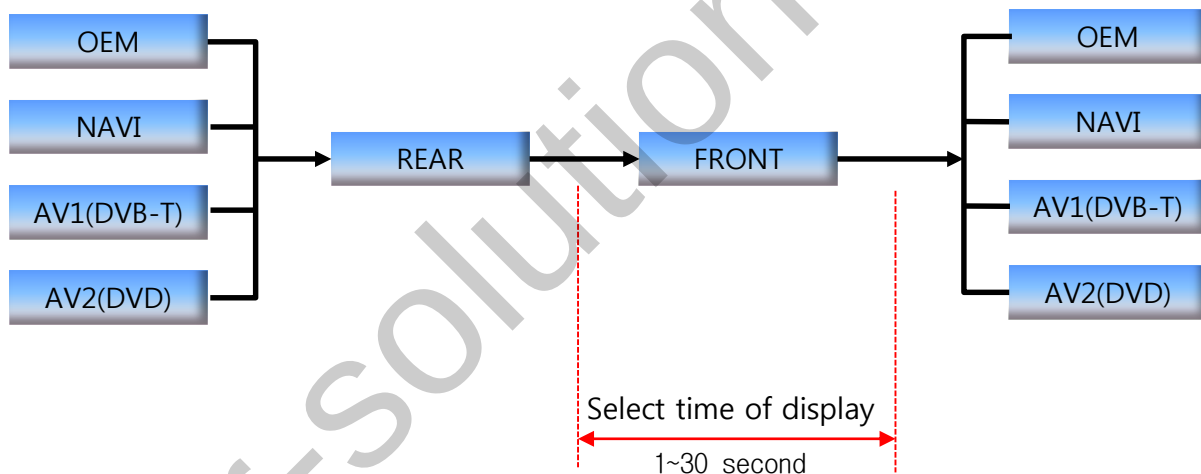

10. OSD Control

NAVI-RGB menu

First Menu	Second Menu	Third Menu	Action
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Color-RED		Adjust the value of RED
	Color-GREEN		Adjust the value of GREEN
	Color-BLUE		Adjust the value of BLUE
	Reset	Excute	Option Menu all Reset

DVD,DVB-T(DMB),NAVI-AV,REAR,FRONT menu

First Menu	Second Menu	Third Menu	Action
Image	Brightness		Adjust the value of brightness
	Contrast		Adjust the value of contrast
	Saturation		Adjust the value of Saturation
	Hue		Adjust the value of Hue
	Sharpness		Adjust the value of Sharpness
	Reset	Excute	Option Menu all Reset



<< Brightness >>



<< Contrast >>



<< Saturation >>



10. OSD Control

OSD – Screen Menu

First Menu	Second Menu	Third Menu	Description
Screen	Horizontal		Output screen horizontal movement
	Vertical		Output screen vertical movement
	Scale X Up		Reduce / increase output screen width
	Scale X Down		
	Scale Y Up		Reduce / Increase Output Screen Height
	Scale Y Down		
	Reset		Screen menu all reset

MENU	Horizontal	NAVI
Config	Horizontal	50
Option	Vertical	50
Image	Scale X Up	50
Screen	Scale X Down	50
Parking	Scale Y Up	50

10. OSD Control

OSD – Parking Menu

First Menu	Second Menu	Third Menu	Description
Parking	Line Display	ON	Show parking line
		OFF	Do not show parking lines
	OPS Display	ON	Show OPS
		OFF	Do not show OPS
	Grid Type	Full	Do not show OPS
		SPLIT	Show OPS
	Warnings Lang		Set warning text language
	Horizontal		Moving a parking line horizontally
	Vertical		Moving a parking line vertically
	Transparency		Parking line transparency
	Reset		Parking menu all reset

MENU	Parking / Line Display REAR	
Config	Line Display	On Off
Option	PDC Display	On
Image	Grid Type	Split
Screen	Warnings Lang	English
Parking	Horizontal	50

10. OSD Control

OSD Parking – OPS Display On / Off

MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	Off
Image	Grid Type	Full	
Screen	Warnings Lang	English	
Parking	Horizontal		50



OPS ON Screen

MENU	Parking / Grid Type		REAR
Config	Line Display	On	
Option	PDC Display	On	Off
Image	Grid Type	Full	
Screen	Warnings Lang	English	
Parking	Horizontal		50



OPS OFF Screen


OSD Parking – Guide line On / Off

MENU	Parking / Line Display		REAR
Config	Line Display	On	Off
Option	PDC Display	On	
Image	Grid Type	Split	
Screen	Warnings Lang	English	
Parking	Horizontal		50



Parking Line ON Screen

MENU	Parking / Line Display		REAR
Config	Line Display	On	Off
Option	PDC Display	On	
Image	Grid Type	Split	
Screen	Warnings Lang	English	
Parking	Horizontal		50

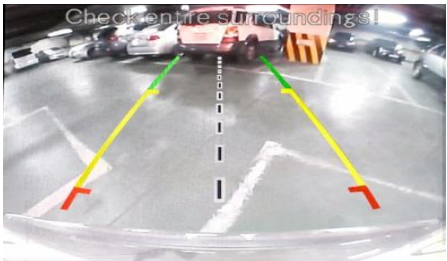

Parking Line OFF Screen

10. OSD Control

OSD Parking – Change warning language

MENU	Parking / Warnings Lang	REAR
Config	OPS Display	English
Option	Line Display	中文
Image	Warnings Lang	한국어
Screen	Horizontal	台灣
Parking	Vertical	Россия

English

Check entire surroundings!

中文

请注意车辆周围环境!

한국어

차량 주변을 전부 확인

台灣

請注意車輛周圍環境!

Россия

Следите за всем окружением автомобиля!

日本

周辺の安全を確認


10. OSD Control

OSD Parking – Adjust position of parking guide line

MENU	Parking		REAR
Config	OPS Display	Off	
Option	Line Display	On	
Image	Warnings Lang	English	
Screen	Horizontal		50
Parking	Vertical		50

Possible to adjust the position of parking guide line
by Keypad in Horizontal / Vertical menu

※ Pressing this Horizontal / Vertical menu,
The OSD screen automatically disappears.
Please adjust from the parking line Screen.

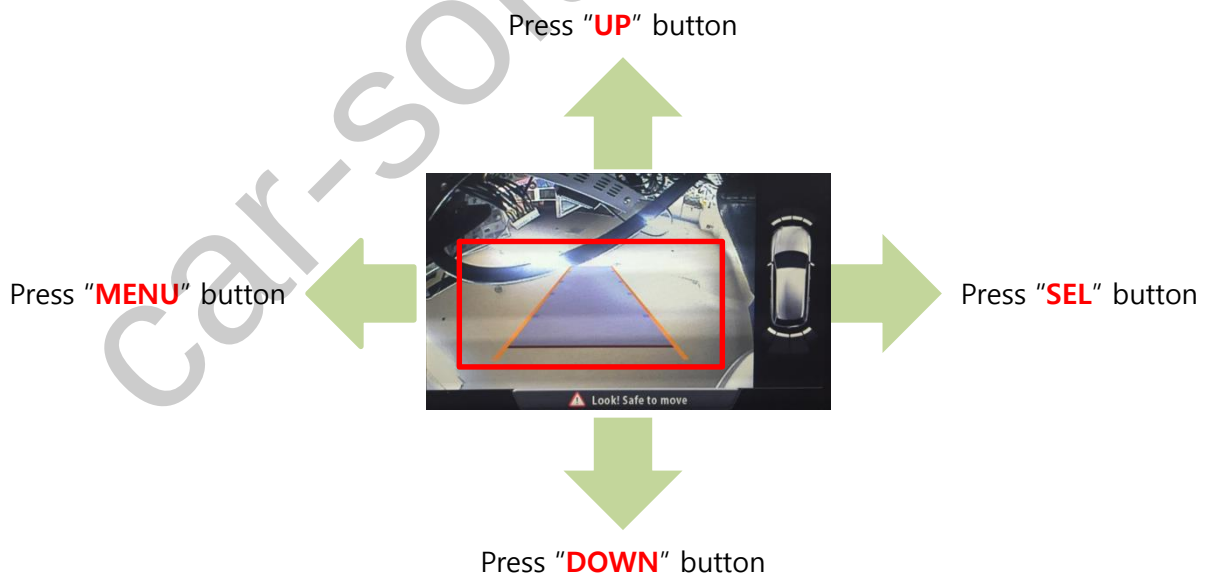

10. OSD Control

OSD – OSD Menu

First Menu	Second Menu	Third Menu	Description
OSD	Horizontal	<i>value</i>	OSD Menu Horizontal Shift
	Vertical	<i>value</i>	OSD menu vertical Shift
	Display Time	<i>value</i>	OSD Menu Display Time (in seconds)
	Transparency	<i>value</i>	OSD menu transparency
	Language		OSD menu display language
	Reset	Execute	Initialize OSD settings

MENU	Horizontal DVB-T	
OSD	Horizontal	 50
IR-Ctrl	Vertical	 50
Utility	Display Time	 10s
	Transparency	 30
	Language	English
MENU	Reset DVB-T	
OSD	Reset	Execute Cancel
IR-Ctrl		
Utility		

10. OSD Control

OSD – IR learning function



* In order to work with the IR learning function, a separate IR cable is required.

MENU	IR-Ctrl / DVB-T(DMB)	NAVI
OSD	DVB-T(DMB)	Sel Learn Cancel
IR-Ctrl	DVD	Sys
Utility		

1. In DVB-T / DVD menu, select User in Sys (OSD list) or User (learned contents).
2. Select Learn from the OSD menu.



MENU	IR-Ctrl / DVB-T(DMB)	NAVI
OSD	All-Clear	
IR-Ctrl	POWER	----
Utility	SCAN	----
	CH+	----
	CH-	----

3. Before using IR learning function, select All-Clear to delete existing stored data.




MENU	IR-Ctrl / DVB-T(DMB)	DVB-T
OSD	New Code: []	
IR-Ctrl	Cfm Code: []	
Utility		
	Save	Clr Cancel

4. Press the remote control button to be used in each ICON once in New Code, press once again in Cfm Code to confirm it is the same and save it.

10. OSD Control

OSD – Utility Menu


First Menu	Second Menu	Third Menu	Description
Utility	Factory Reset	Execute	Initialize all settings
	Calibration	Execute	Calibration mode Execute
	Version		FDSYOOKRX-180209 (Check for future upgrades)

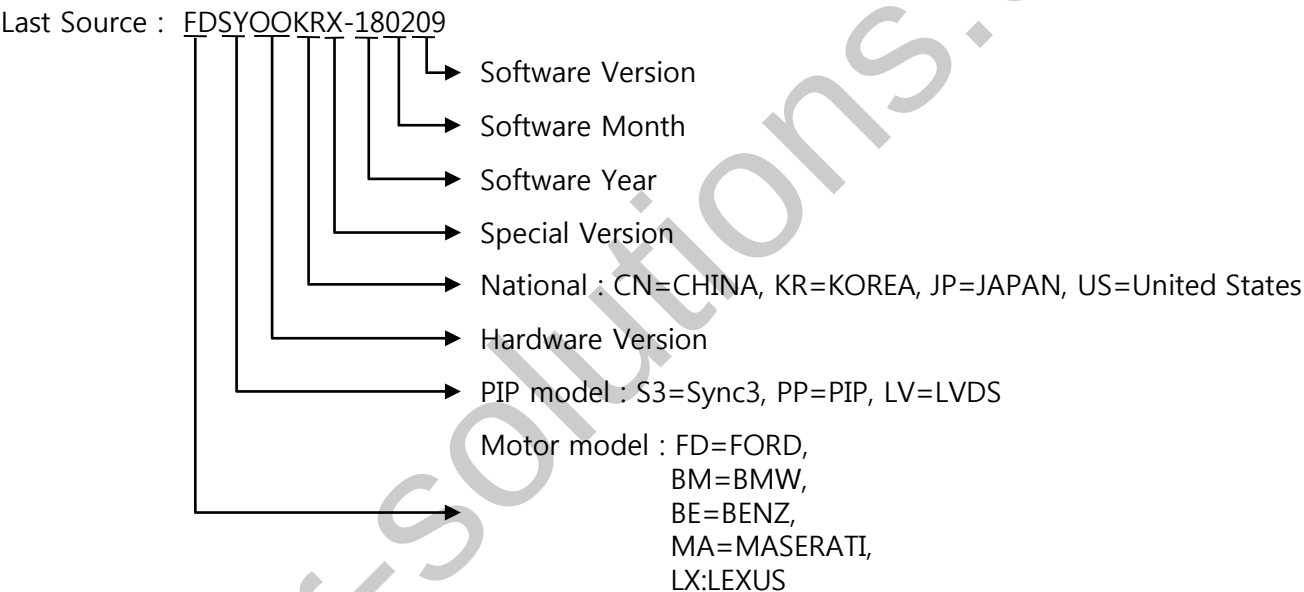

MENU	Utility	MAVI
OSD	Factory Reset	Execute Cancel
IR-Ctrl	Version	FDSYOOKRX-180209
Utility		


11. Installation

1. Installation Navigation Connection

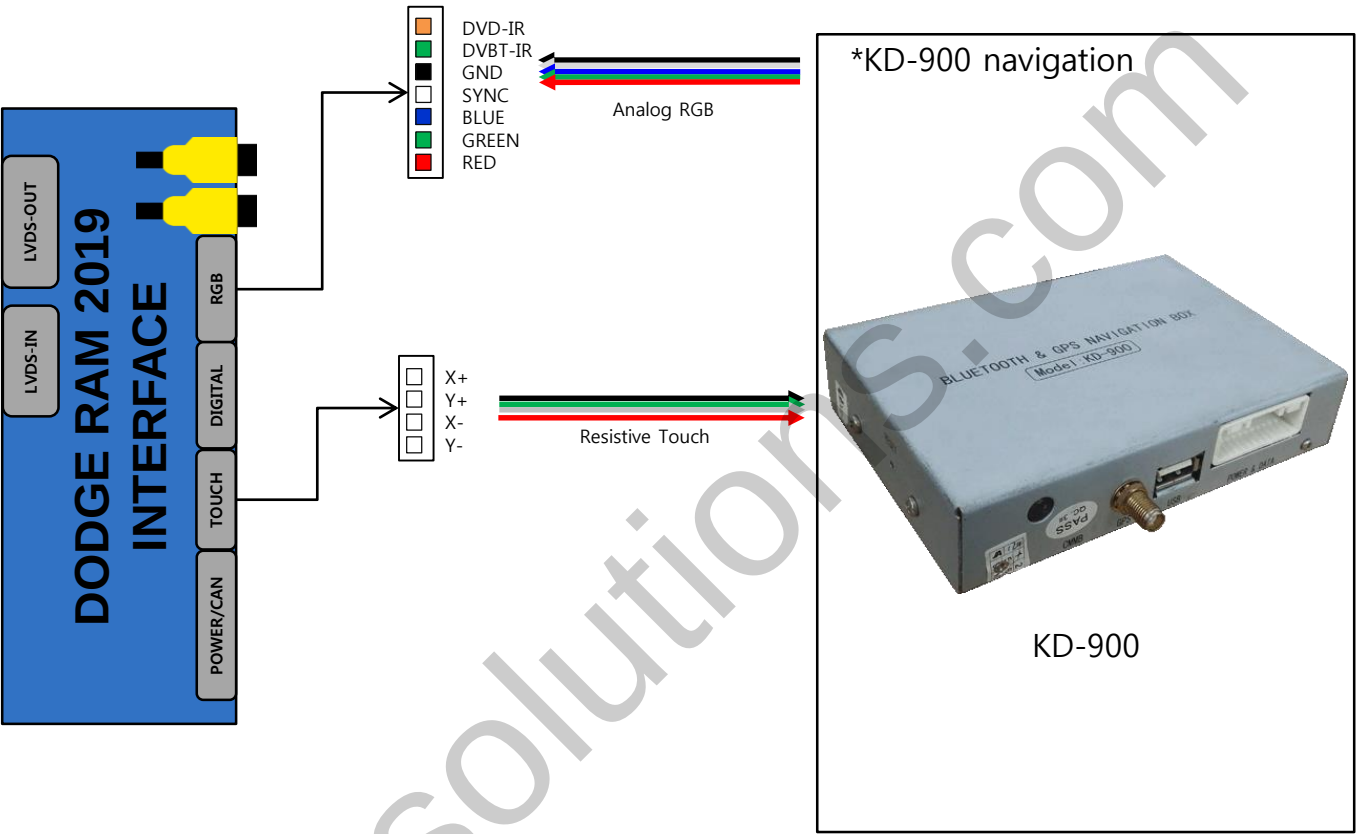


11. Installation

2. Installation DVB-T Remote Control Connection

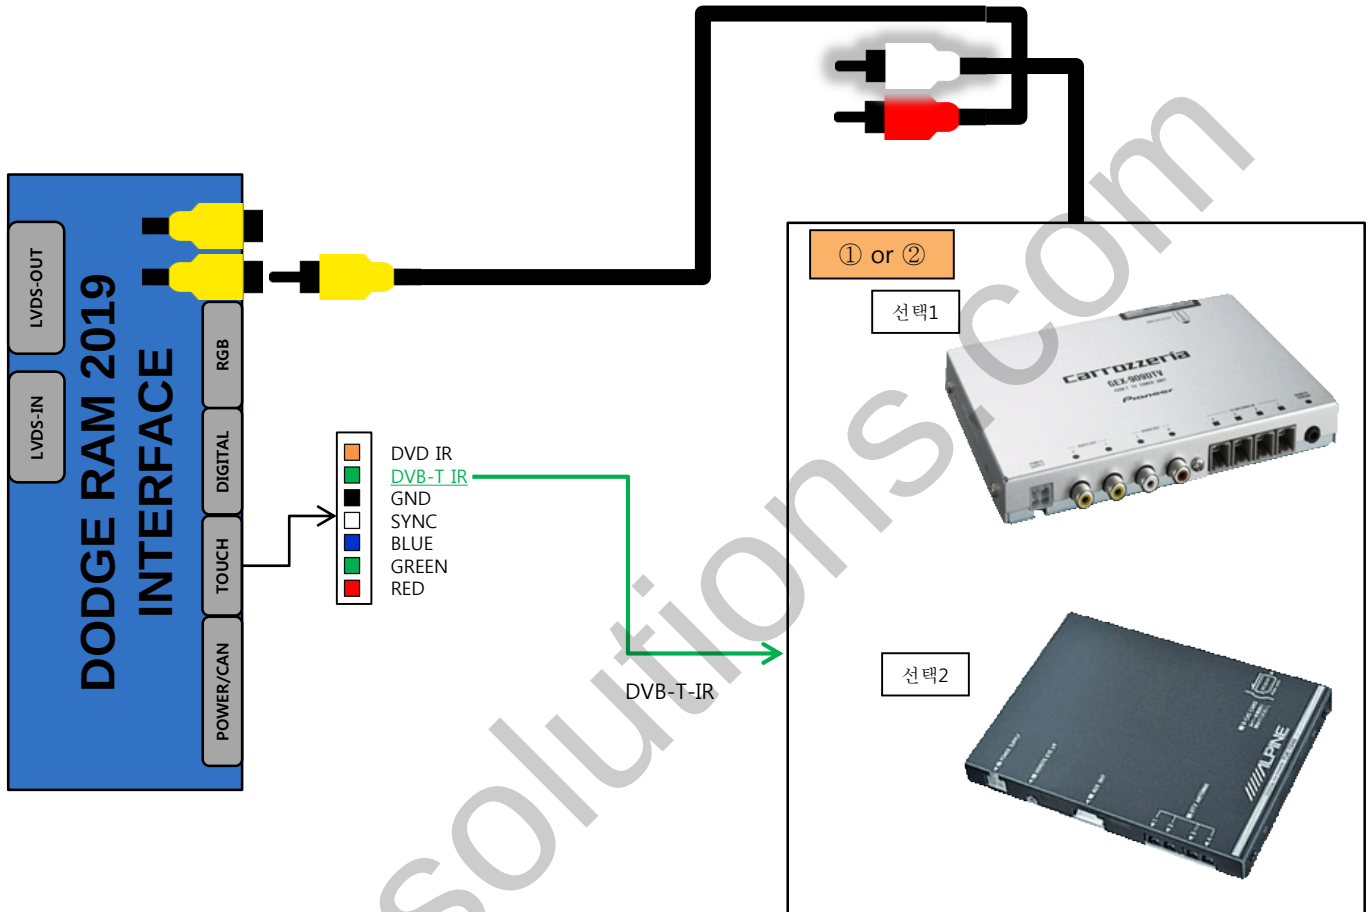


11. Installation

3. Installation DVD Remote Control Connection

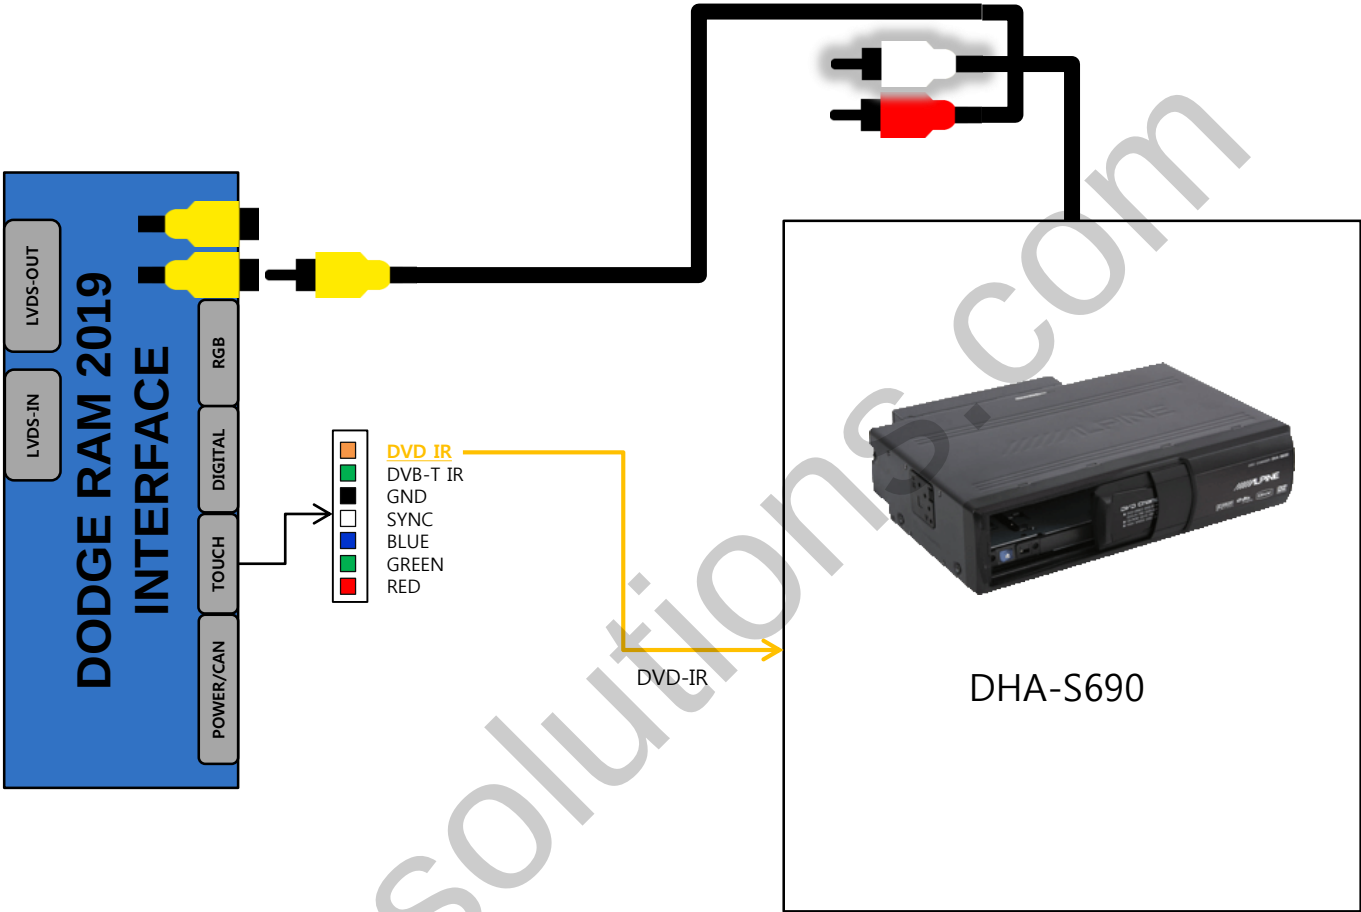


11. Installation

4. Installation External Front Camera Connection

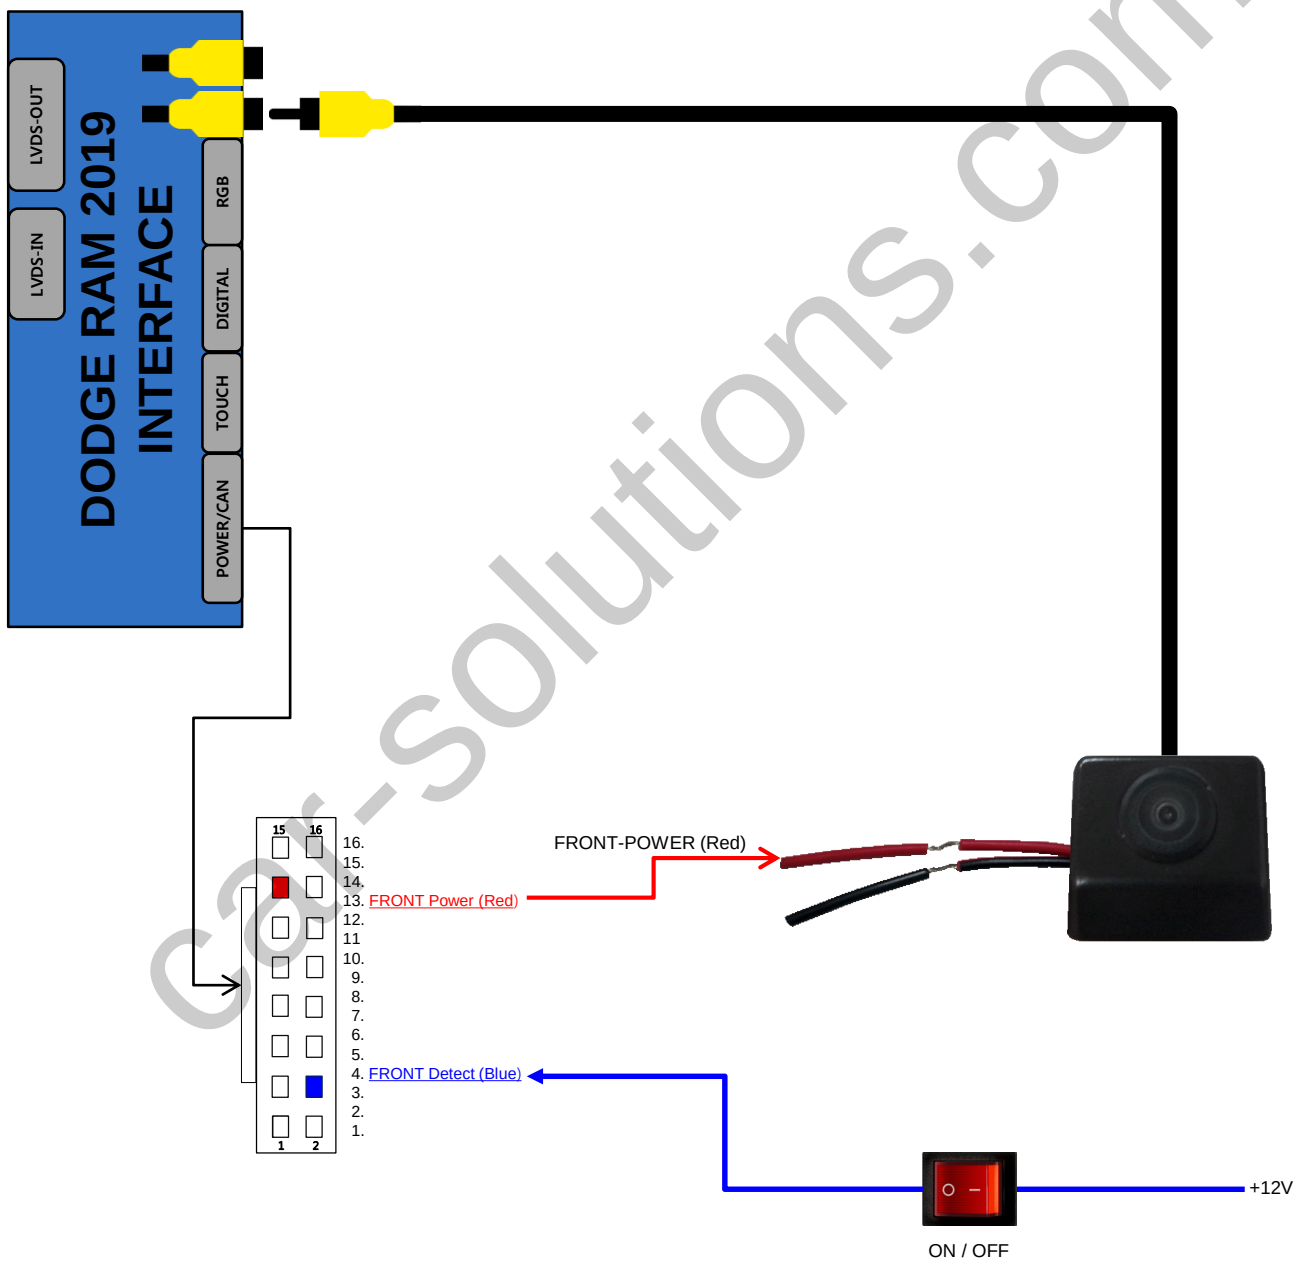



11. Installation

5. Installation External Reverse(Rear) Camera Connection

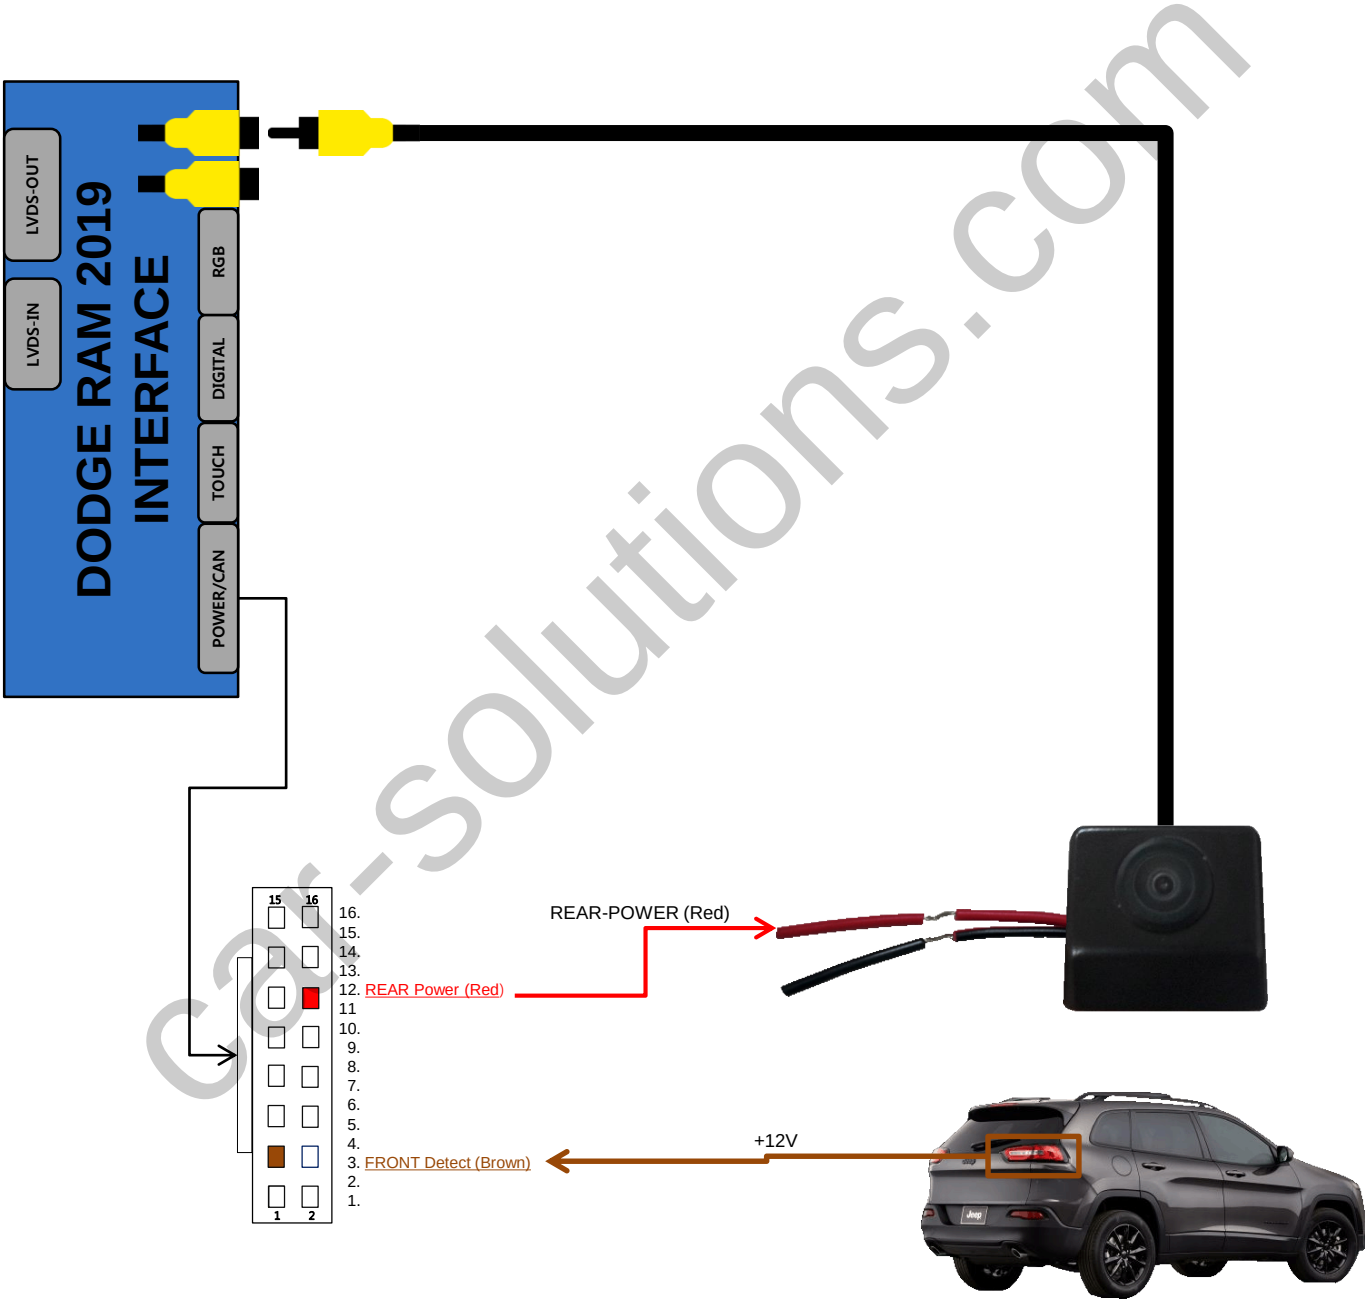

11. Installation

6. Installation POWER/CAN connection

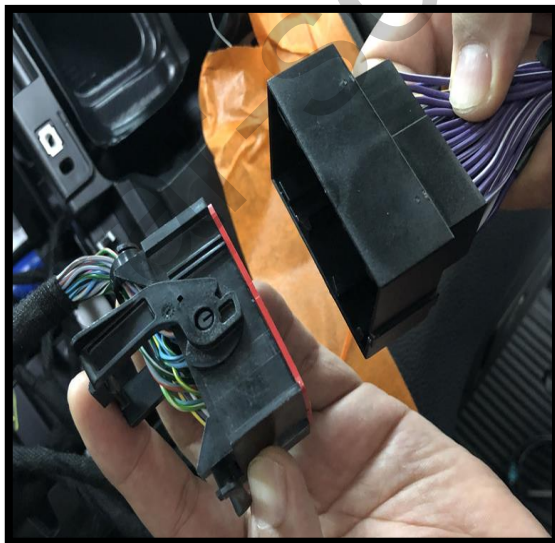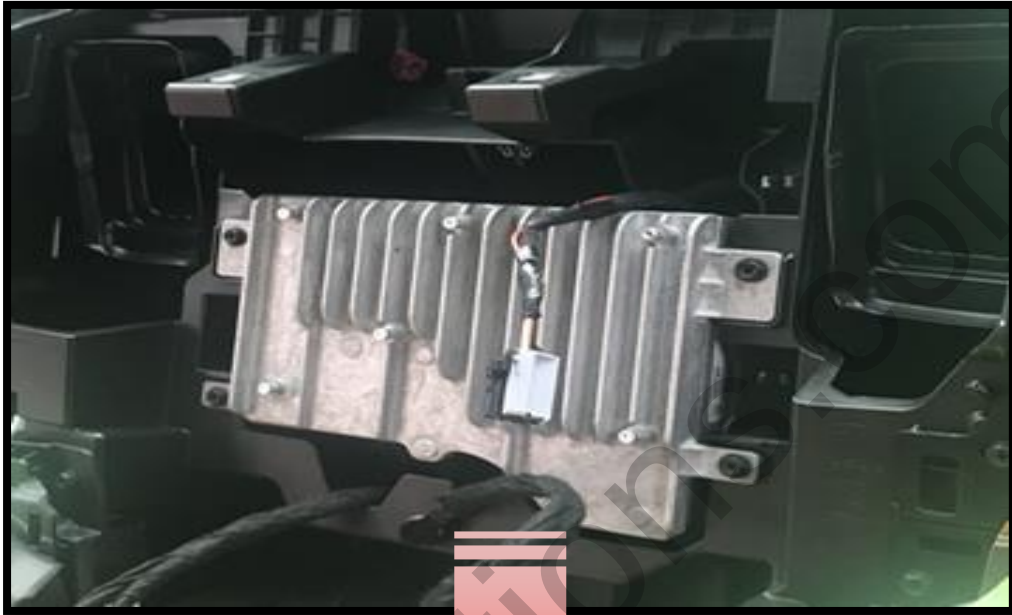

11. Installation

7. Installation LVDS connection



12. Q&A

1. FQA

- Not possible to switch mode
 - Check connection of OSD Key pad wire
 - Check CAN connection
- Display wrong size of picture
 - Check Dip s/w setting
- Display black screen in OEM mode
 - Check connection of LVDS/LCD cable
- Not possible to switch to rear screen
 - Check the packing setting
(OSD Menu – option – RearCam-Det)

2. Caution

- The device must not be installed in where it interferes driving (close to brake pedal, steering wheel, airbag etc.)
- LVDS cable must be connected correctly according to the manual
- Insulate the end of wire by using electrical tape
- The installation should be done by expert
- GU electronic does not take any responsibility for any problem caused by wrong installation