

Last Updated : 2011.08.23

MODEL : QVL-MB10-RND-V1 / Product code : MB10-RND-V1-1001-000

MB10


(W221 2010 MODEL)

Installation

Contents

1 Installation diagram	3
2 Cautions on installation	4
3 Installation	5

1 Installation diagram

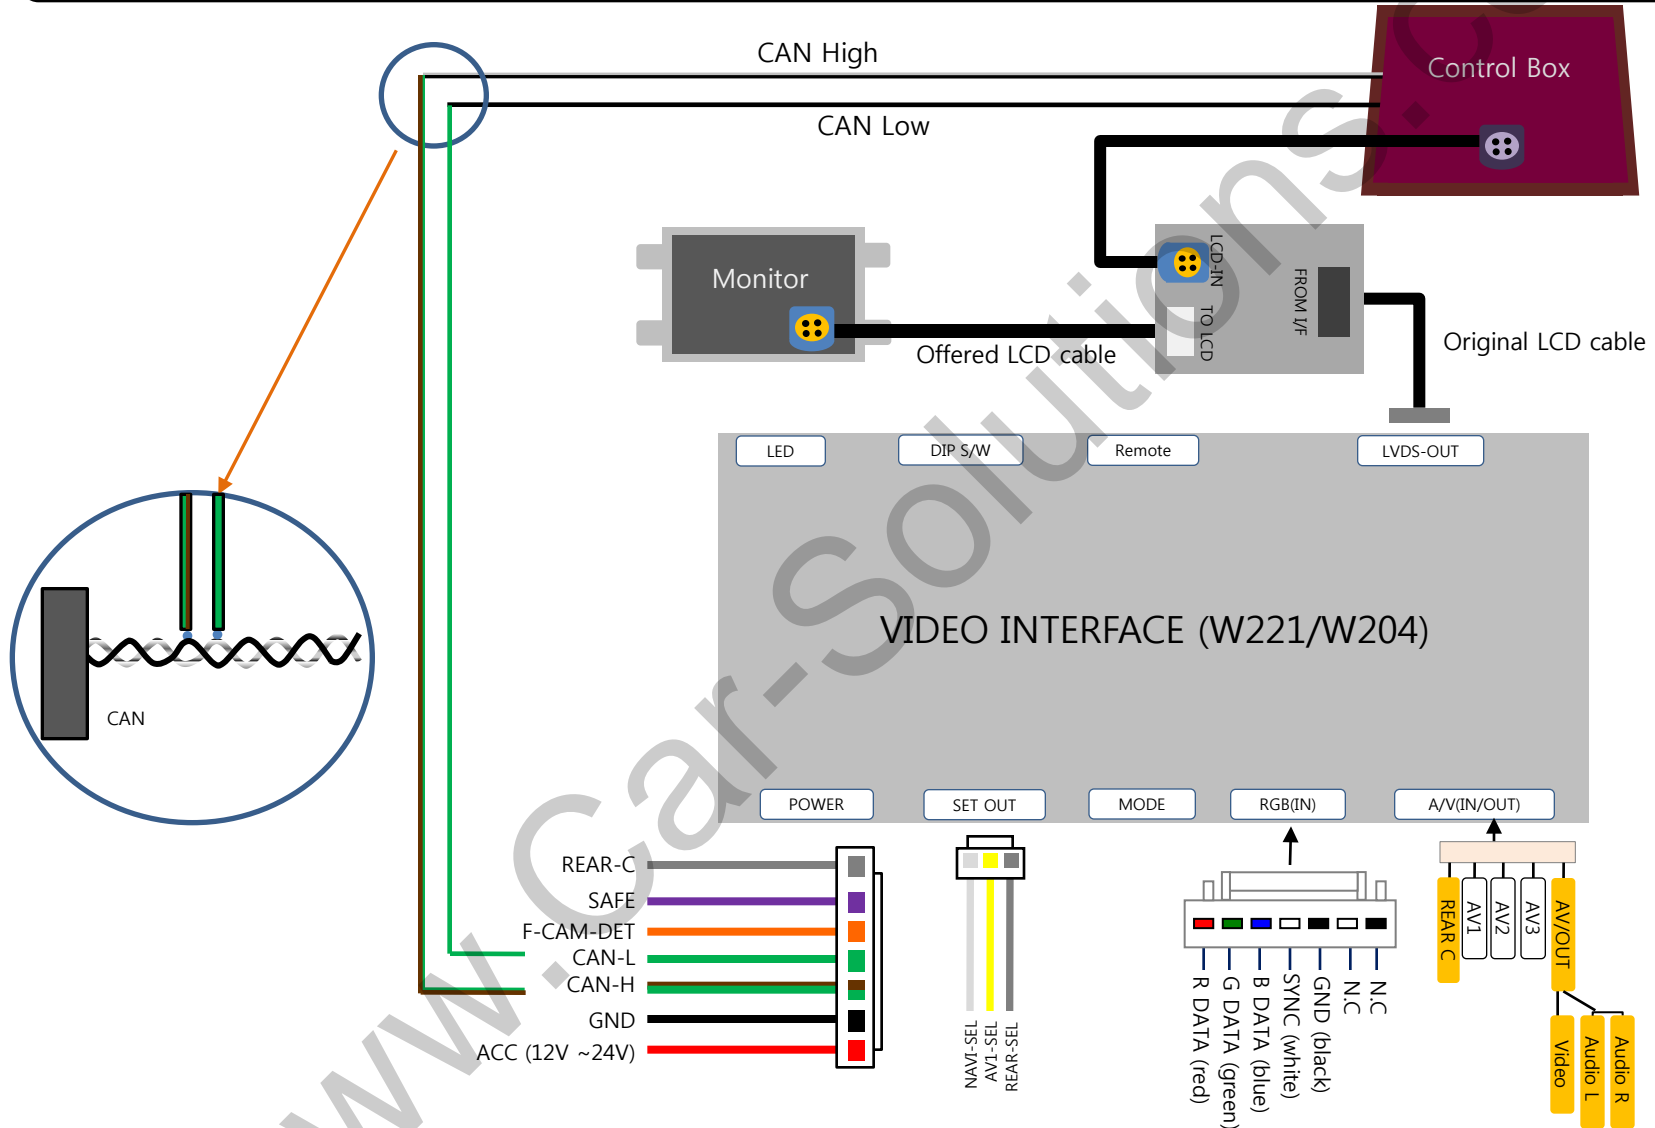

2 Cautions on installation

- Ignition key should be taken off before starting installation, interface power connection must be the last step in installation.
- Power cable should be separated when connecting interface.
- Should be no any electronic devices or magnetic pole around installation place.
- All steps of installation should be done by well-trained specialist.
- Dismantling without manufacturer's permission can not be guaranteed, (No permission to break attached label on the board.)
- Kindly check all parts are in the box, when receiving the product, if anything missing, inform to the supplier or manufacturer.
- According to our sales policy, any problems caused by user's mistake, careless can not be guaranteed.

3 설치(New S, C-class)

LCD IN/OUT cable connection



Connect the Original LCD cable into LCD-IN input of the interface board and offered LCD-Out cable into the Monitor.

CAN wire connection



Connect offered CAN wires to CAN wires from car.

- White + Black : CAN High
- Black : CAN LOW