




Installation Guide

Video in Motion

*For BMW 1, 3, 5, 6, Z4, X1, X3, X5, X6 (Only New I-Drive)
VW Phaeton, VW Car models with RNS 510*

- **High quality**
- **Higher reliability, stability**
- **Simple assembly**
- **Custom design service**

- By law, watching the moving pictures while driving is prohibited. This product should only be used while standing.
- The driver must not be distracted.
- We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product.

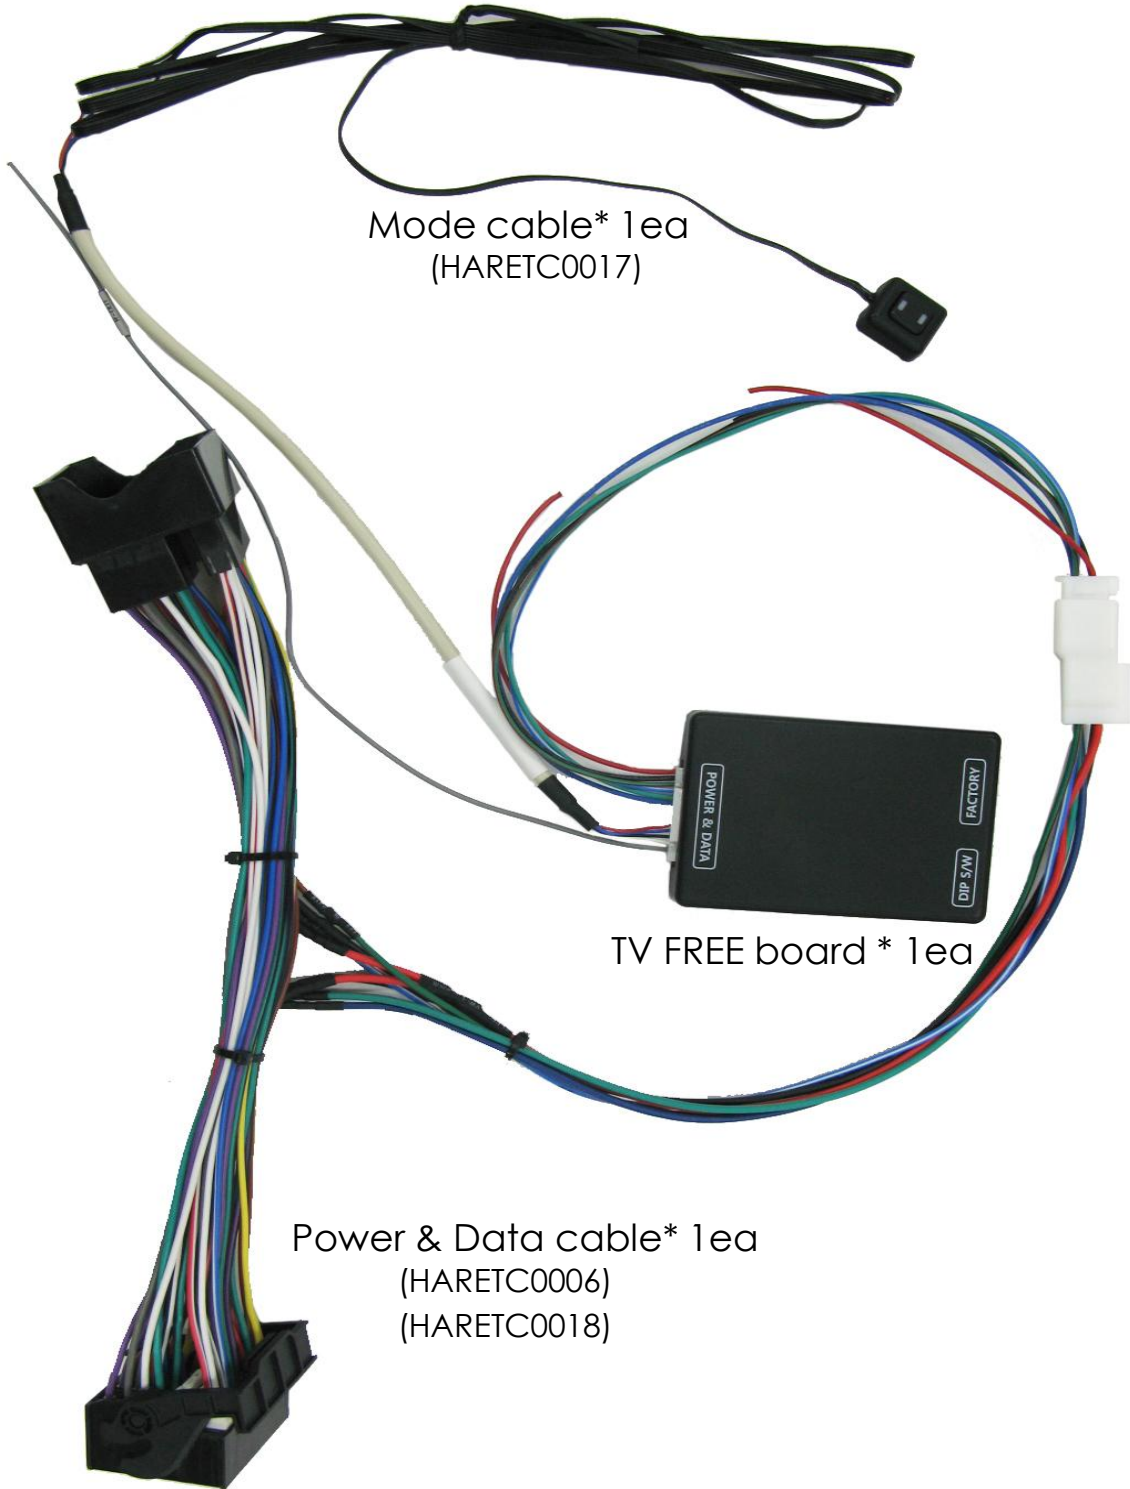

Mode cable* 1ea
(HARETC0017)

TV FREE board * 1ea

Power & Data cable* 1ea
(HARETC0006)
(HARETC0018)

2.1 Installation

1. Separating the original audio



1. Separate the main part of the original audio from the vehicle along the each model's way to separate.

* Along the sort of models, there could be a difficulty in separation because of the shift knob. If you are stuck in this trouble, you must separate the outside equipment also.

* * If you separate the other cables sort of antenna or LCD's also on this process, the installation will be easier than ever.



2. Separate the main power harness from the audio system.

2. Separating the MOST connector



1. Separate MOST cable in state of connector from the main harness divided out of the audio.


* Treat with extra caution when you are processing near the MOST cable part. If there is a serious bend or something, there could be a failure in communication and it could malfunction.

3. Connecting the audio cable



1. Connect the offered cable to the original cable connect or apart from the MOST cable.


* Thoroughly be sure all the inner connector to precisely join into each spot.

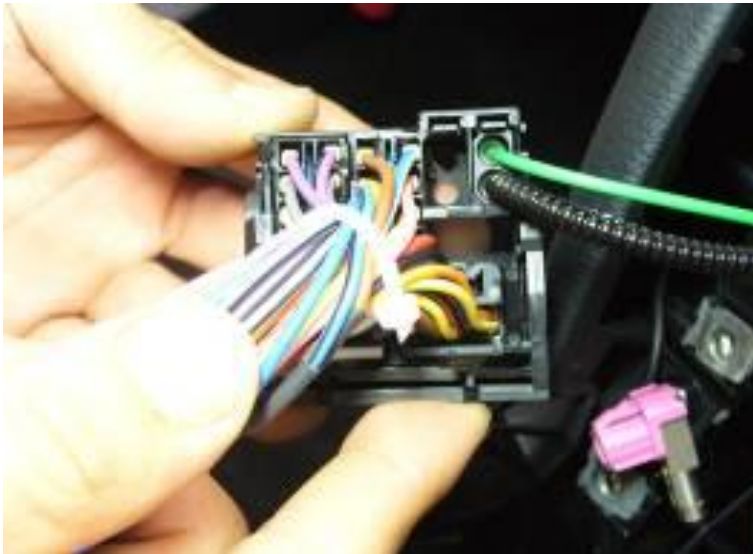


2. Connect the MOST connector apart from process #2 into the spot originally put.

* Unless the connection is well finished, there could be a failure in the audio output or something.


4. Connecting the main cable

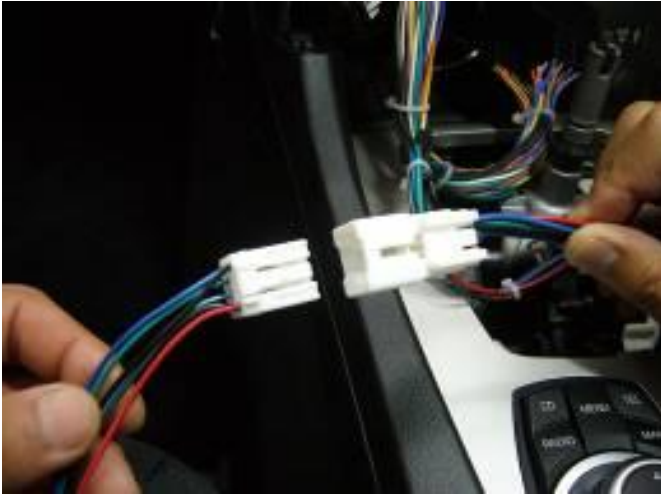

1. Connect the car main harness with the TV FREE harness(6pin).

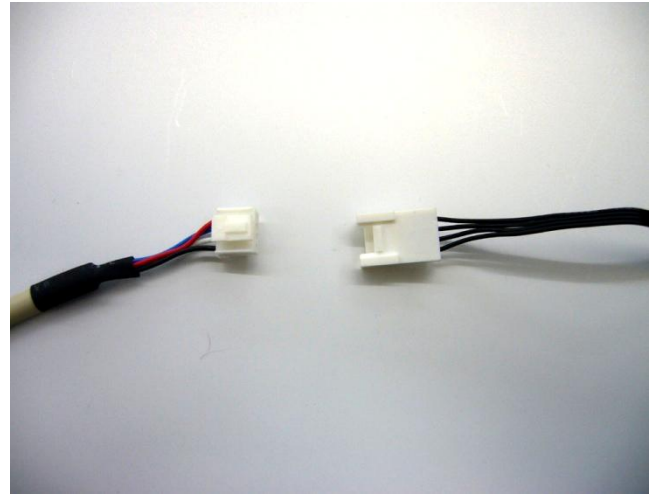

2. Connect the 4 pin cable for TV FREE body with the switch (4 pin) for mode change.

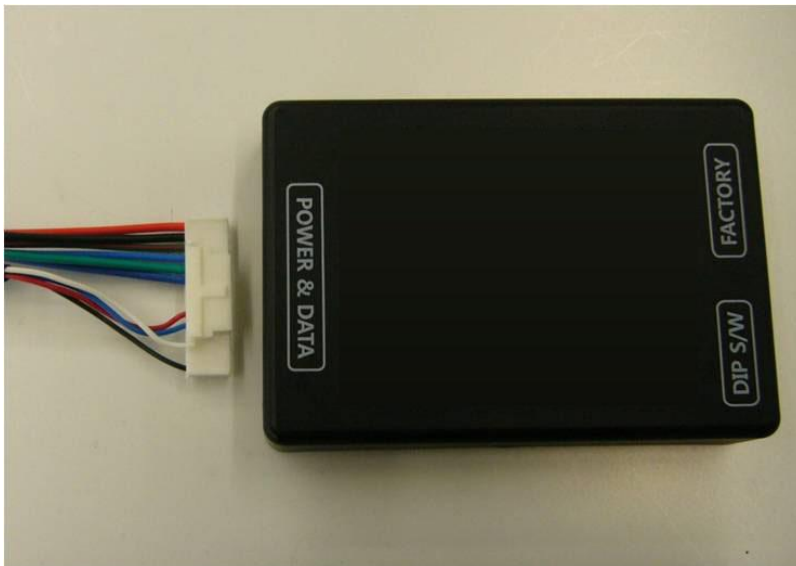


3. Once the installation is finished, firmly fix the TV FREE body onto the proper spot not to interfere with driving and set aside the switch for mode change onto the spot easy to use.




- *Blue LED ON (press in short) : TV FREE MODE
- *Red LED ON (press in short) : GPS MODE (the mode of the original vehicle)
- *Press about 5 seconds long : By-Pass MODE (If you press this button again, you can reach the previous mode.

- * By-Pass mode : If you want to check the vehicle and reach this mode, you can protect the device from any possible defects or harms.
- **After you turn off the engine and several minutes passed, the lamp will be turned off. But do not worry about the battery consumption.

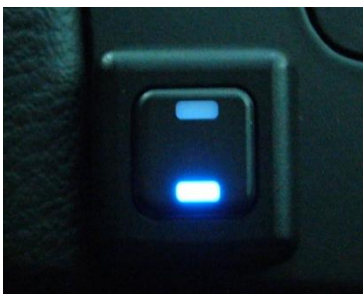

TV FREE MODE

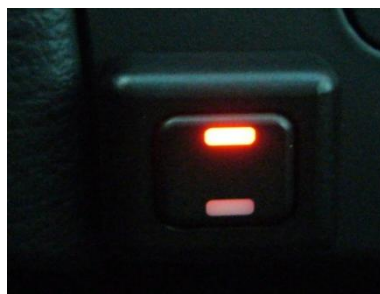

Original MODE



By-Pass MODE