

**TVF - 100  
BENZ, HYUNDAI  
INSTALLATION MANUAL**


# Index

- \* Precaution
- \* Concept Diagram
- \* Product and Package Contains
- \* Dip Switch Setting
- \* Can Wiring (BENZ)
- \* ON / OFF Operation(BENZ)
- \* Can Wiring (GENESIS | EQUUS)
- \* ON / OFF Operation (GENESIS | EQUUS)

# Precaution

- Do work only by qualified service personnel and take off the key of vehicle while installation.
- Check power cable of car video interface before take on the key.
- Remove any object that could fall into ventilation holes.
- Do not expose the interface to rain, water, or excessive moisture environment.
- We can not warranty, if opened the case of interface module. The label must keep attached on the case.

# Concept Diagram

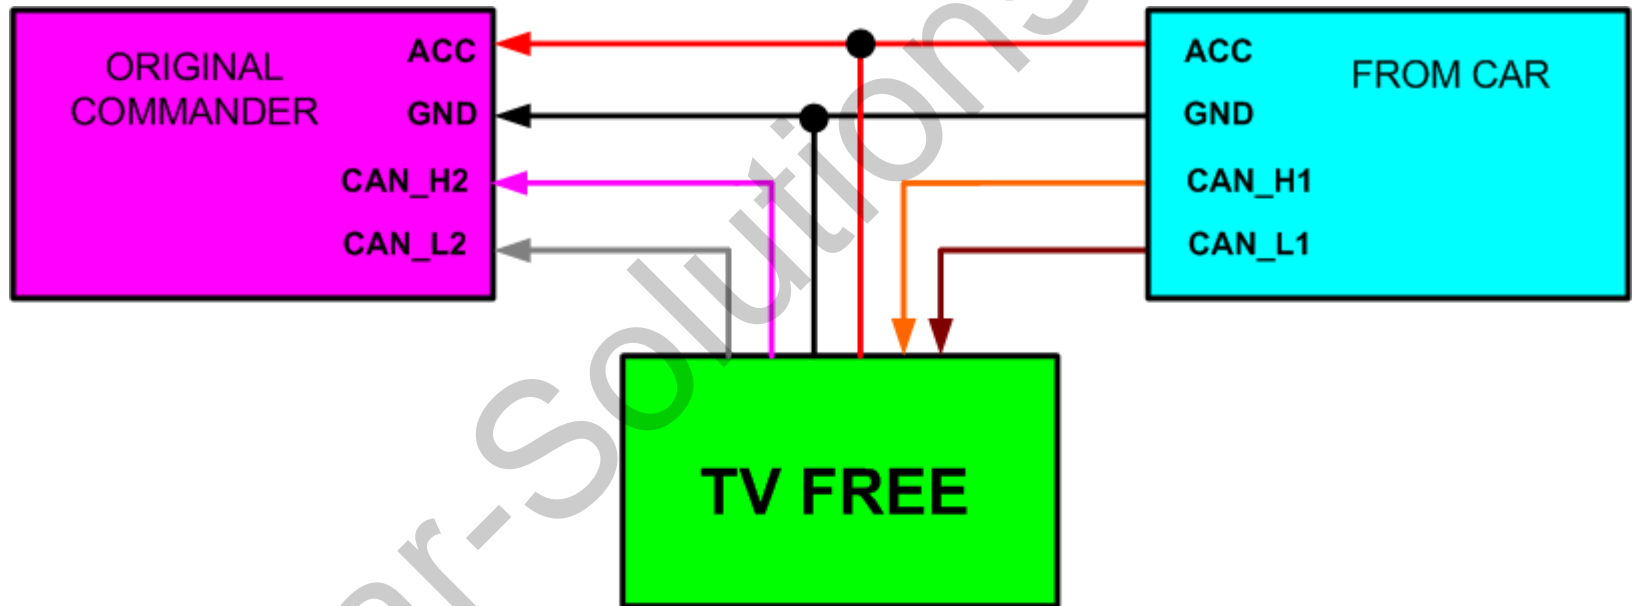


1. ACC
2. GND
3. CAN\_L1
4. CAN\_H1
5. CAN\_L2
6. CAN\_H2


# Product and Package Contains



# Dip Switch Setting

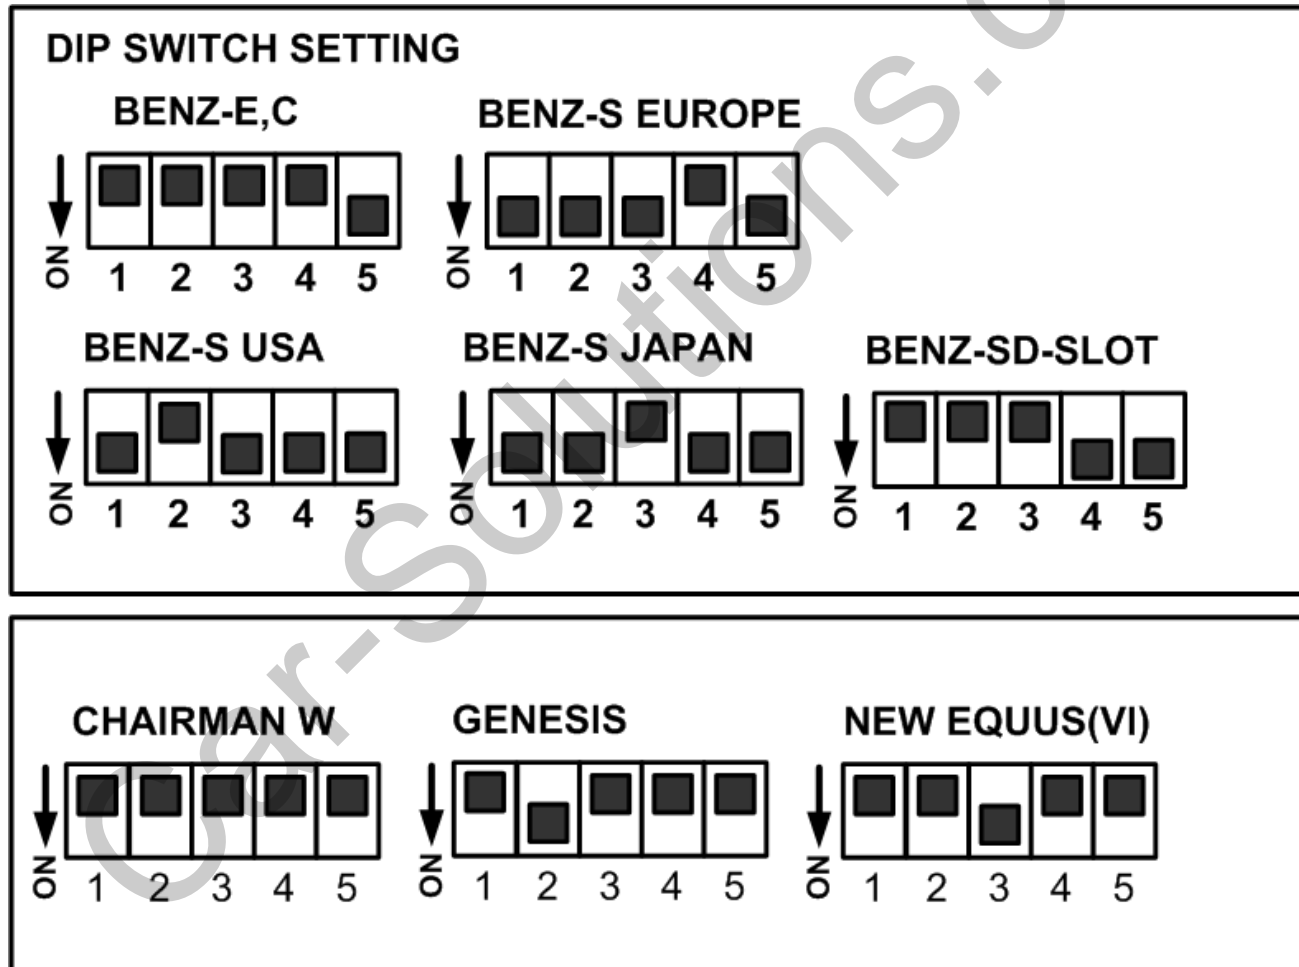

# Can Wiring (BENZ)

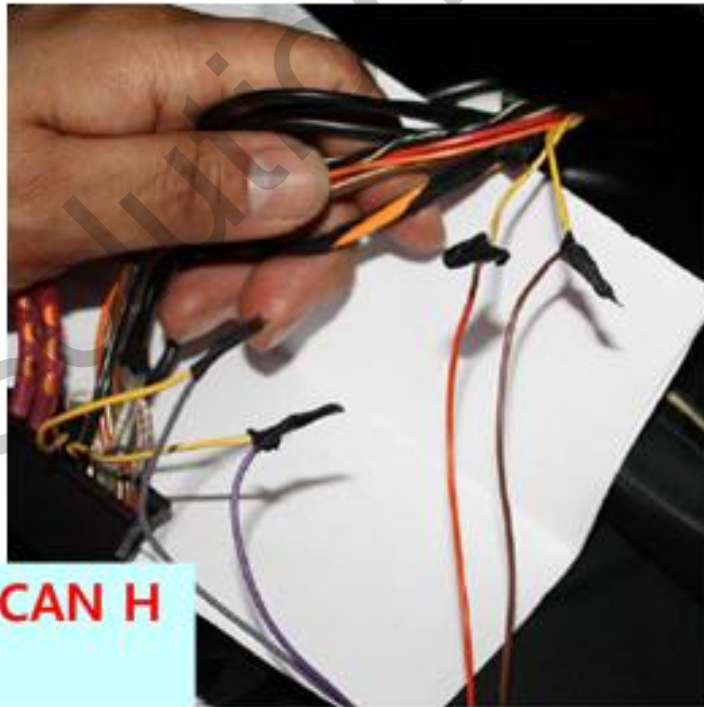

**YELLOW/WHITE : CAN H**  
**YELLOW : CAN L**

# ON / OFF Operation(BENZ)





UP BUTTON : 2 sec press for Motion free on

DOWN BUTTON : 2 sec press for Motion free off



# Can Wiring (GENESIS | EQUUS)

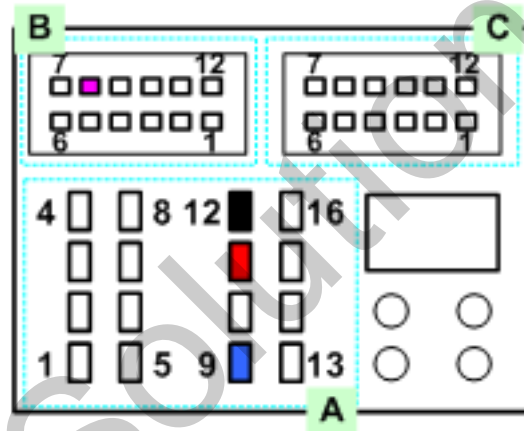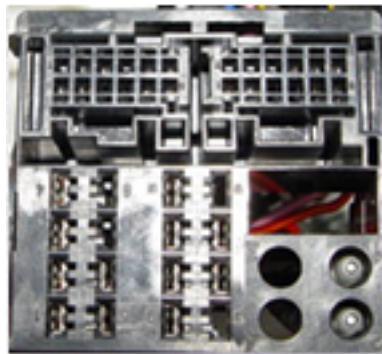

- A 09 (BLUE): CAN LOW
- A 11(RED) : CAN HIGH
- A 12 (BLACK): GND
- A 15 (RED): B+
- B 08 (PINK): ACC

# ON / OFF Operation (GENESIS | EQUUS)




GENESIS

VOICE BUTTON :

2 sec press for Motion free ON/OFF

The operation is toggled.

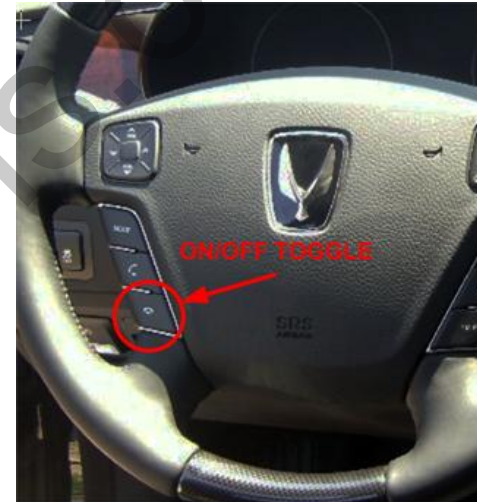

EQUUS

TEL OFF BUTTON :

2 sec press for Motion free ON/OFF

The operation is toggled.