


Camry (LHD)

Touch 2 with Go (Plus)


Installation instructions

PZ490-00336-*0 +EU MAP

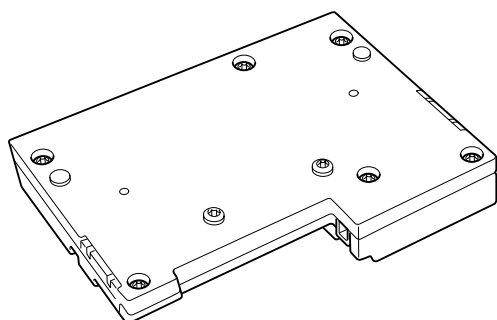


A 86840-**** EU HIGH

1x

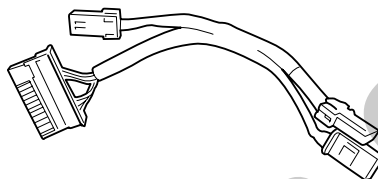

B 86842-12010

1x



C 86705-02070


1x



D 90153-W0001

6x


PZ490-00338-00

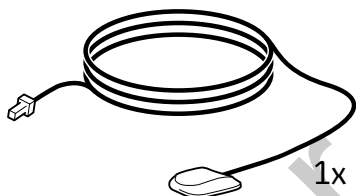


1x



1x








5x





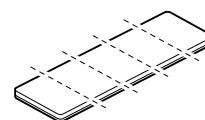






FOAM PAD

1x









E

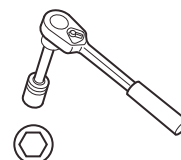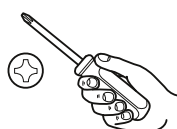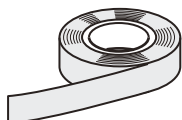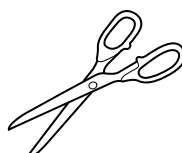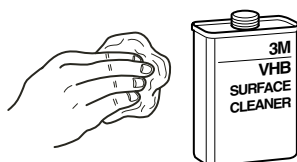

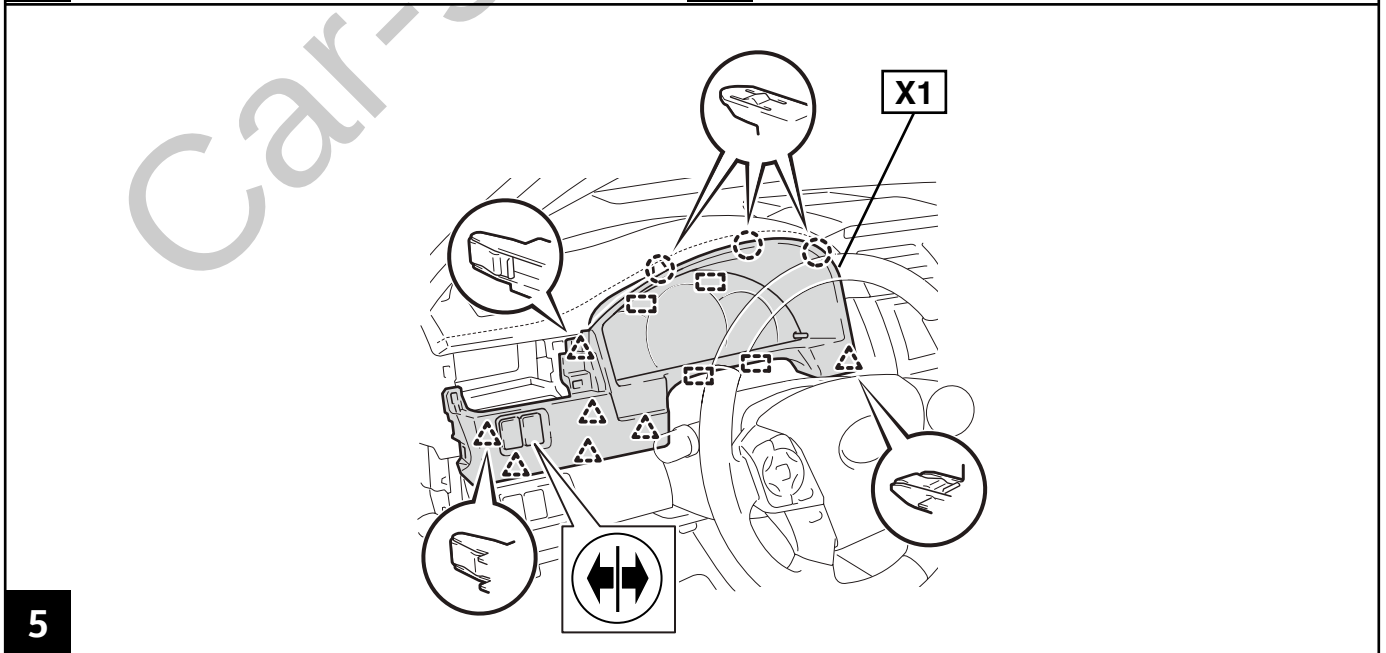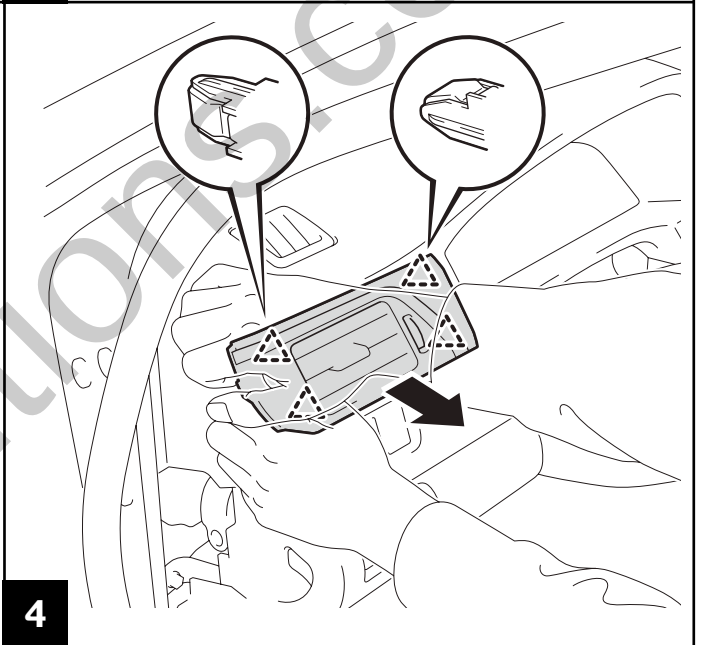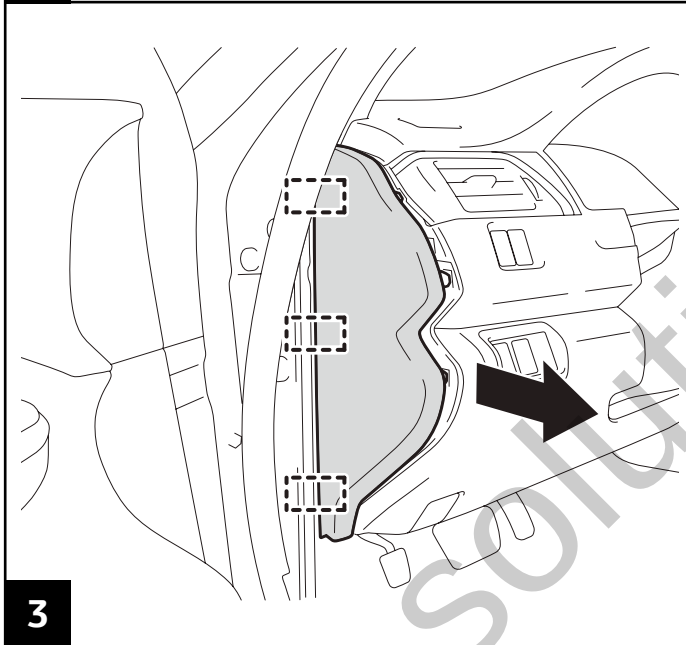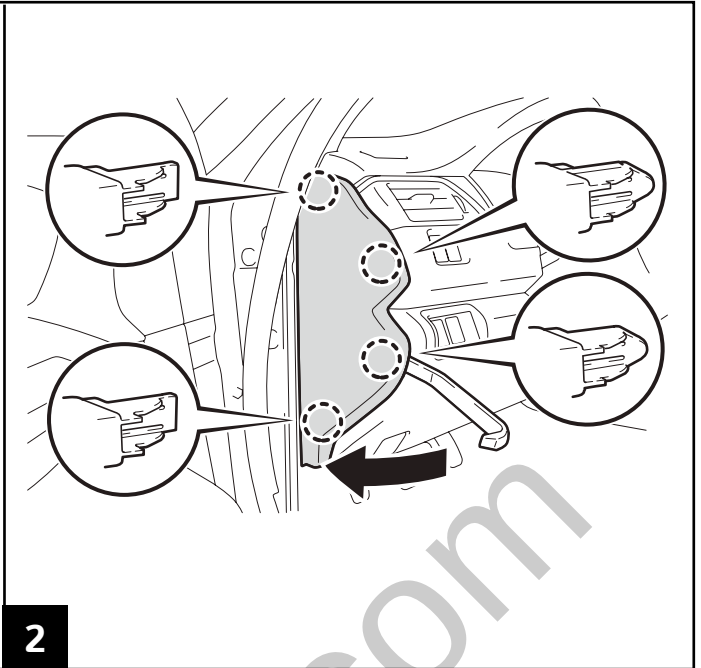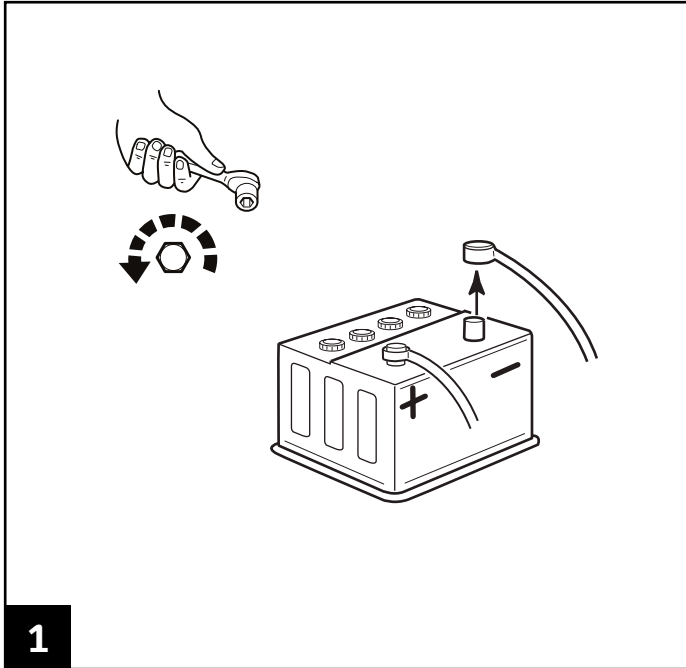


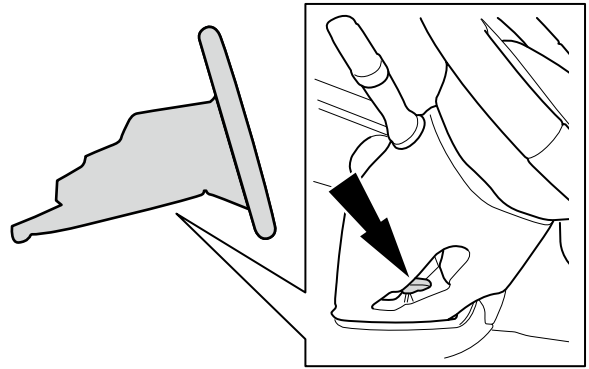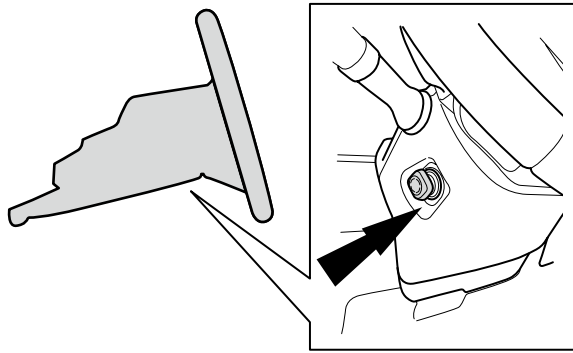


6

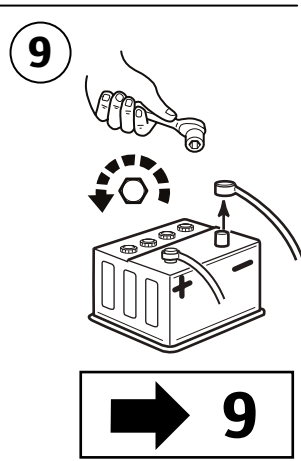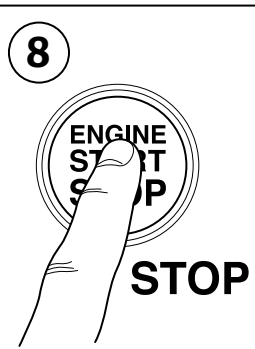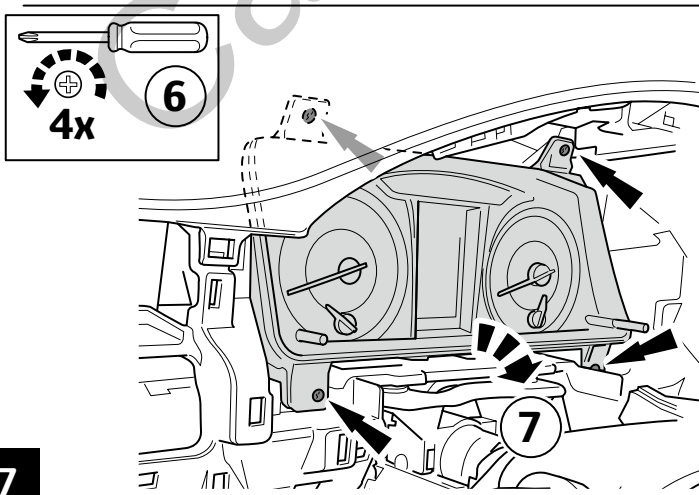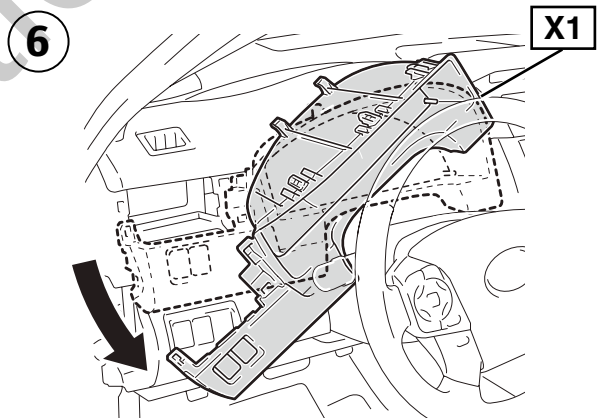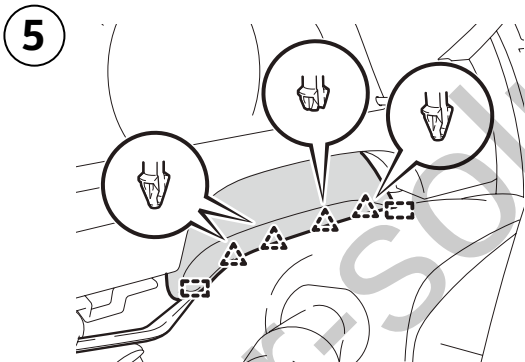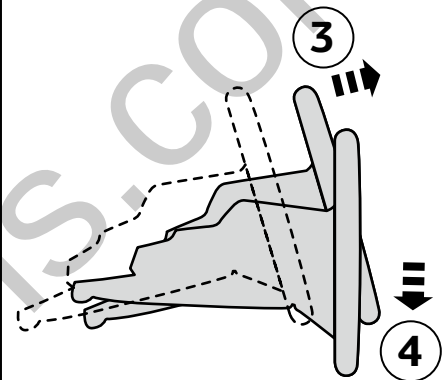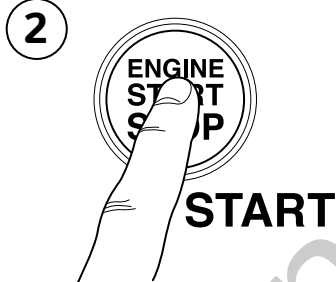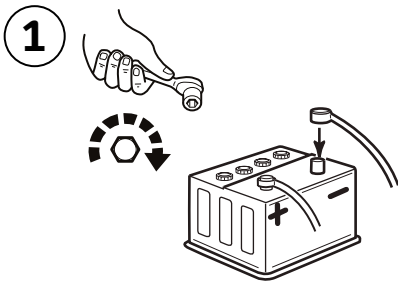




7





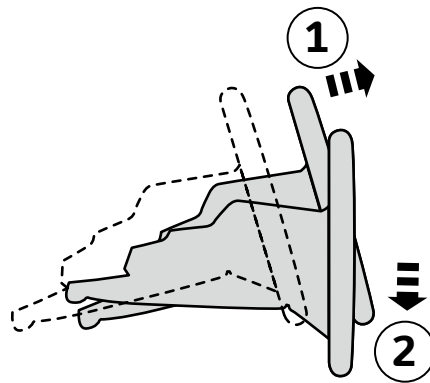






3


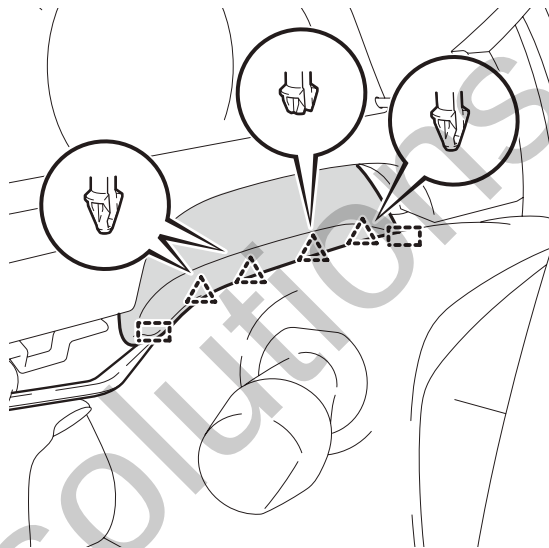





4

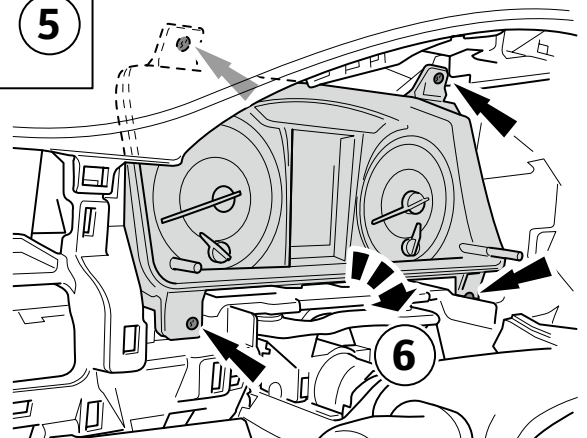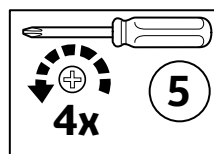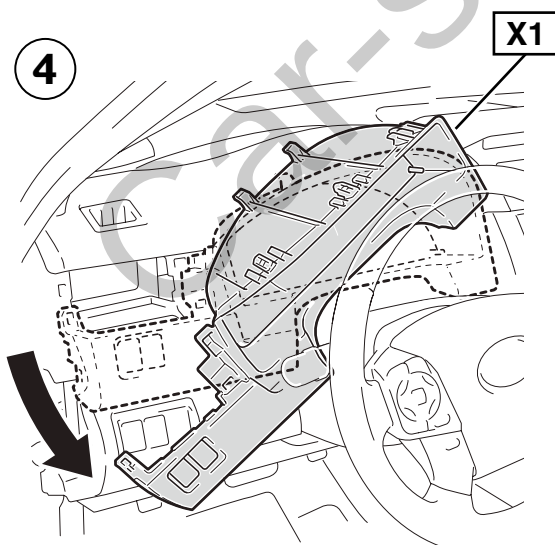

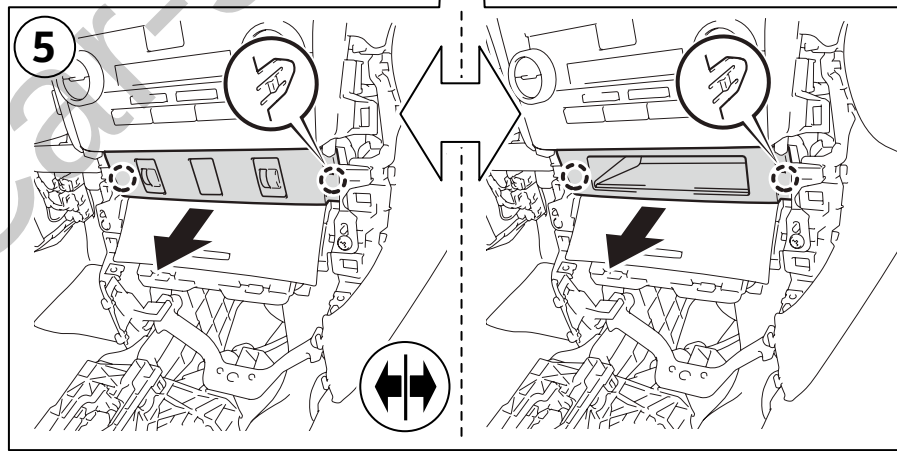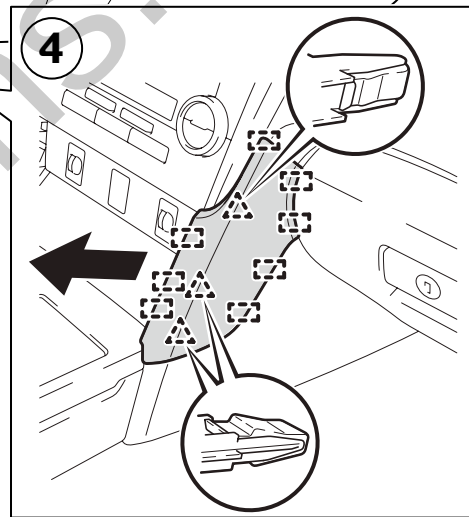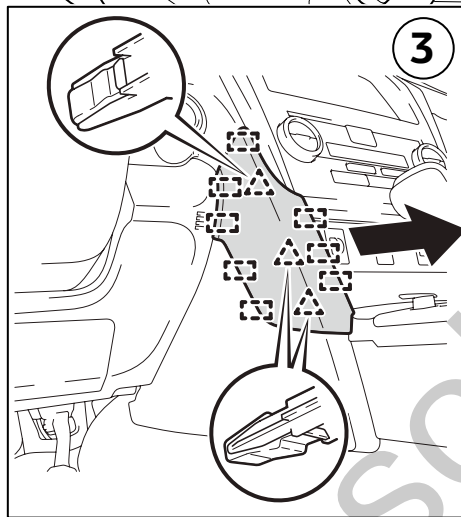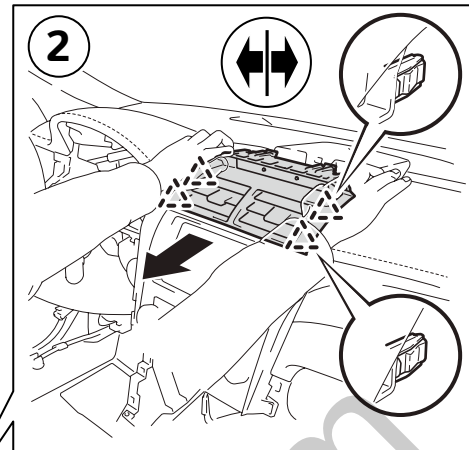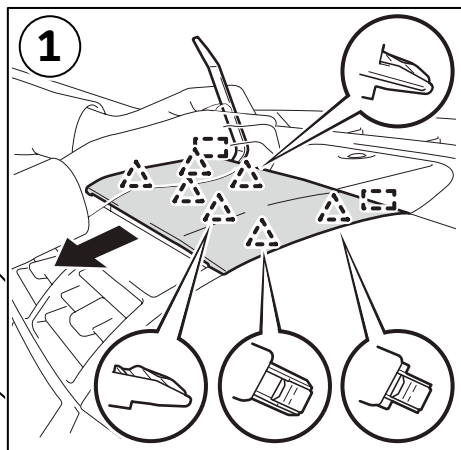


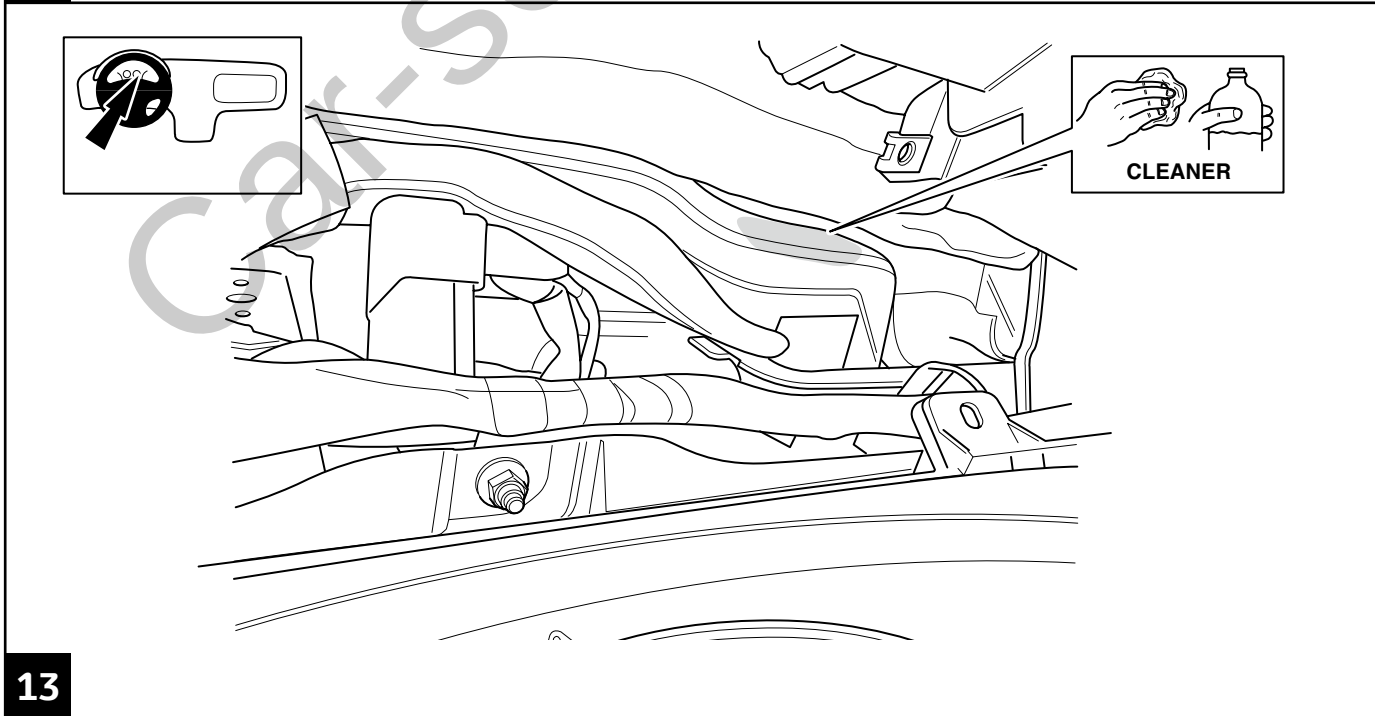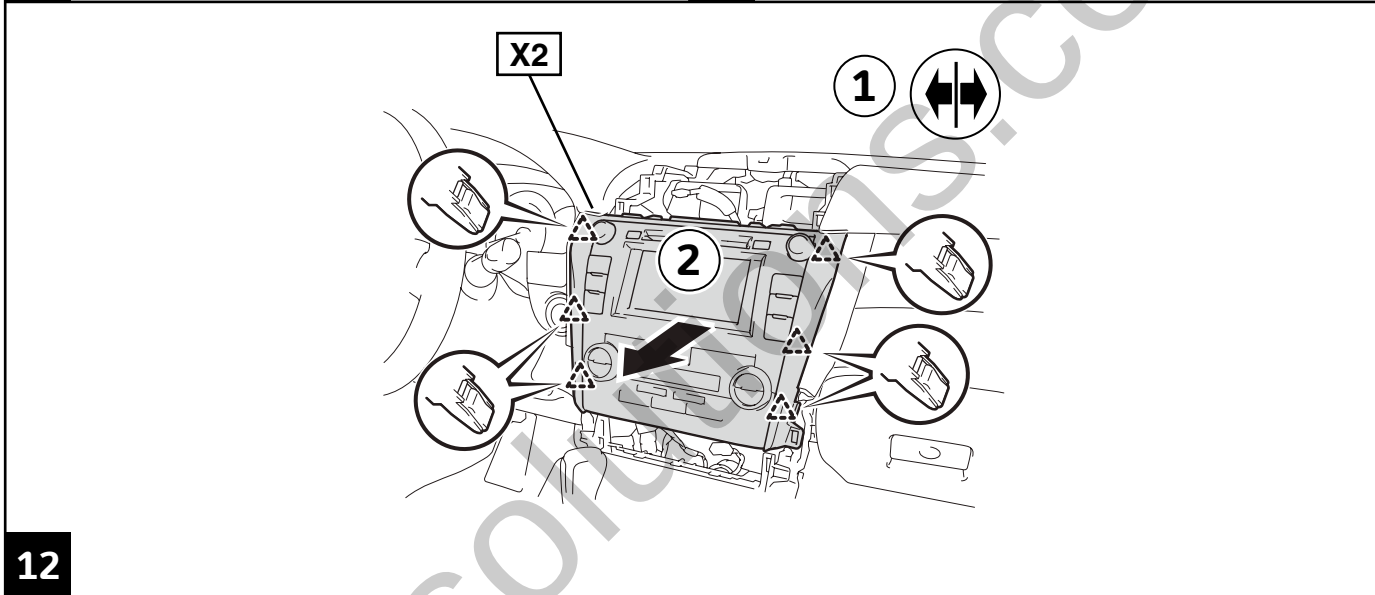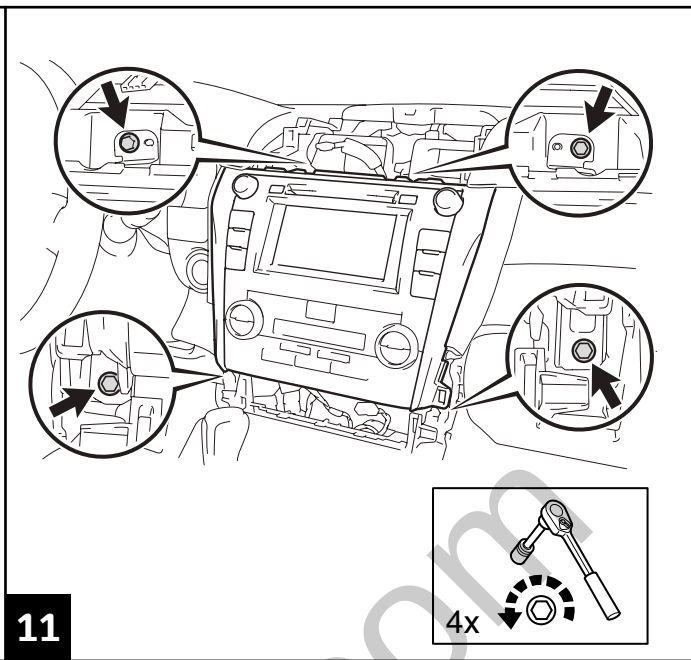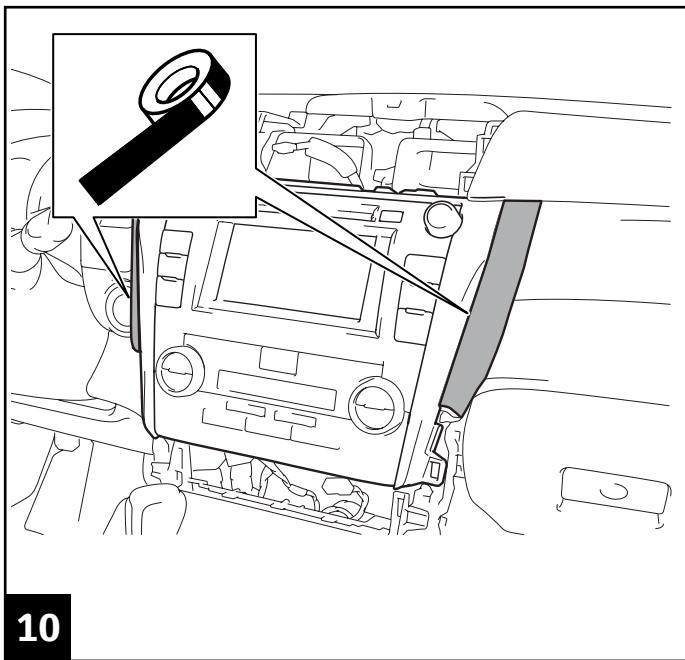


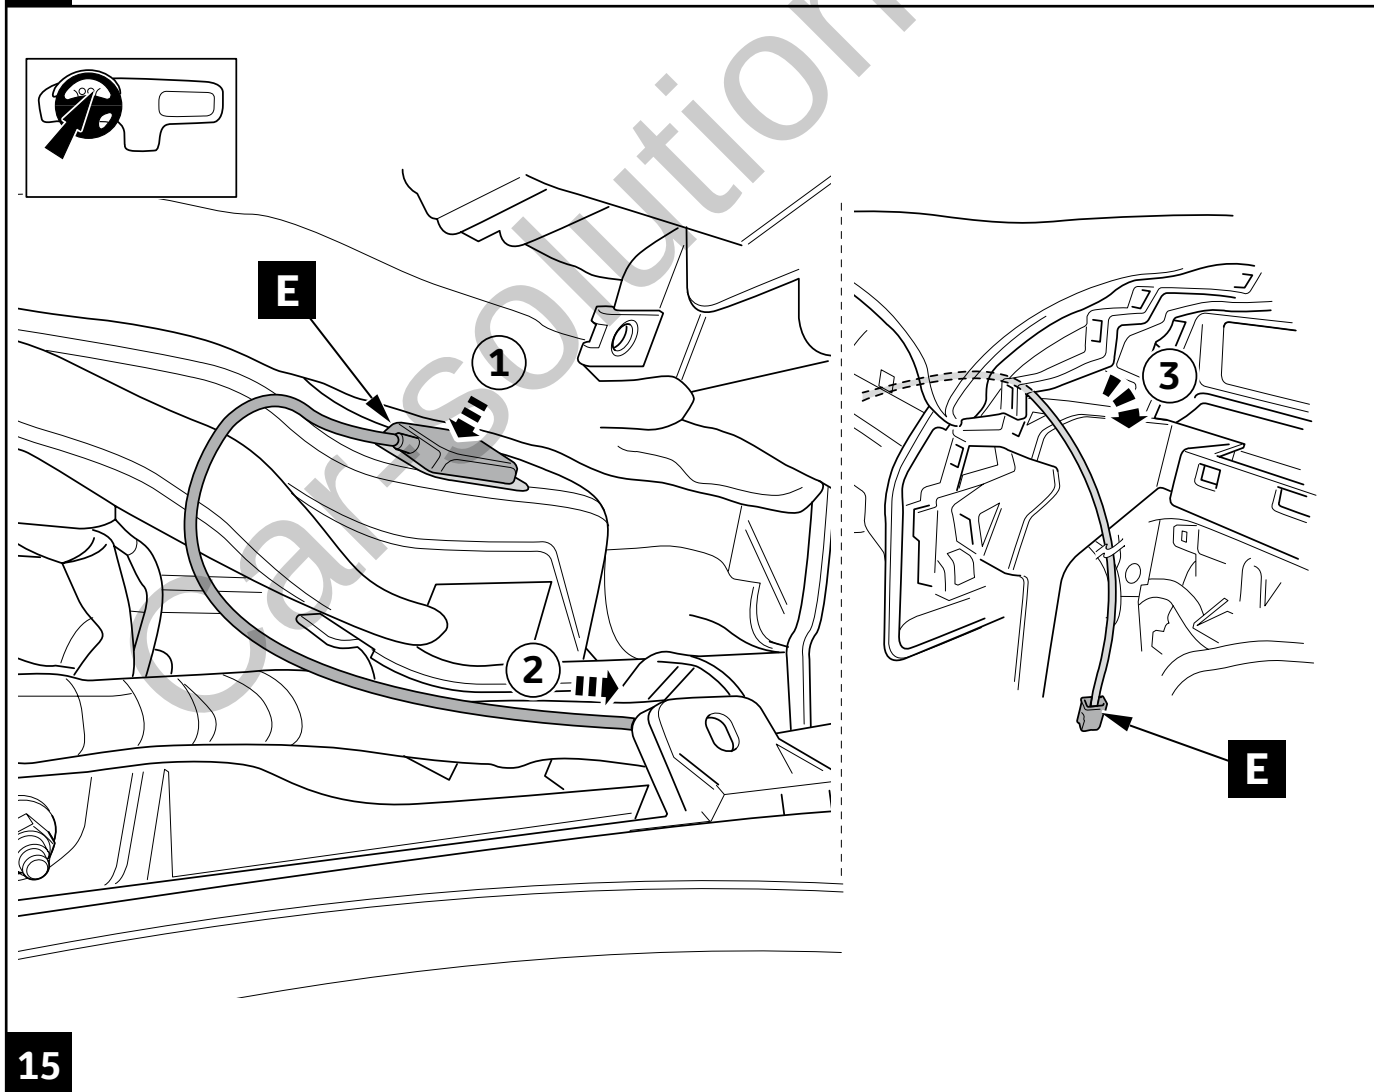
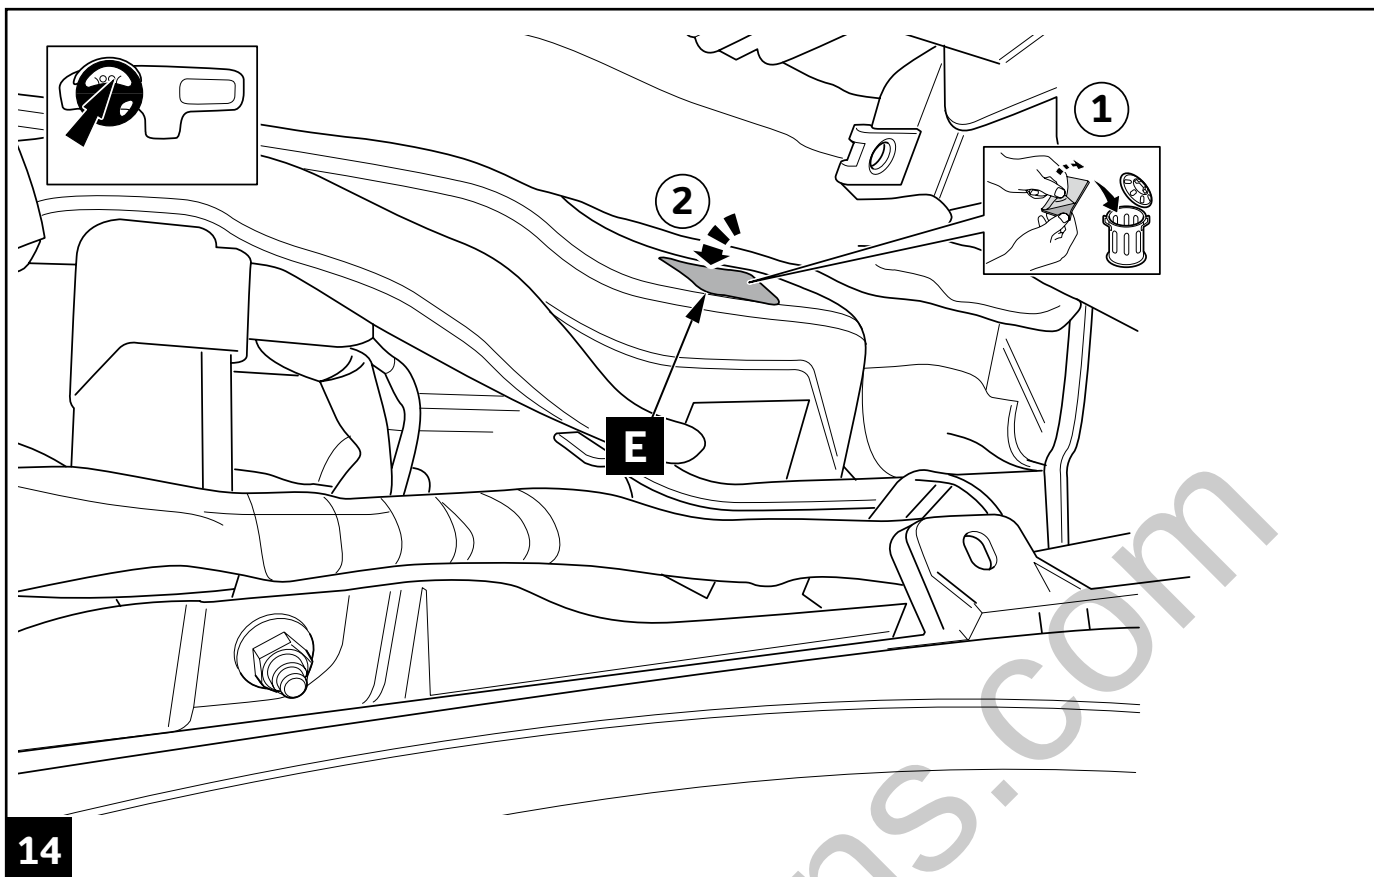


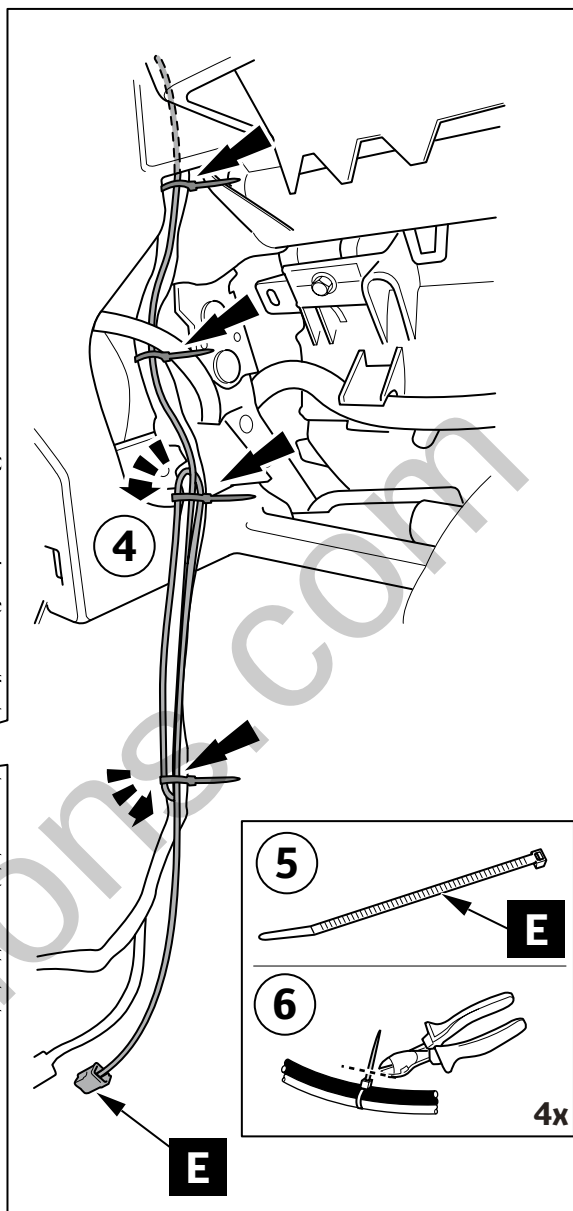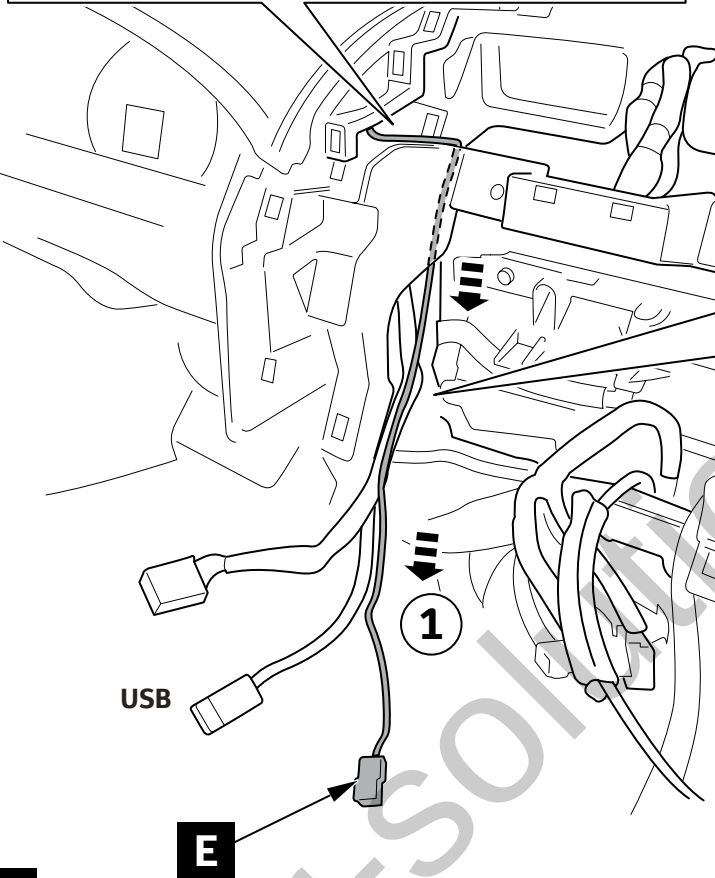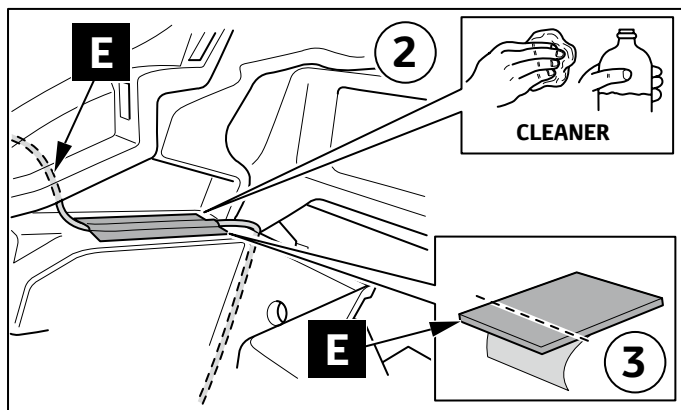


16

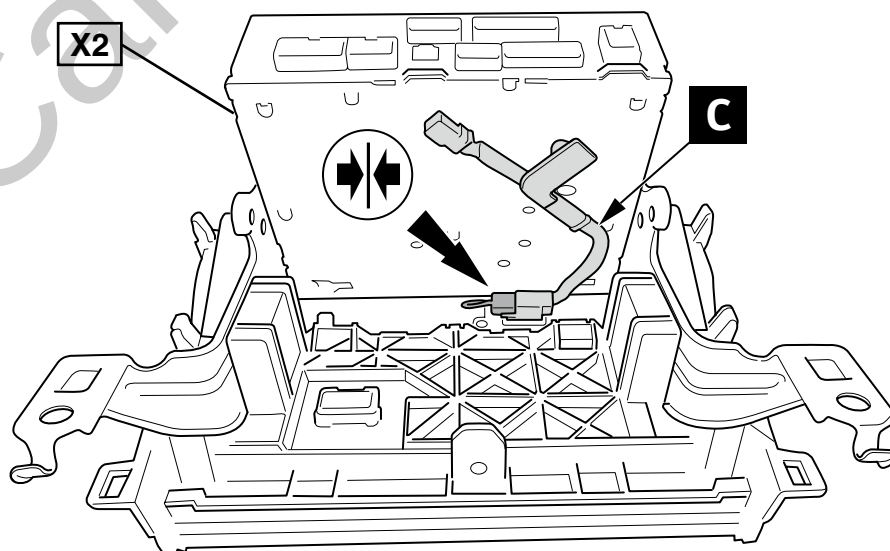


17

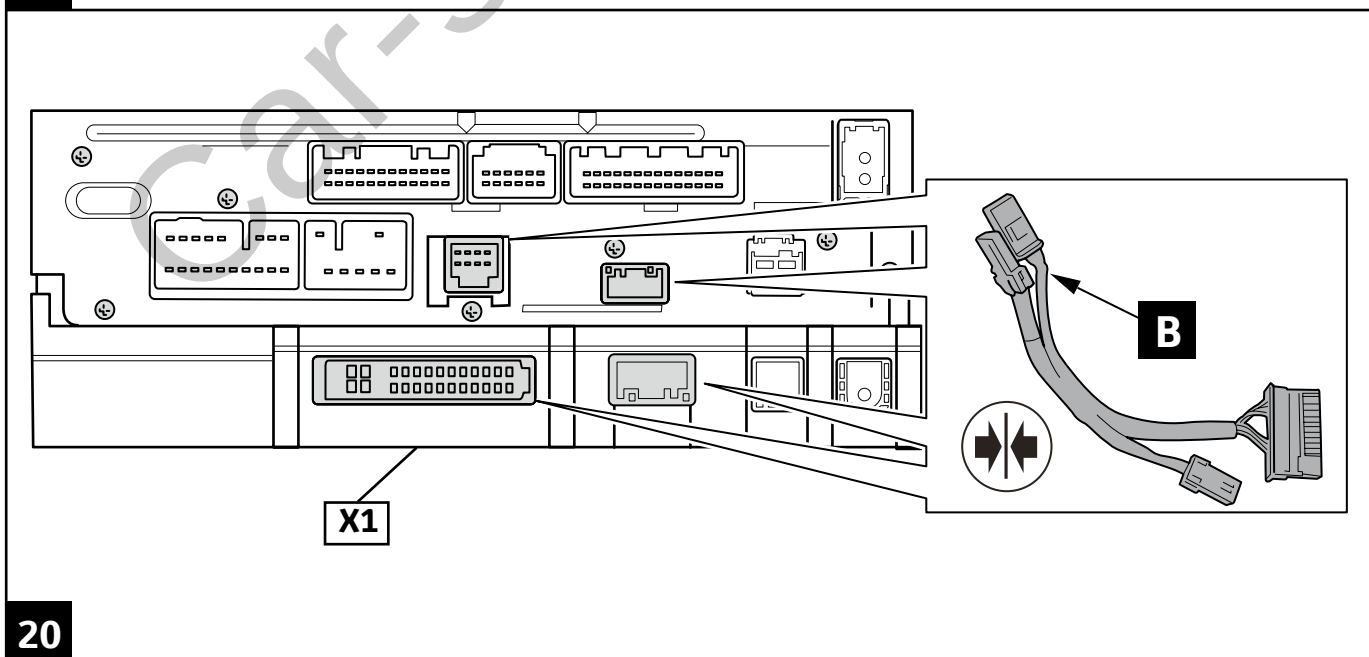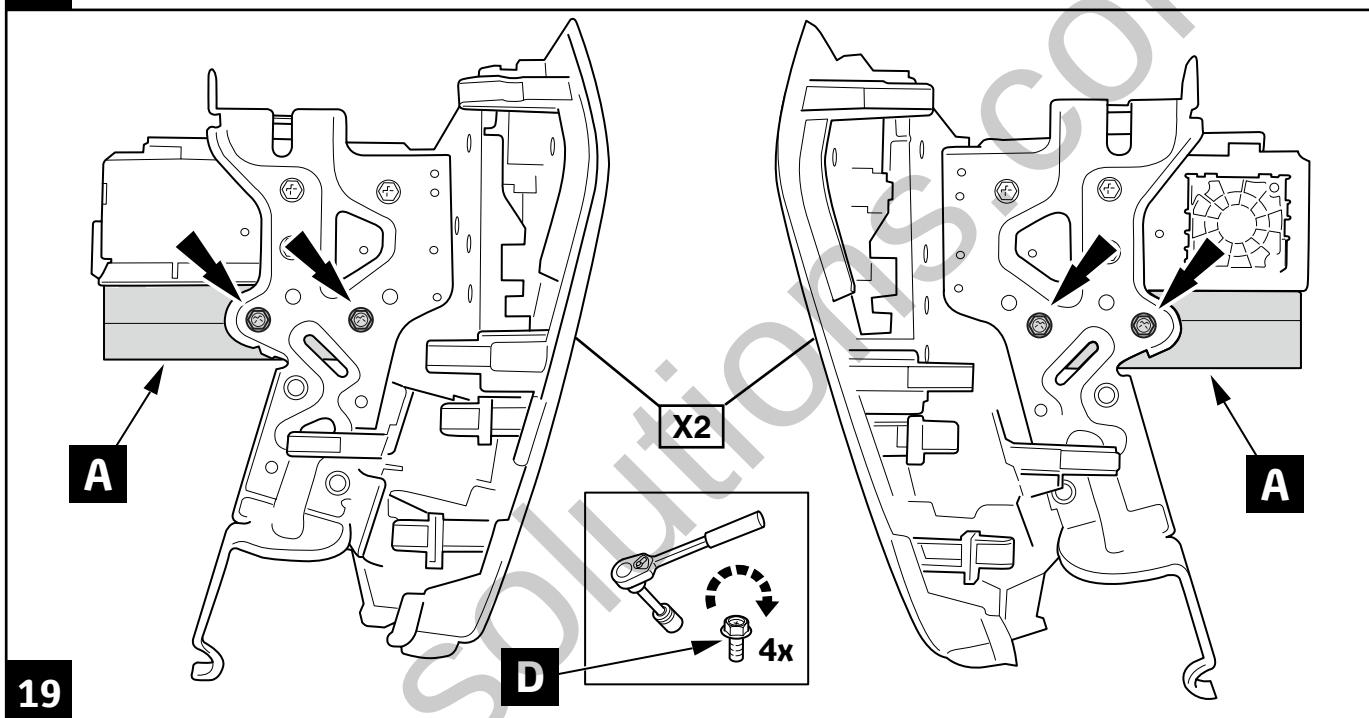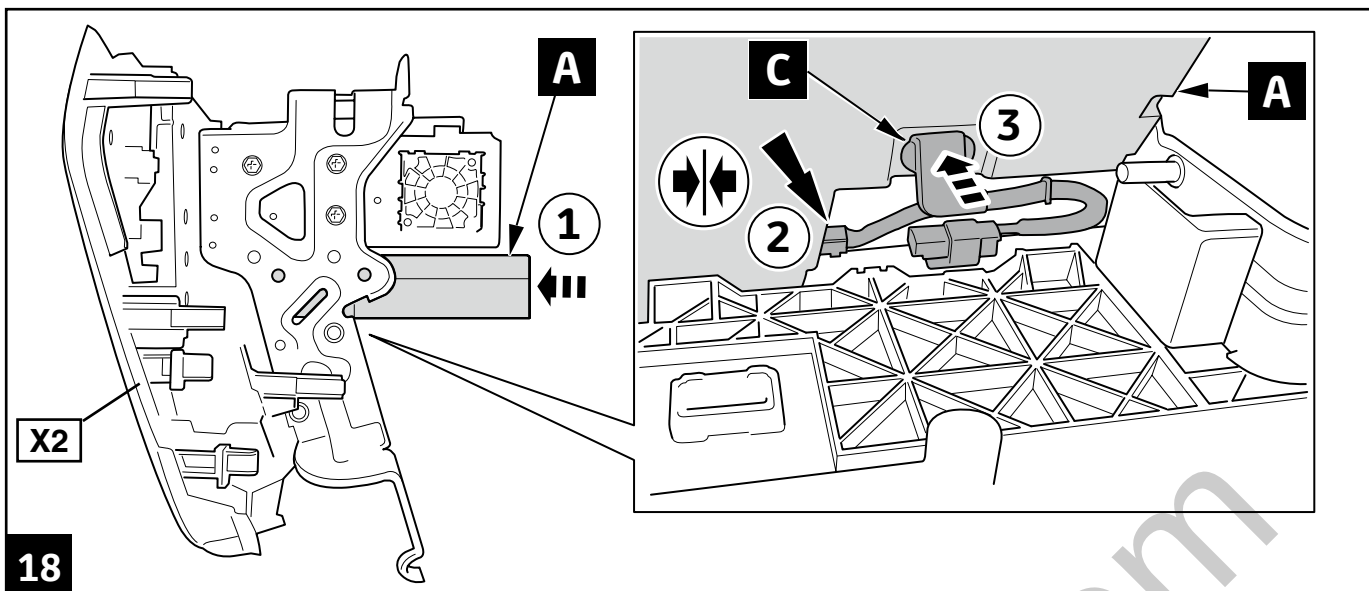

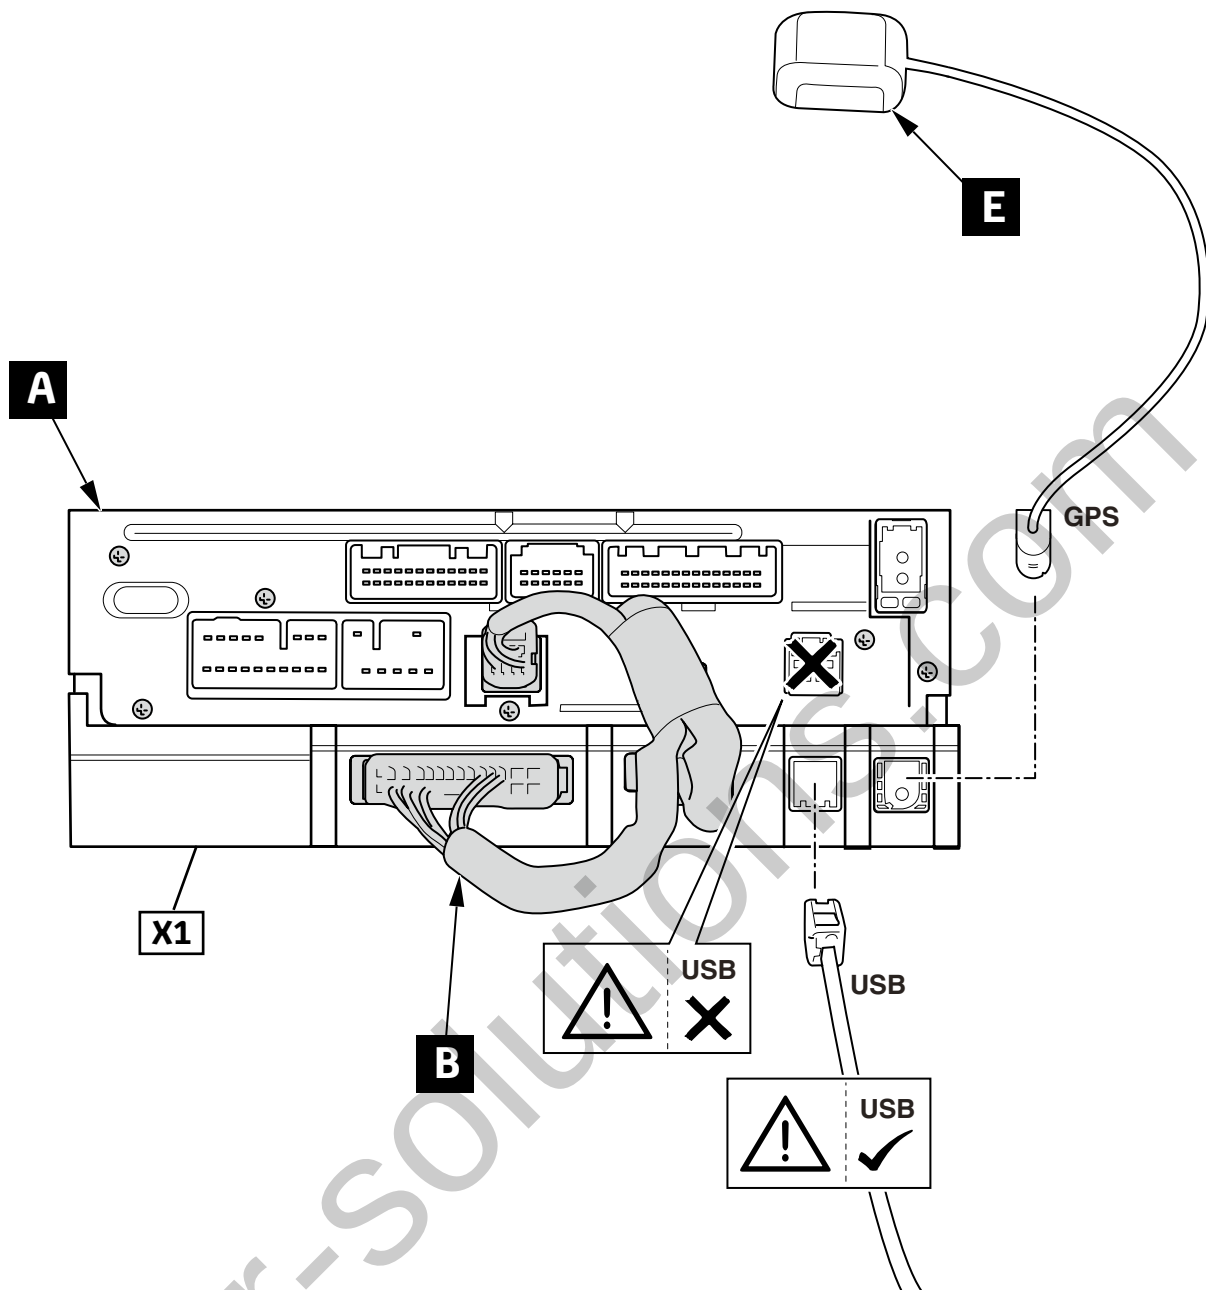

21











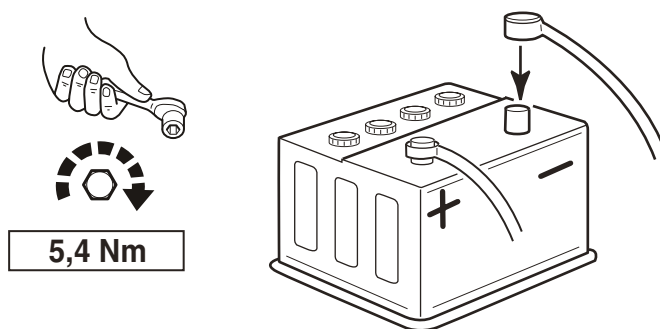


22

CHECK SHEET

Model / Year Camry 2014/09 LHD Touch 2 with Go (Plus)

VIN n°

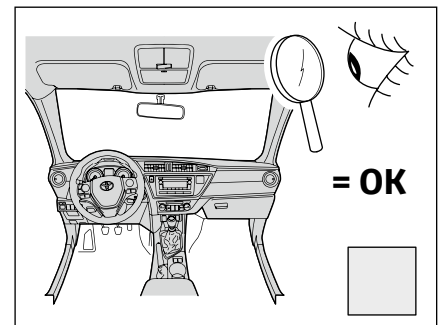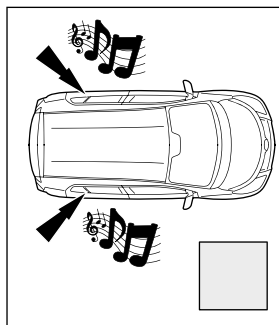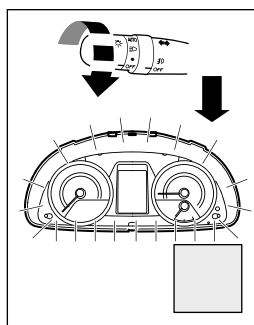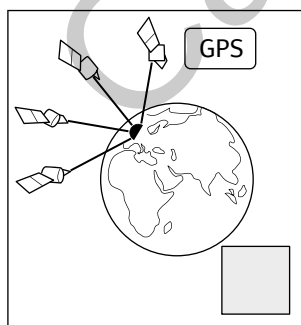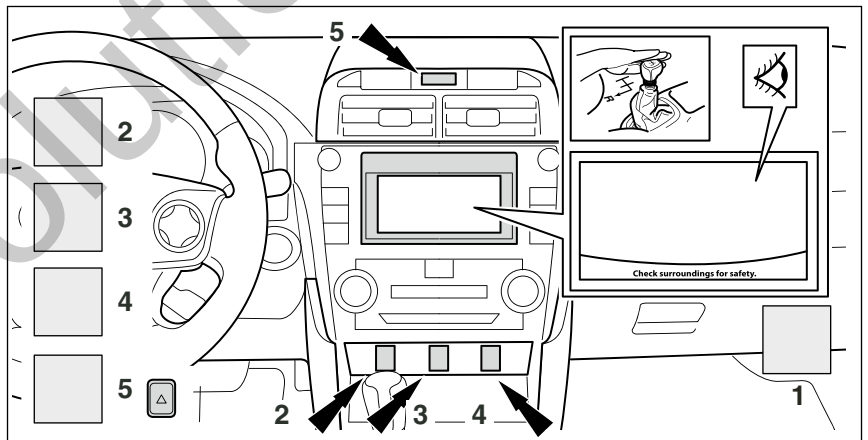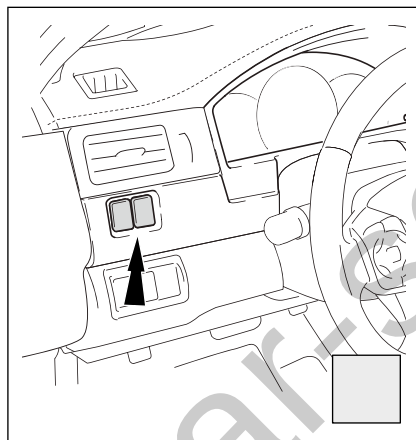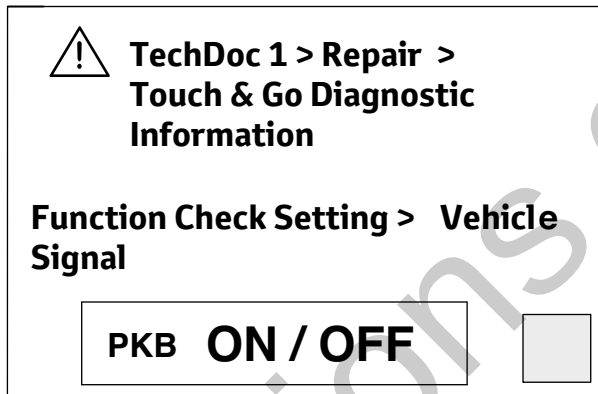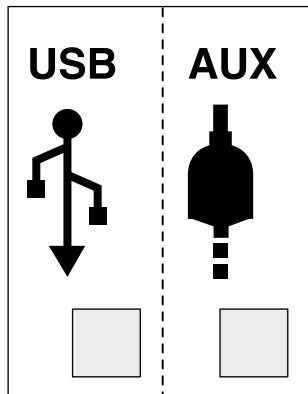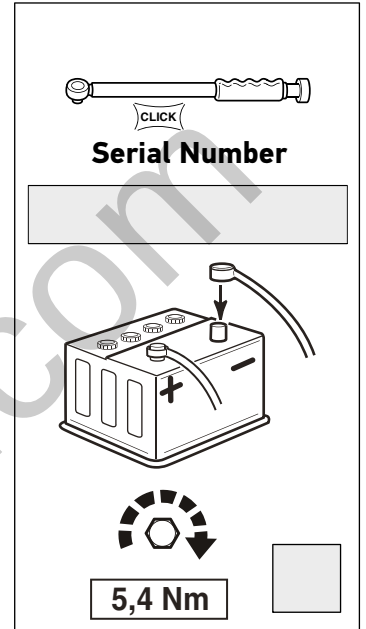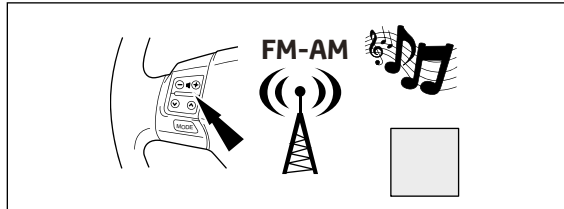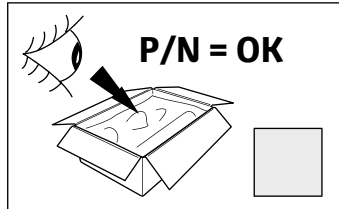

Installation Date:

Technician Name & Signature :

Stamp: