

# Q-Roi Golf

Instruction Manual

# Index

- 1. General spec
- 2. System Diagram
- 3. Components
- 4. Original button use
- 5. Setting up Dip S/W
- 6. Setting up FACTORY MENU
- 7. Cautions before Installation
- 8. Installation Diagram
- 9. Installation
- 10.Quality Warranty

# **Warning / Precautions!**



 Do not modify, dismantle or unintended operation this system outside Q-roi After Sales. Damage occurred by unintended operation Warning may cause Q-roi After Sales service void.



• Always wear seatbelt. When the vehicle is suddenly stop can cause injury.


**Varning.** Remove dust, oil, and waste on the display.

- Incidental damages (including, without limitation, consequential damages due to the use of this unit and the dead loss of business profit, changes, loss of memory contents, etc) will not be taken responsibility.
- Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.
- The engine is off while the system operates for long time, battery may be discharged.
- This product is not a substitute for your personal judgment. Any route suggested by this navigation system may never supersede any local traffic regulation. Do not follow route suggestions if the navigation system instructs you to perform an unsafe or illegal maneuver.

# 1. General Spec

	,	
os	Android 4.2.2 (Jelly Bean)	
CPU	Telechips TCC8930 (1GHz Cortex A9 DualCore)	
Display	OEM LCD	
Internal Memory	DDR3 1GB RAM + 8GB eMMC	
External Memory	SDHC Slot Support (up to 64GB)	
Function	A/V Input x 3, Rear Cam Input x 1, CAN(Controller Area Network) x 2, Mic x 1, External Speaker x 1 (mono), External Audio Out x 1(Car Aux),	
Output	LVDS (thru Video Interface), RGB (thru Sub-Board)	
Touch Type	Resistive Touch	
GPS	SiRF	
Resolution	800*480 or 1024*480	
USB	USB 2.0 x 5 (USB x 4, OTG USB x 1)	
Input Voltage	12V	
Temperature	operating 0 C to 60 C	
	Storage -20 C to 60 C	
Languages	multi-languages	

# 2. System Diagram

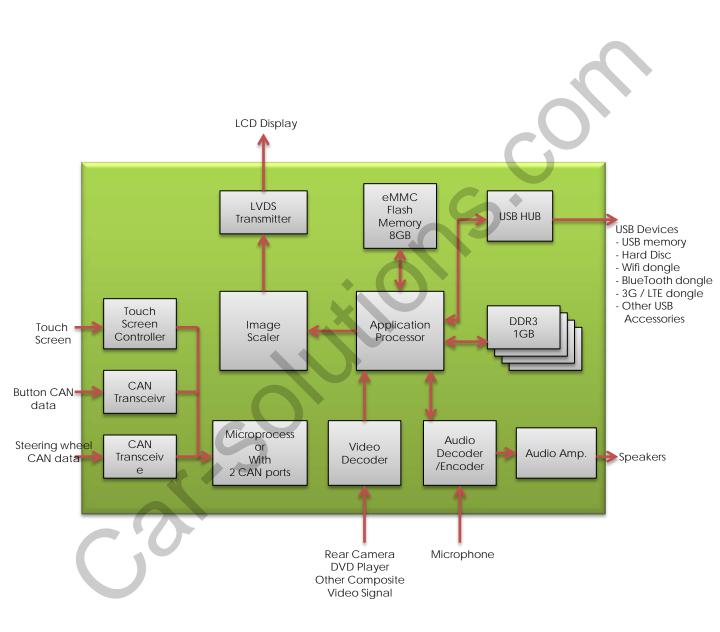

## 3. Components



3G dongle \* 1ea(Option) (ETCETC0116)



WIFI dongle \* 1ea(Option) (ETCETC0110)



Sub-Board \* 1ea



CAN IN/OUT cable \* 1ea (HARETC0076)



(HALVDSC0024)





Power cable 16P \* 1ea (HPOWER0041)



GPS Antenna \* 1ea (GPSANT0006)



Multi cable \* 1ea (HARETC0068)







(HARETC0027)



Speaker \* 1ea (SPEAKE0001)



Microphone cable \* 1ea (MICPHO0001)



REAR CAMERA cable \* 1ea (HARETC0002)




MODE switch cable\* 1ea (HARETC0001)

## 4. Original button use

#### **% GOLF**

Press and hold
: Q-ROI Reset ——
Use 'Mute' button
to reset in case no
such button

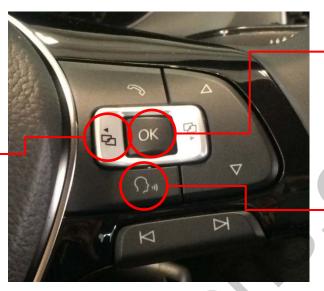


<Left side buttons of steering wheel>

#### \*New VW car Press and hold: Mode change (Q-ROI→Original screen)

Press and hold: Mode change (Q-ROI↔Original screen)

#### **\* SKODA OCTAVIA**

Press and hold : Mode change (Q-ROI↔Original screen)

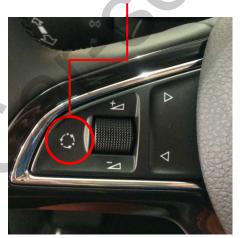

<Left side buttons
Of steering wheel>


Press and hold: Q-ROI Reset




<Right side buttons Of steering wheel>

# 5. Setting up Dip Switch

#### \* Dip Switch Setting (Main board)



: Old GOLF, SKODA OCTAVIA



: New SKODA OCTAVIA



: New VW GOLF, PASSAT

#### Dip Switch Setting (I/F)




1	Setup Car	OFF : Old SKODA, GOLF ON : New SKODA, GOLF, PASSAT	
2	Setup brightness	OFF : Light ON : Dark	
3	Setup Model	OFF : QNAVI(Win CE) ON : Q-ROI(Android)	
4	Setup resolution	OFF : Low resolution ON : High resolution	

\* MAIN BOARD : Steering wheel button, I/F : Monitor setting up

\*\* Please make sure to disconnect the power cable of the interface and reconnect the power cable again to apply the dip switch setting whenever changing DIP switch. Otherwise, DIP switch setting will not be applied.


www.car-solutions.com

## 6. Setting up Factory Menu

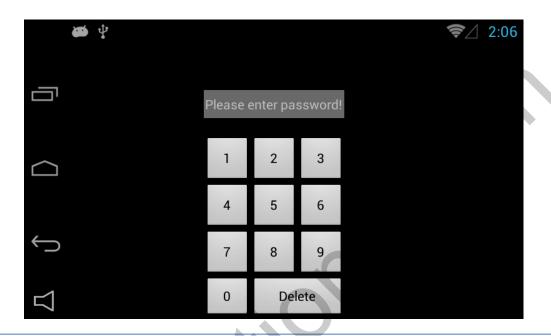

- **※** APPS→FACTORY SETTING
- ① Put Password and change program upgrade and set-up of external device. (Only Installers are authorized)
  - \* Please contact the manufacturer to get Password.

## 6. Setting up Factory Menu

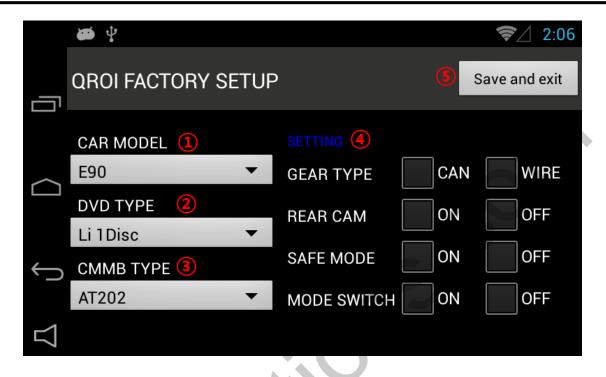

- ① CAR MODEL: No use
- 2 DVD TYPE: Only for DVD connected to A/V

(Connect IR-AV1 to DVD to use DVD as touch Screen)

- ③ CMMB SELECT: Select DTV model (Only Chinese)
- SETTING
  - GEAR CHECK TYPE: Detecting rear camera via either CAN or Rear Lamp.
  - REAR CAM: Put "On" External rear camera

Put "Off " - OEM Camera


- SAFE MODE: Either Enable or Unable to watch Video while driving
- MODE SWITCH: NO use
- (5) SAVE & EXIT: Save and Reboot

### 7. Cautions before Installation

- Ignition key should be taken off before starting installation, interface power connection must be the last step in installation.
- Power cable should be separated when connecting interface.
- Should be no any electronic devices or magnetic pole around installation place.
- All steps of installation should be done by well-trained specialist.
- Dismantling without manufacturer's permission can not be guaranteed, (No permission to break attached label on the board.)
- Kindly check all parts are in the box, when receiving the product, if anything missing, inform to the supplier or manufacturer.
- Install GPS away from electromagnetic devices such as black boxes, Hi-Pass and etc.
- Advisable to Install GPS at the edge of dash board or a front window or a rear window.
- Install GPS antenna mounted on window or roof facing to Sky.
- According to our sales policy, any problems caused by user's mistake, careless can not be guaranteed.

### 8. Installation Diagram


- \*1. Remove Original LCD cable from Monitor and Connect OEM LCD cable to Sub-Board "LCD-OUT".
  - 2. Connect Provided LCD cable to Behind of monitor.

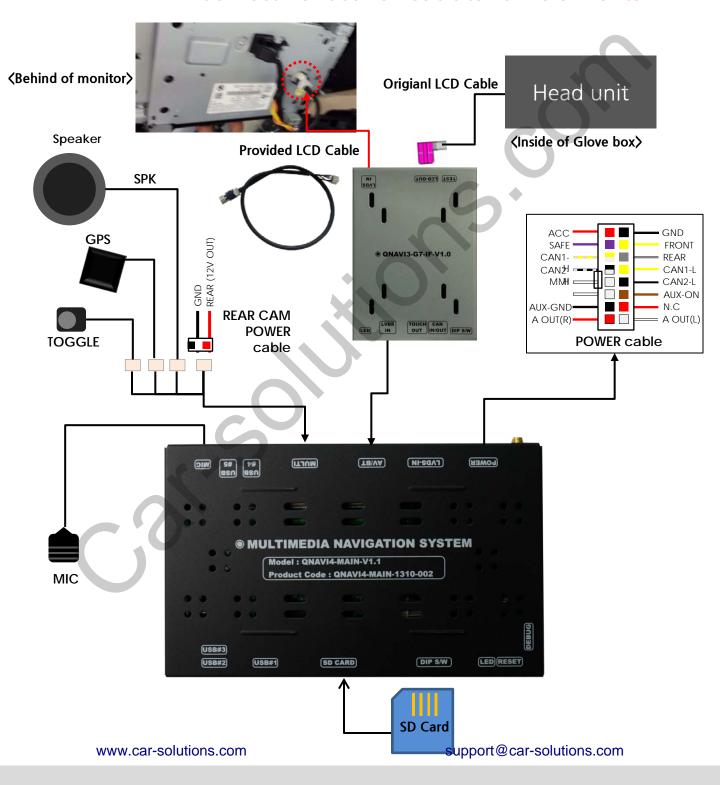

### 9. Installation


#### 8.1 Connection between a monitor and an interface

- \*1. Remove Original LCD cable from Monitor and Connect OEM LCD cable to Sub-Board "LCD-OUT".
  - 2. Connect Provided LCD cable to Behind of monitor.

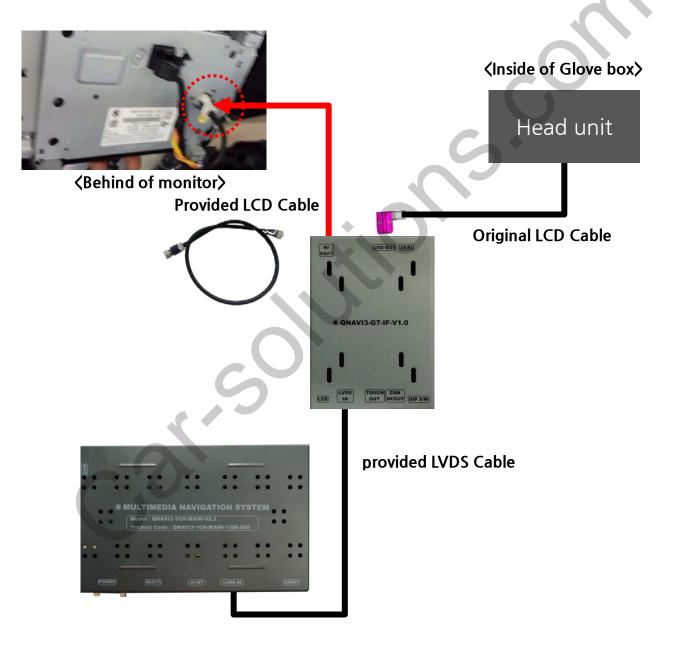

### 9. Installation

#### 8.2 Connection of CAN Wire -1

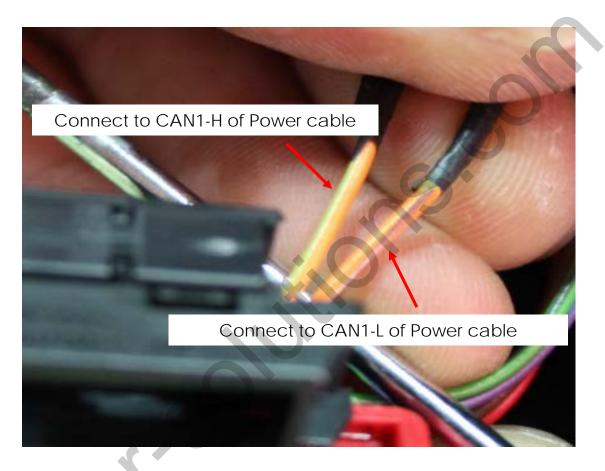

You should be able to find CAN wire behind the air-conditioner.

Connect CAN1-H(Orange + Green) to CAN-H(Yellow + White) of Car. Connect CAN1-L(Orange + Brown) to Original CAN-L(Yellow) of Car.

### 9. Installation

#### 8.3 Connection of CAN Wire-2



① Pull away the black connect from a monitor



2 Put away the black cap.



③ Connect the black connector covered in silver cap to the provided CAN IN/OUT cable covered in white cap.



**4** Connect the other side of the provided CAN IN/OUT cable to the port where OEM connector was removed.

## 10. Quality Warranty

This product has been tested and have passed under our strict quality control. If the failure occurred due to the carelessness of workmanship within one year after the purchase, we are responsible to repair free of charge.

Please bring this warranty to dealer whom you purchased this product from at the repair time. Should this warranty not presented, repair charged will be on customer. Please keep this warranty card.

Warranty				
Product name	QROI			
Warranty period	1 year	Purchase date (yy/mm/dd)		
Customer	Address			
	Name			
Dealer	Address			
	Name			