




1. Disconnect the connector from the main audio.

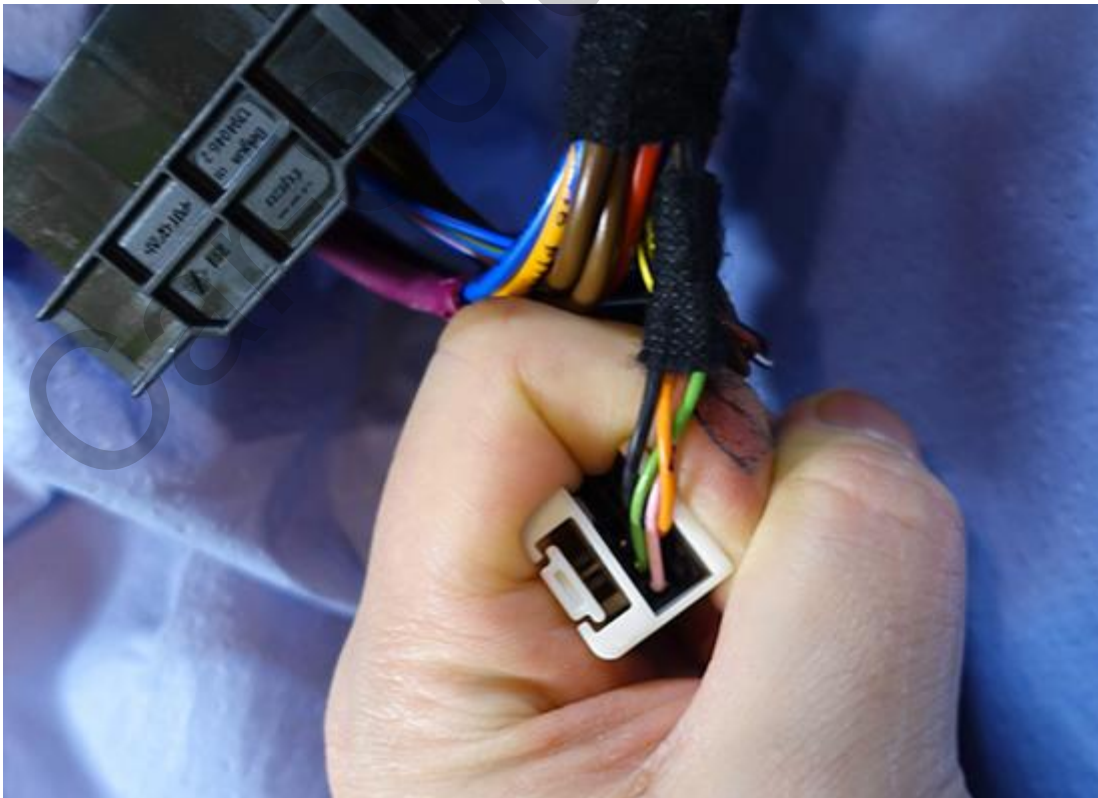

2. Disconnect the white jack from the main connector.

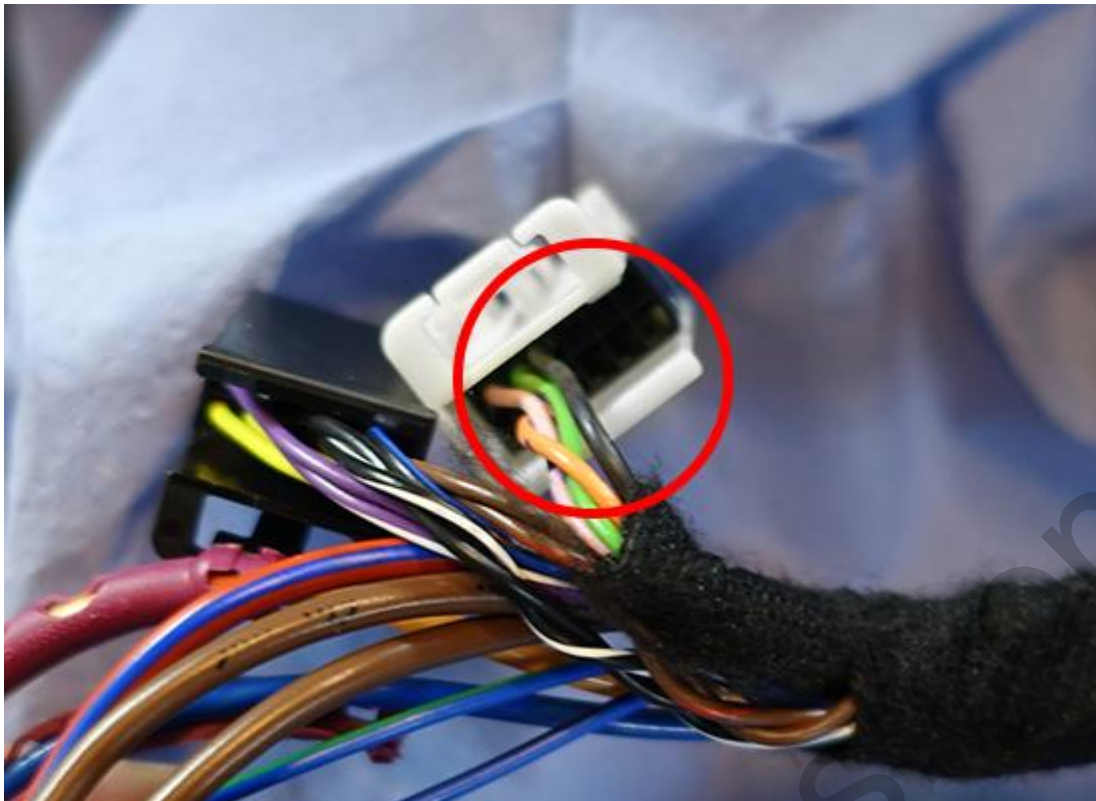

3. Disconnect the black jack from white jack. And, connect the pin of the AUX cable as shown in picture 4. (White, Black, Red)

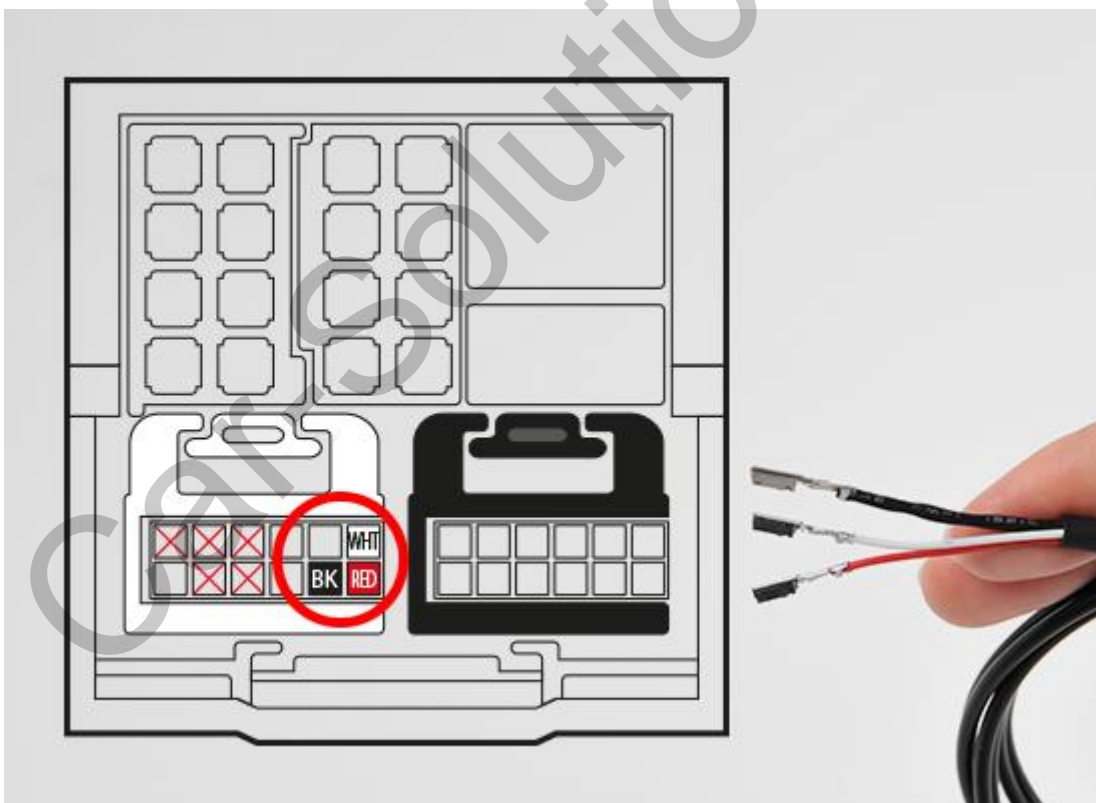

4. COMAND ONLINE NTG5. Quadlock connector, chamber A
  - \* Pin 6 ● (White) : Audio NF + left
  - \* Pin 12 ● (Red) : Audio NF + right
  - \* Pin 11 ● (Black) : Audio NF ground



5. When the OBD-NTG5 module is connected to the vehicle, the green LED flashes and the monitor screen reboots.



6. After confirming the AUX display of genuine screen, remove the module.