


## Mercedes-Benz NTG 5.0 Rearview Interface Installation Guide

### Wiring diagram:

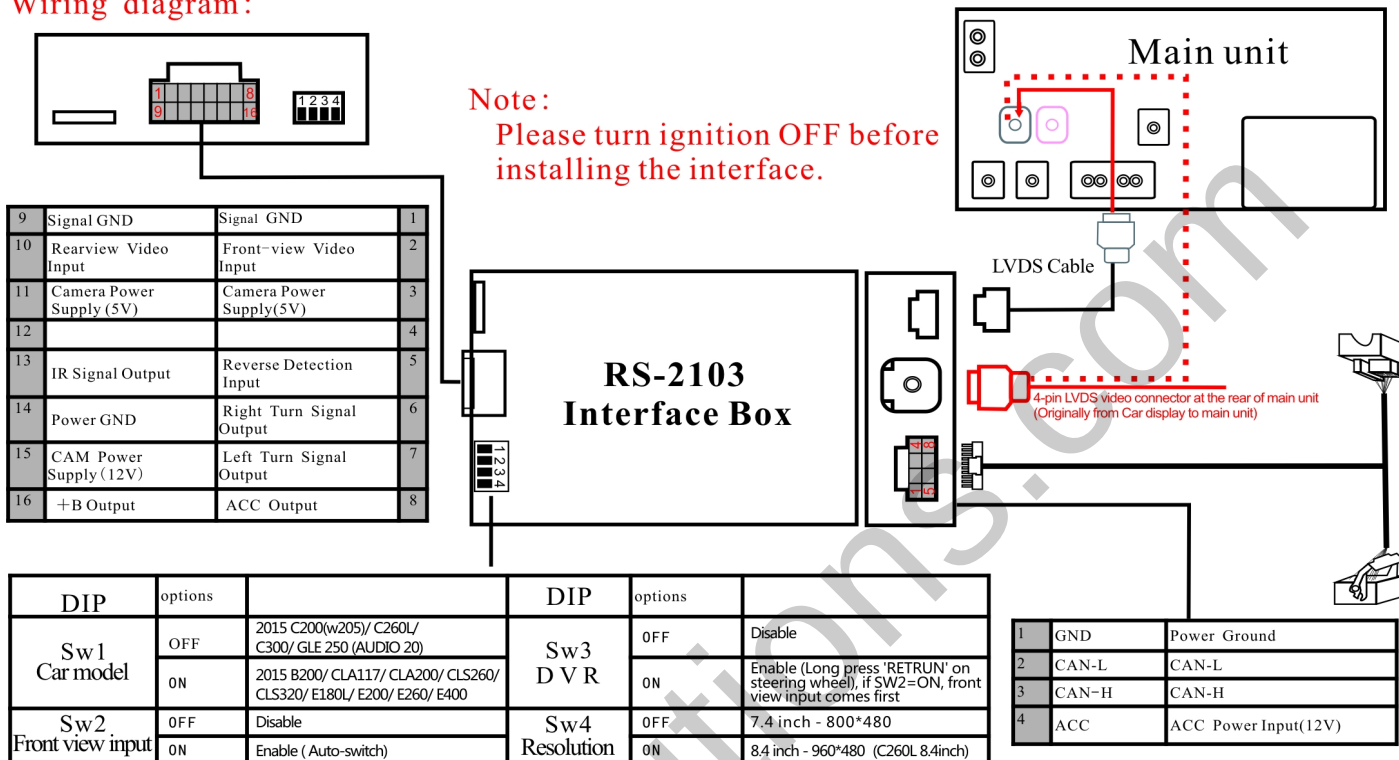

## Mercedes-Benz NTG 5.0 Rearview Interface Installation Guide


Model: RS-2103

Notice:


1. Keep flameout & unplug car key before installation
2. Please make sure this interface matches with your car model



1. Use special trim removal kits to take out of main unit (Position depends on car models)

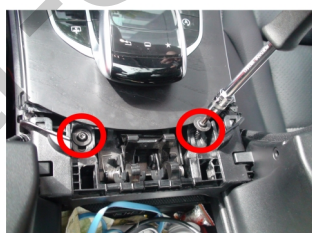

2. Take out of the screws.

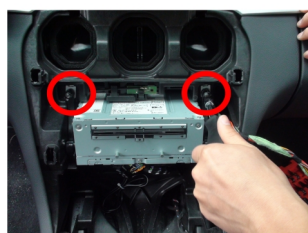

3. Get out of the COMAND main unit.




4. Unplug the 40 way Quadlock connector at the rear of main unit.



5. Plug&Play car original 40 way Quadlock connector to interface Quadlock one, and replace its position with another end of interface connector.



6. Unplug LVDS on the back of Head unit, and connect it to Interface.

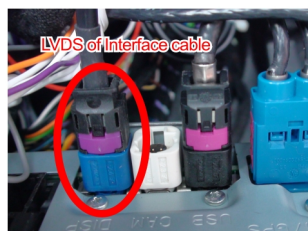

7. Replace original LVDS position with Interface LVDS cable.



8. Photo of interface with cables, (Rear view will be displayed when shift into Reverse gear)