

INSTALLATION MANUAL

Model No.	Car Item	Year & System	Features
CP-CIC	BMW 3 (2009-2012)	2005-2015	Wireless /wired Carplay+Android auto+ Front camera Input+rear camera input Mirror Link function is optional Wired version is optional
	BMW 5 AL-8233(2009-2010)		
	BMW 5 E60(2005-2010)		
	BMW 5 F10/F11(2011-2012)		
	BMW 5 F07 GT(2011-2012)		
	BMW 7 F01 F02(2009-2012)		
	BMW X1 E84(2009-2015)		
	BMW X3 F25(2011-2013)		
	BMW X4 F26(2011-2013)		
	BMW X5 E70 (2011-2013)		
	BMW X6 E71 (2011-2014)		



Power Plug

LVDS IN/OUT

VGA IN



Connect to the
original car knob

Connect to the 4PIN
cable that take out
from the original
car knob

4P female plug



Idrive 4PIN Knob convert cable

4P female plug

Connect to the 10PIN
cable that take out
from the original car
knob

Connect to the
original car knob



Idrive 10PIN Knob convert cable

Plug to the LVDS
connector that take
out from the car host

Plug to the LVDS
connector of the
car host

Plug to the LVDS plug
of the interface




The model with the knob for the 4PIN socket uses the Idrive 4PIN knob to connect the module to the module as shown below:



The model with the knob for the 10PIN socket uses the Idrive 10PIN knob to connect the module to the module as shown below:



Take out LVDS convert cable ,plug to the original car host as shown below:

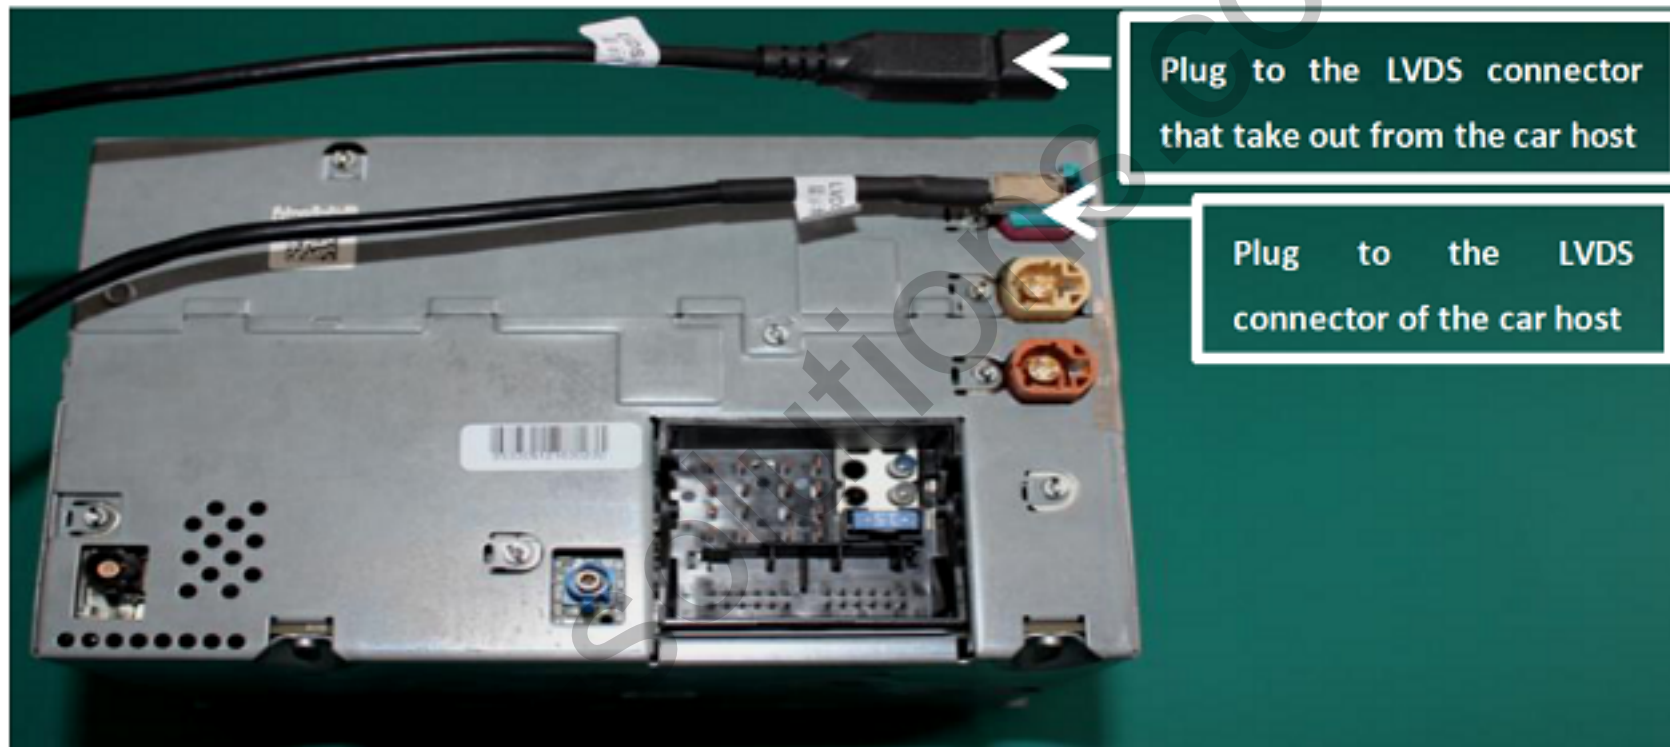

Car Model DIP:

BMW-CIC (6.5'');(8.8'');(10.25'')

Applied to	Model1	Model2	Model3	Resolution4	Resolution5
6.5 inch	H	L	H	H	H
8.8 inch	H	L	H	H	L
10.25 inch	H	L	H	L	H

Prepare before entering the system: first select the AUX front row in the original car interface, and adjust the AUX volume to the middle position to avoid adding system sound distortion; then press and hold the MENU button for 2 seconds to enter the system, other operations as shown below:

