
WJPO-1


Porsche PCM3.1 Wireless CarPlay Installation Diagram

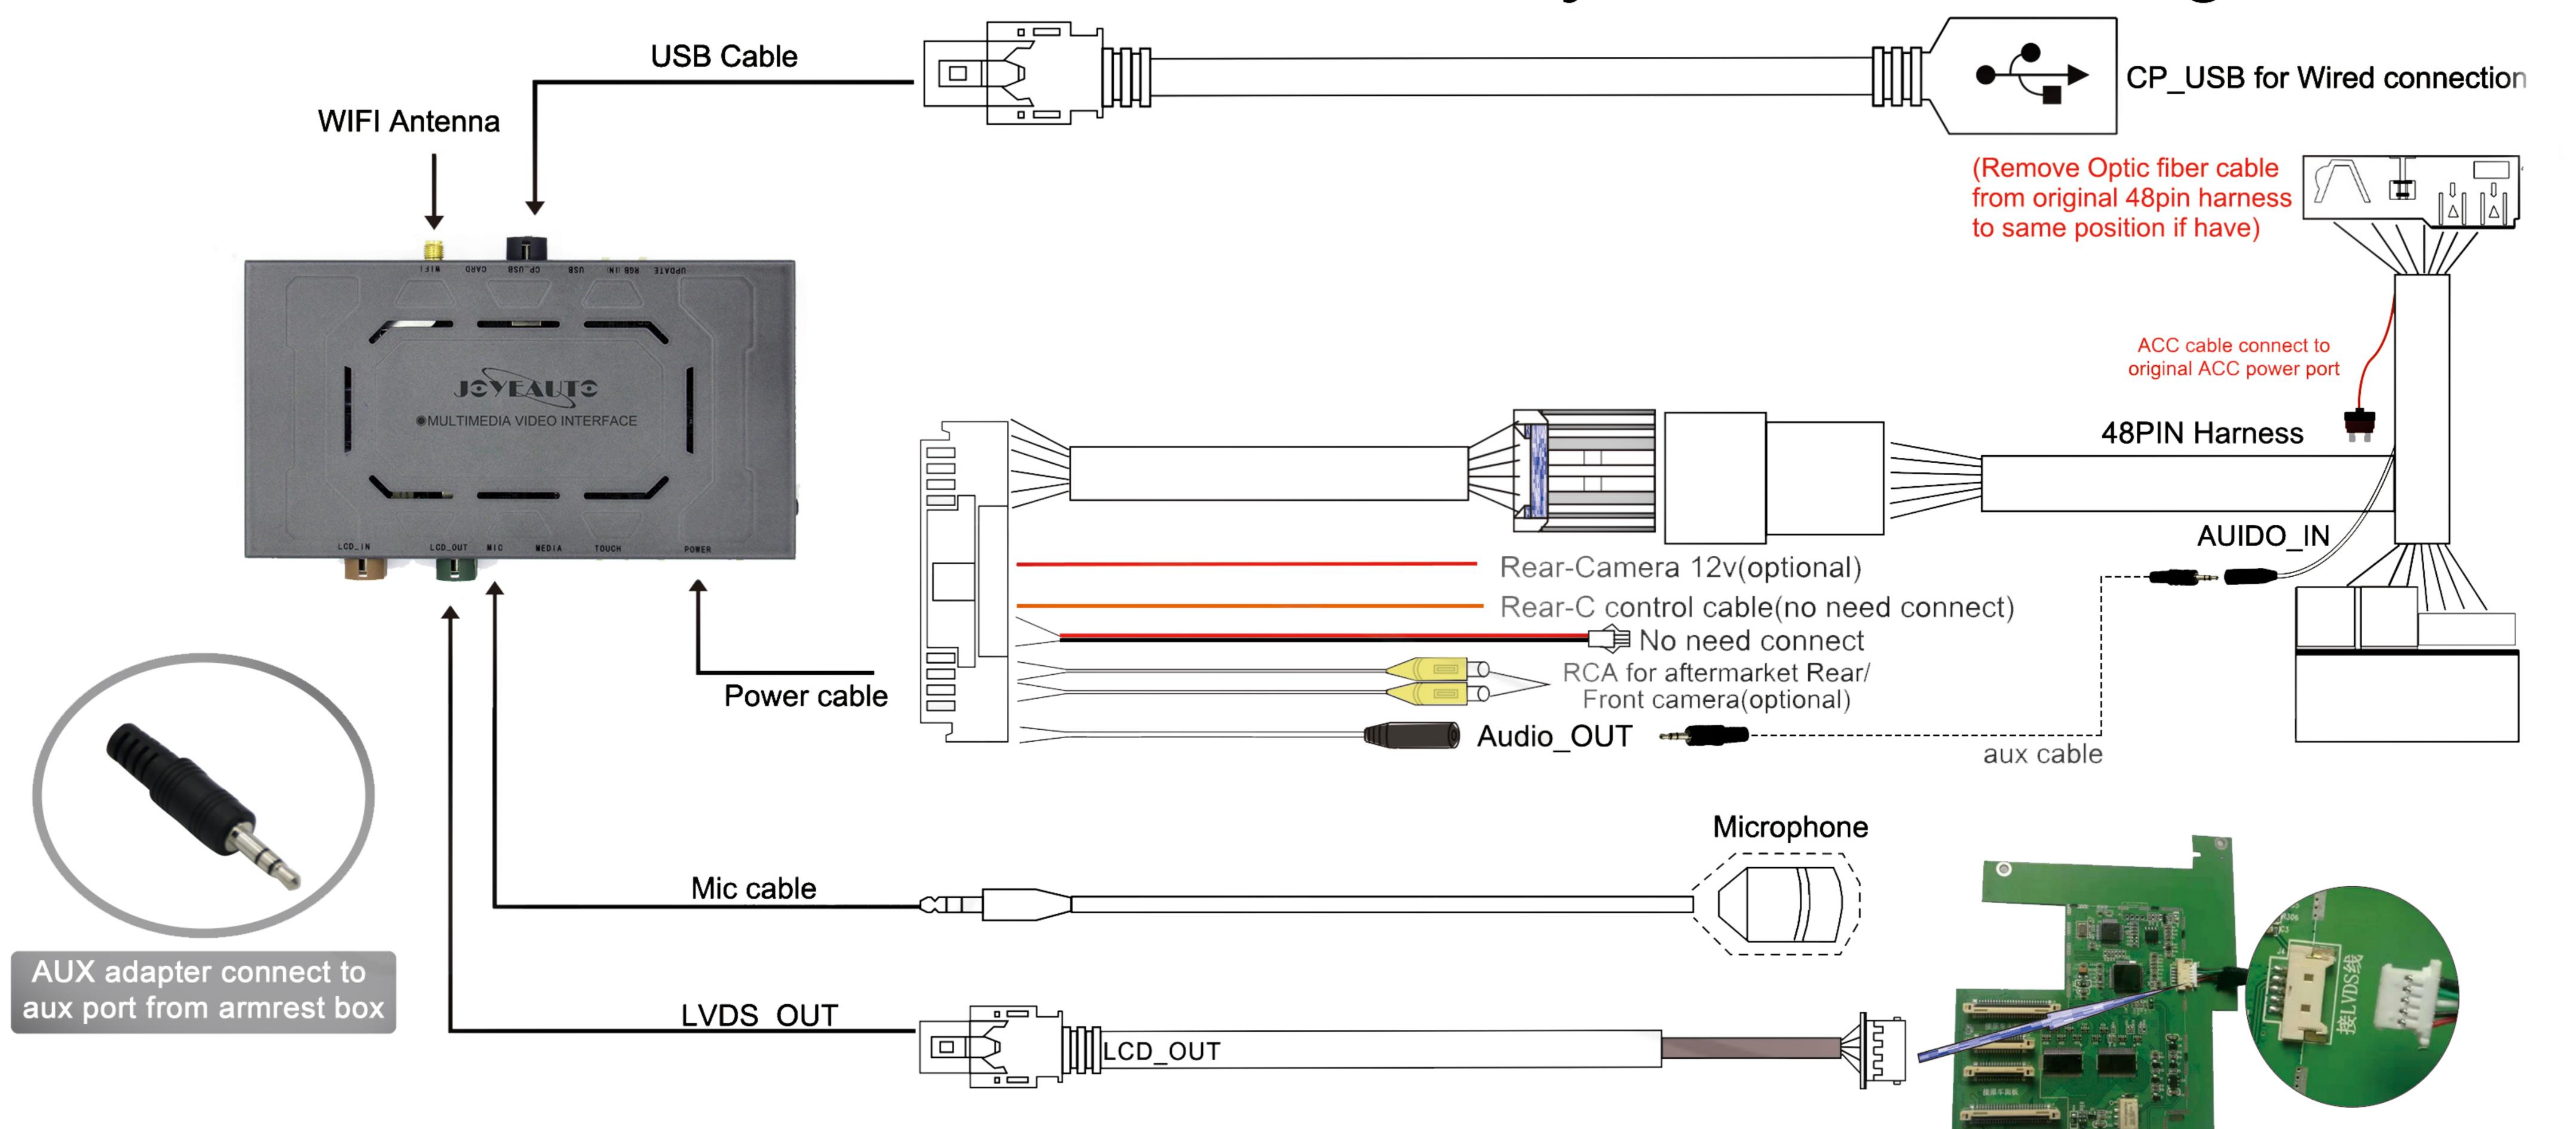


Dip Switch	Status	Description
2	ON	Touch correction
	OFF	OFF after correction
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear Camera
	OFF	Aftermarket Rear Camera
1,3, 5,6, 7 all set OFF.		





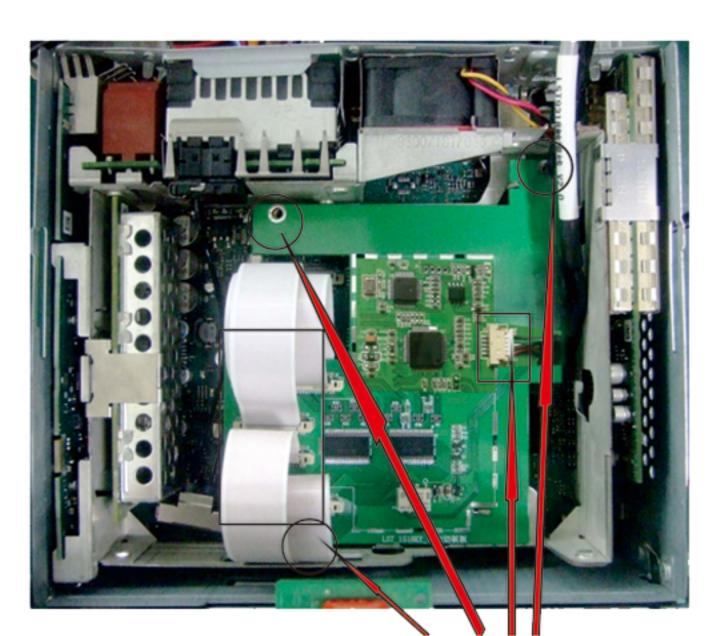

2,sub-board installation.connect well with 2PCS FPC and LVDS cable.

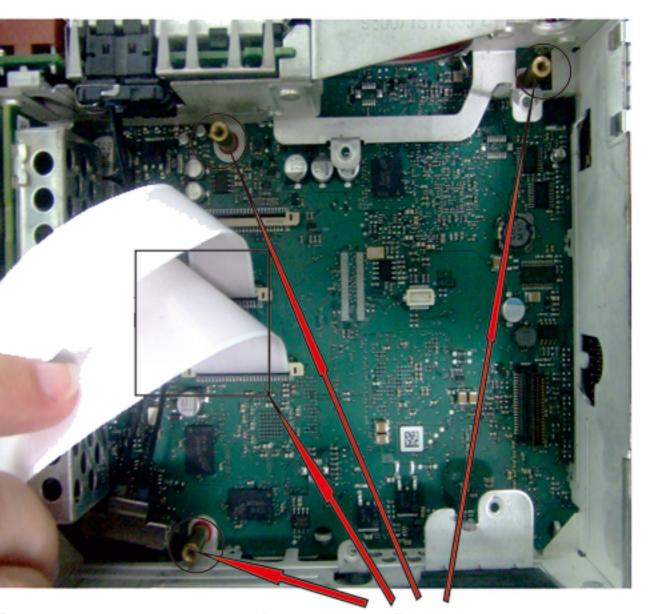

Note: Don't connect reverse

3, unscrew these three screws, and install three copper post. and then convert well with 2 FPC cable(30P/50P).