



Mercedes W221(06-09) Wireless CarPlay installation diagram

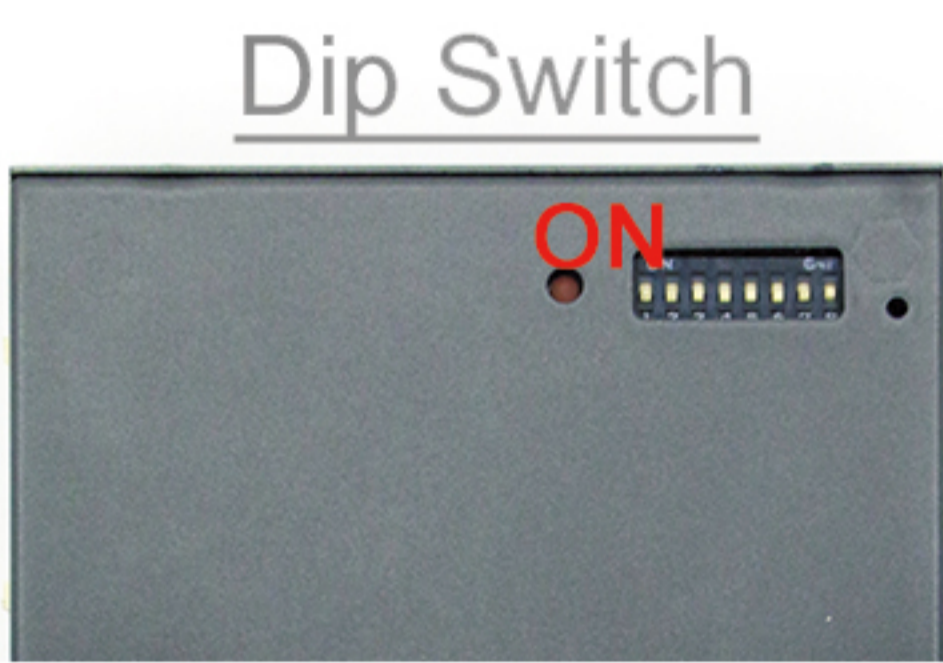

Dip switch	Status	Description
1,3	ON	for S class W221
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear camera
	OFF	Aftermarket Rear camera
2, 5, 6, 7 all set OFF.		

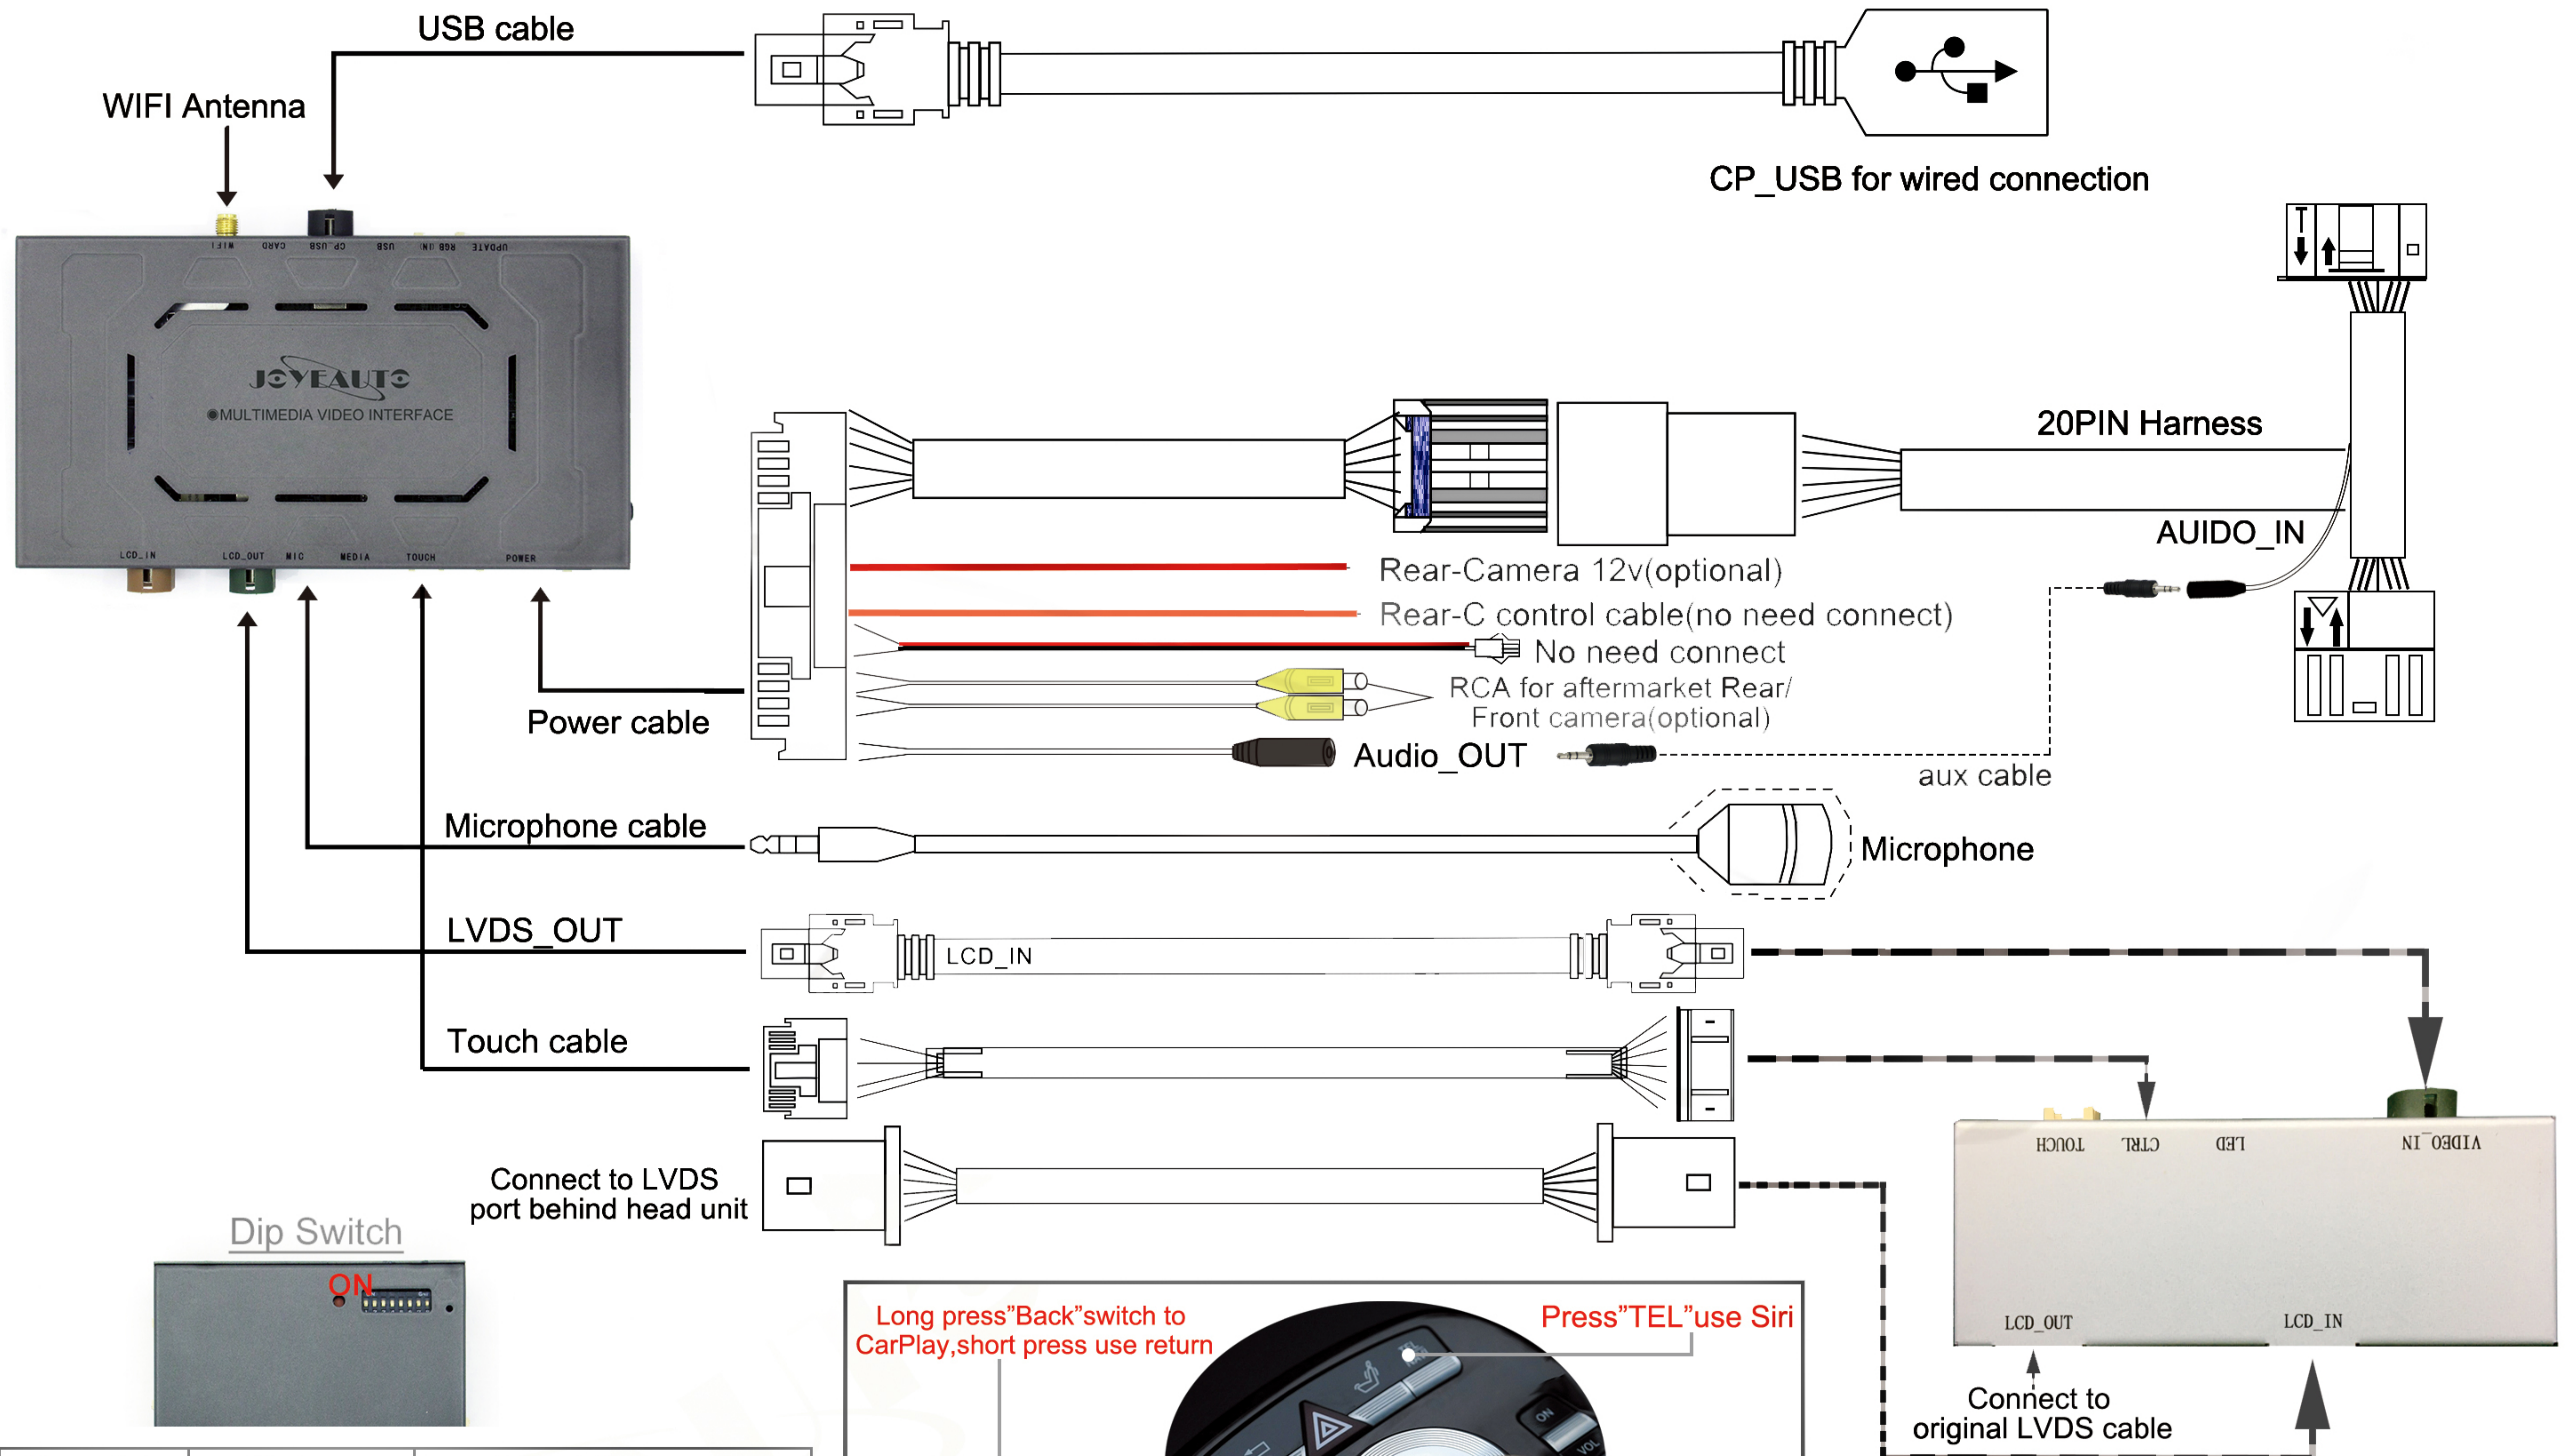