
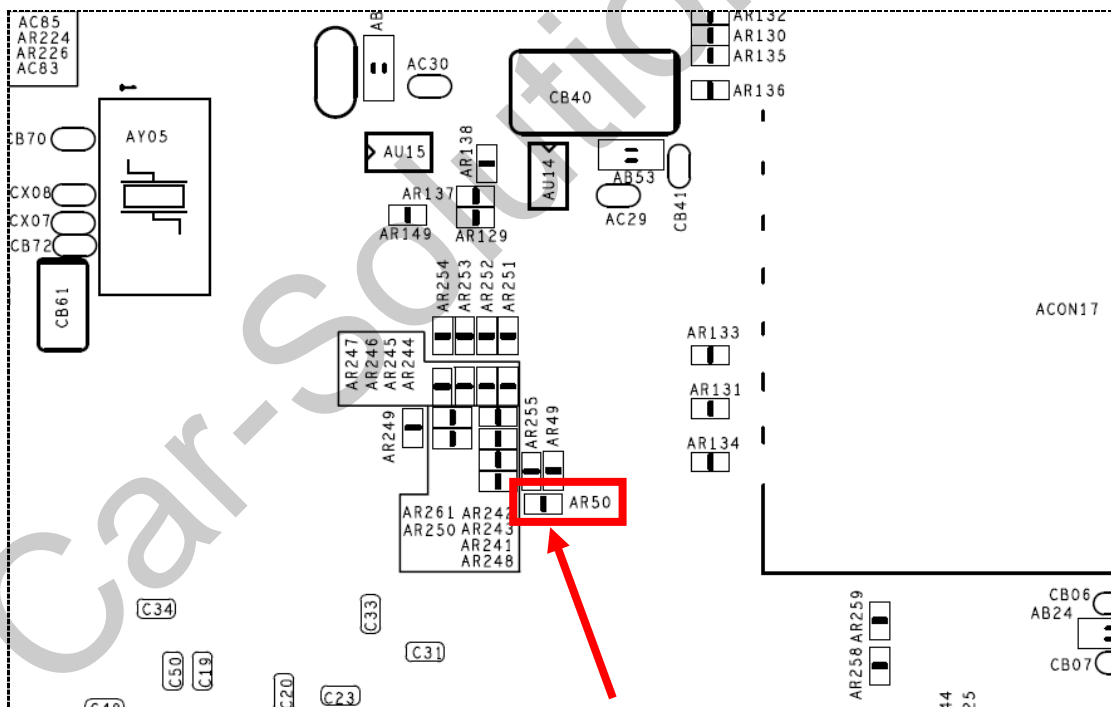


CS9200 Box Modification for Mazda CX-5, Mazda 6, Sony-USB

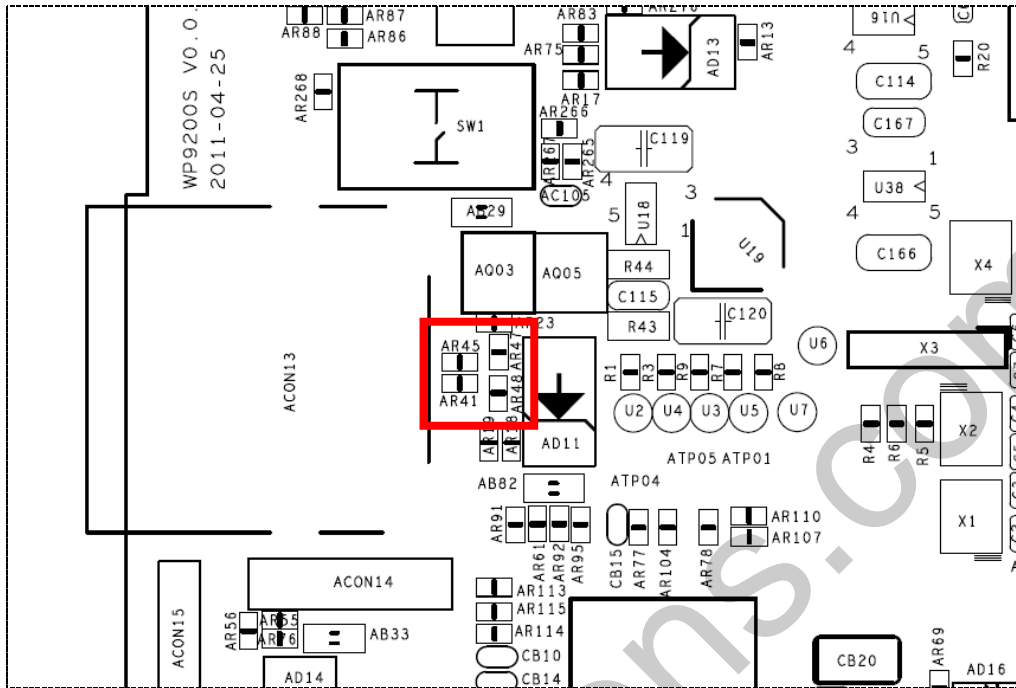

Component	Action	Board layer
AR41 (22R)	Replace by 0R resistor (<i>short out</i>)	Top (USB)
AR45 (22R)	Replace by 0R resistor (<i>short out</i>)	Top (USB)
AR47 (15k)	Desolder	Top (USB)
AR48 (15k)	Desolder	Top (USB)
AR50 (0R)	Desolder	Bottom (SD-card)