Compatibility : **Opel - R4.0 IntelliLink 7"**
Adam 2016>
Corsa 2016>
Mokka 2016>

Chevrolet – Intellilink 7"
Cruze 2016>
Trax 2016>
Malibu 2016>

OEM button

CRUZE

TRAX

▷ : Long press - mode switch
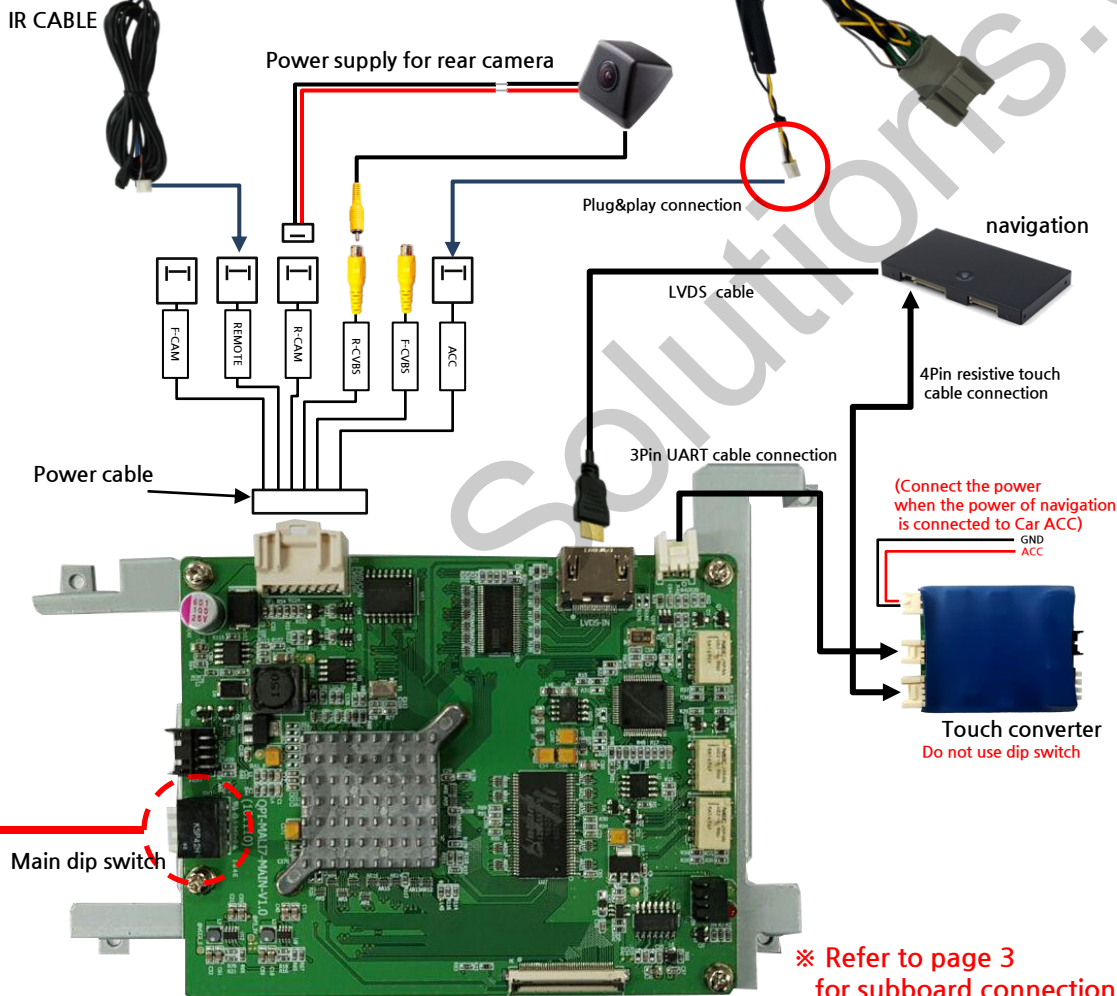
SRC : Long press - mode switch

Main Dip Switch setting

↓ ON 1 2 3 4

PIN	Dip S/W Setting
1	OFF : Use navigation mode
2	No use
3	OFF : OEM rear camera ON : External rear camera
4	OFF : CRUZE ON : TRAX 7inch

※ After changing dip switch,
  remove & reconnect the power cable
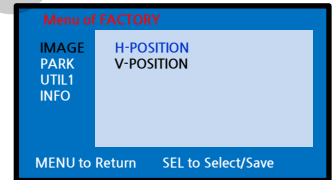※ Do not use touch converter dip switch
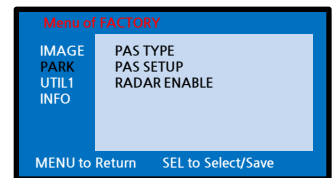
Installation Diagram

IR CABLE

Power supply for rear camera

Plug&play connection

navigation

LVDS cable

4Pin resistive touch
cable connection

3Pin UART cable connection

(Connect the power
when the power of navigation
is connected to Car ACC)
GND
ACC

Touch converter
Do not use dip switch

Power cable

F-CAM REMOTE R-CAM R-CVBS F-CVBS ACC

Main dip switch

※ Refer to page 3
for subboard connection

FACTORY mode
※ Press left button on the remote for long time to enter Factory mode

Menu of FACTORY
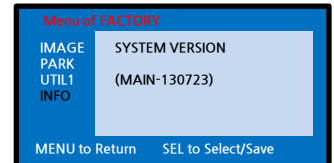IMAGE   H-POSITION
PARK   V-POSITION
UTIL1
INFO

MENU to Return   SEL to Select/Save

H-POSITION : Move display horizontally
V-POSITION : Move display vertically

Menu of FACTORY
IMAGE   PAS TYPE
PARK   PAS SETUP
UTIL1   RADAR ENABLE
INFO

MENU to Return   SEL to Select/Save

PAS TYPE : Select type of parking guide line
  - NOT USED : No use parking guide line
  - PAS ON : Selecting Dynamic parking guide line
  - PAS OFF : Selecting fixed parking guide line
PAS SETUP : Adjusting the position of the parking
            guide line
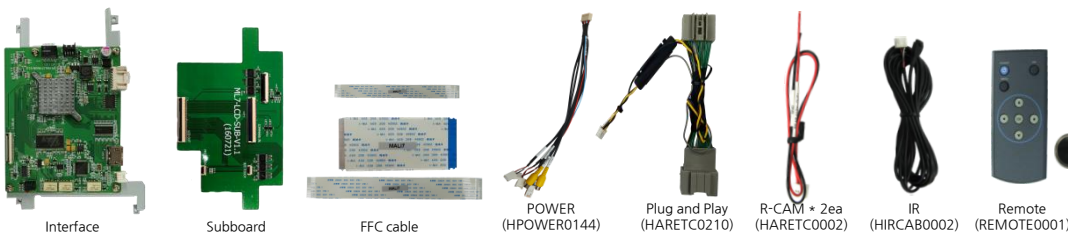RADAR ENABLE : Turn PDC on/off

〈PDC ON〉   〈PDC OFF〉

Menu of FACTORY
IMAGE   NAVI MODEL
PARK   FACTORY RESET
UTIL1
INFO

MENU to Return   SEL to Select/Save
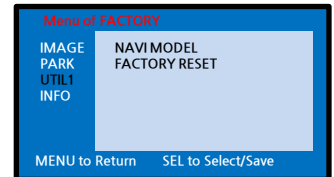
NAVI MODEL : Q-ROI(PN500-R3D),
             Imercury A-CLASS,
             Finedrive BF500D
FACTORY RESET : Activate FACTORY reset

Menu of FACTORY
IMAGE   SYSTEM VERSION
PARK
UTIL1   (MAIN-130723)
INFO

MENU to Return   SEL to Select/Save

System version information

Components

Not included

| Interface | Subboard | FFC cable | POWER
(HPOWER0144) | Plug and Play
(HARETC0210) | R-CAM * 2ea
(HARETC0002) | IR
(HIRCAB0002) | Remote
(REMOTE0001) | Touch converter
(QCPASS1002) | 3P Uart cable
(HARETC0144) | 4P resistive cable
(HTOUCH0022) | Touch conver
power cable
(HPOWER0131) |

support@car-solutions.com

www.car-solutions.com
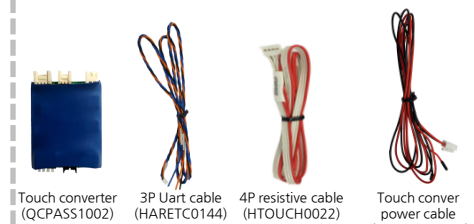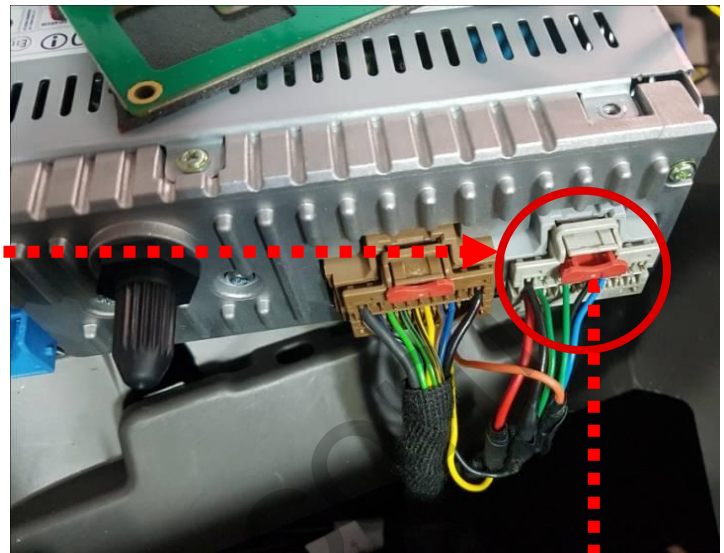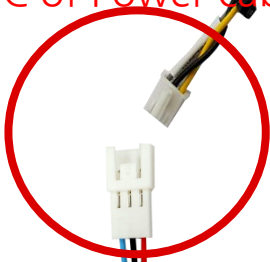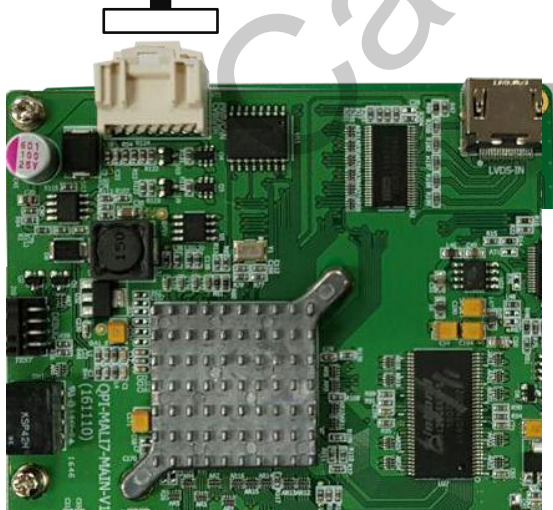
Plug&Play connection

※ Find grey OEM connector from the command behind

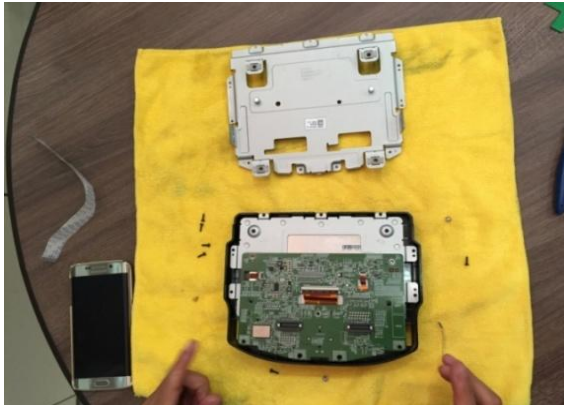※ Connect 3P connector to ACC of Power cable

※ Remove OEM cable from the command and connect it to female connector of the supplied cable
The other side of supplied cable should be connected to the command

Subboard connection

Remove the monitor as shown above

Disassemble LCD

Remove the metal case
as shown above

Disassemble the OEM board
like picture attached

Place the subboard on the top
and connect FPC cable
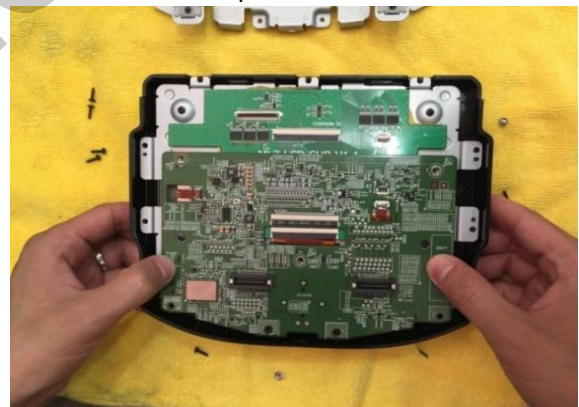
Reassemble the OEM board
on the top of the subboard

The touch cable shall be connected between
the supplied subboard and the OEM board
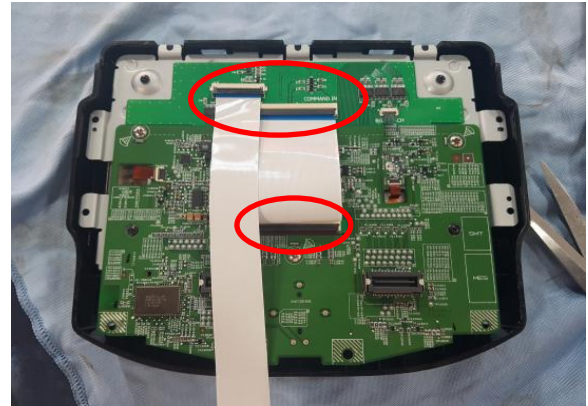where original touch cable is connected

Connect the supplied FFC cables
like picture above

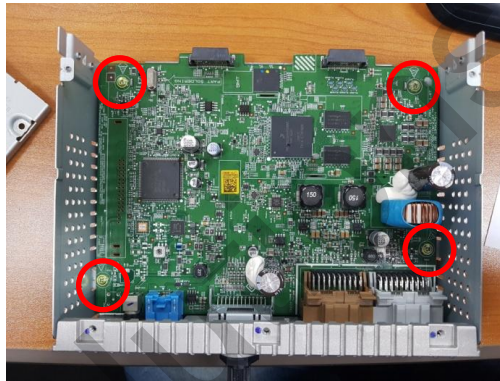Pull out a long FFC cable through a hole
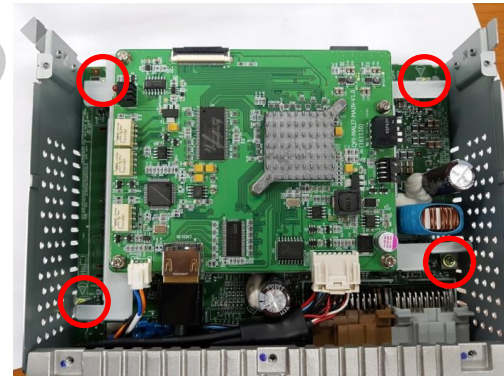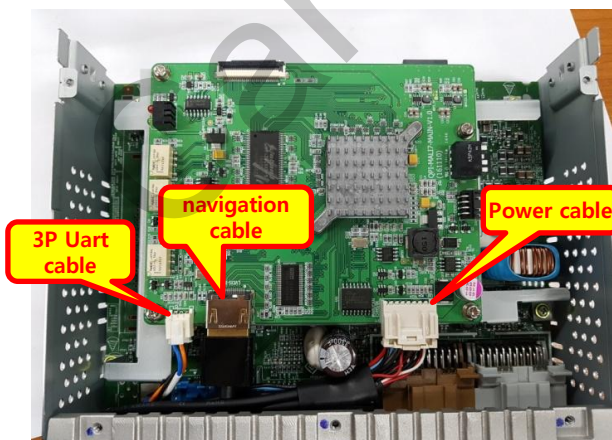and reassemble the metal cover

Interface connection
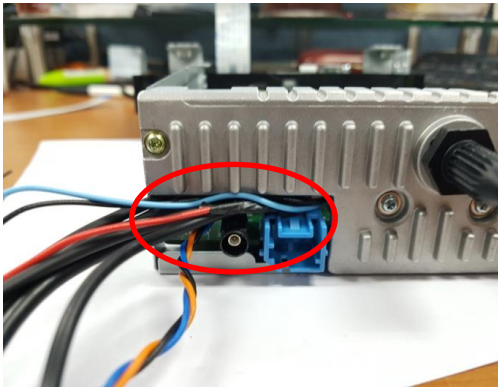
Put cables inside through
a hole which is placed behind
the headunit

Unscrew bolts marked
with red circles

Place the supplied interface
on the top of the OEM board
and screw bolts again

3P Uart cable

navigation cable

Power cable

Connect cables to the each place
as shown above

Connect FFC cable coming from
the monitor to the interface

support@car-solutions.com   www.car-solutions.com