



## Fluke 43B Power Quality Analyzer

Maintain power systems, troubleshoot power problems, diagnose equipment failures

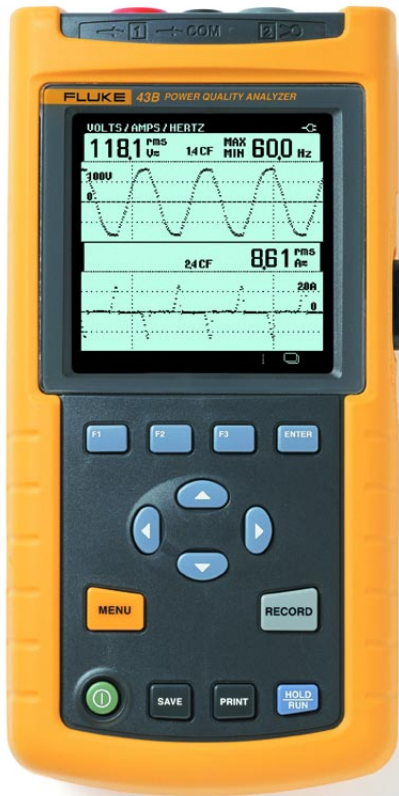

The Fluke 43 Power Quality Analyzer performs the measurements you need to maintain power systems, troubleshoot power problems and diagnose equipment failures. All in a rugged handheld package.

- Combines the most useful capabilities of a power quality analyzer, multimeter and scope
- **New!** Calculates 3-phase power on balanced loads, from a single-phase measurement
- Measures power harmonics, and captures voltage sags, transients and inrush current
- Monitoring functions help track intermittent problems and power system performance
- Menus use familiar electrical terminology
- **New!** Toggle through the most commonly used power quality modes with a single keystroke
- Records two selectable parameters for up to 16 days
- **New!** 20 measurement memories to save/recall screens and data with cursor readings
- **New!** FlukeView® Software can log harmonics and all other readings over time
- **New!** FlukeView Software provides a complete harmonics profile up to the 51st harmonic
- Measures resistance, diode voltage drop, continuity, and capacitance
- Users / applications manual and power quality video to help answer tough questions
- Complete package with voltage probes and 500A current clamp, FlukeView Software and optically isolated interface cable
- 3 year warranty on the Fluke 43B, 1 year on accessories

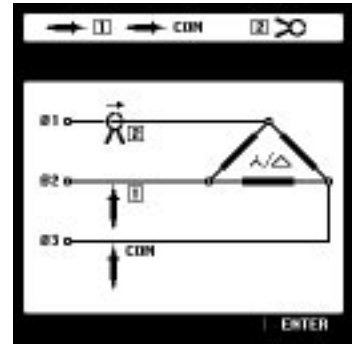

- **New!** On screen graphics show you how to set up 3-phase power measurements



- Watts, power factor, displacement power factor ( $\cos \phi$ ), VA and VAR
- Voltage and current waveforms




C22.2 #1010



Listed



- Voltage and current waveforms
- True-rms voltage and current
- Frequency

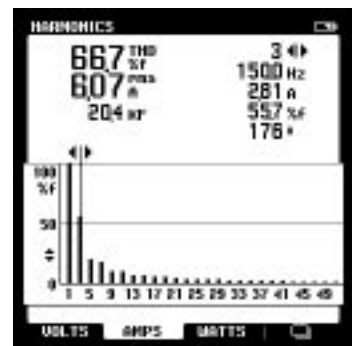


- Voltage, current, and power harmonics
- Up to 51st harmonic
- Total harmonic distortion (THD)
- Phase angle of individual harmonics


## Specifications

Accuracies are stated as  $\pm$  (percentage of reading + counts) without probes unless otherwise noted.

Specifications are valid for signals with a fundamental between 40 and 70 Hz.

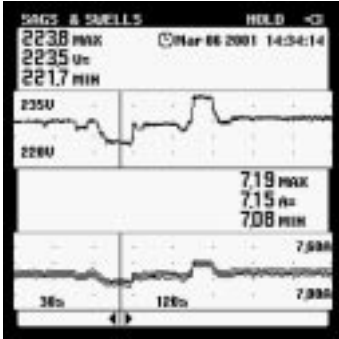

- Continuously measure volts and amps on a cycle-by-cycle basis for up to 24 hours
- Use cursors to read time and date of sags and swells

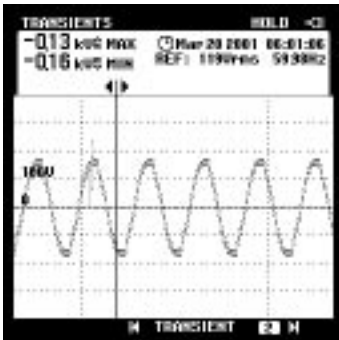

- Catch voltage transients and waveform distortion
- Catch and save up to 40 transients
- Correlate the cause of transients with time and date stamps

Input Characteristics	Ranges	Accuracy
Input impedance	1 M $\Omega$ , 20 pF	
Voltage rating	600 Vrms, CAT III	
<b>Volt / Amps / Hertz</b>		
True-rms voltage (AC+DC)	5.000 V, 50.00 V, 500.0 V, 1250 V*	$\pm$ (1 % + 10 counts)
True-rms current (AC+DC)	50.00 A, 500.0 A, 5.000 kA, 50.00 kA, 1250 kA	$\pm$ (1 % + 10 counts)
Frequency	10.0 Hz to 15.0 kHz	$\pm$ (0.5 % + 2 counts)
CF Crest Factor	1.0 to 10.0	$\pm$ (5% + 1 count)
<b>Power</b>		
W, VA, VAR Reactive Power 1-phase and 3-phase, 3 conductor balanced loads	250 W 2.50 kW, 25.0 kW, 250kW, 2.50 MW, 25 MW, 250 MW, 625 MW, 1.56 GW	$\pm$ (2 % + 6 counts) Total Power $\pm$ (4 % + 4 counts) Fundamental Power
PF Power Factor	0.00 to 1.00	$\pm$ 0.04
DPF Displacement Power Factor	0.00 to 0.25 0.25 to 0.90 0.90 to 1.00	not specified $\pm$ 0.04 $\pm$ 0.03
Hz Frequency fundamental	40.0 to 70.0 Hz	$\pm$ (0.5 % + 2 counts)
<b>Harmonics</b>		
Volts, Amps, Watts	Fundamental	V,A $\pm$ (3 % + 2 counts), W $\pm$ (5 % + 2 counts)
	2 to 31st Harmonic	V,A $\pm$ (5 % + 3 counts), W $\pm$ (10 % + 10 counts)
	32 to 51st Harmonic	V,A $\pm$ (15 % + 5 counts), W $\pm$ (30 % + 5 counts)
Frequency of fundamental	40 Hz to 70 Hz	$\pm$ 0.25 Hz
Phase	Volt & Amps (between Fund. & Harmonic)	2nd ( $\pm$ 3°) ... 51st ( $\pm$ 15°)
	Watts (between Volt Fund. & Amps Harmonic )	Fund ( $\pm$ 5°) ... 51st ( $\pm$ 15°)
K-Factor (Amps & Watts)	1.0 to 30.0	$\pm$ 10 %
THD	0.00 to 99.99	$\pm$ (3% + 8 counts)
<b>Sags &amp; Swells</b>		
Recording times (selectable)	4 min to 16 days	
Vrms actual, Vrms max, min (AC + DC)	5.000 V, 50.00 V 500.0 V, 1250 V*	Readings $\pm$ (2% + 10 counts) Cursor readings $\pm$ (2% + 12 counts) Cursor Readings Average $\pm$ (2% + 10 counts)
Arms actual, Arms max, min (AC + DC)	50.00 A, 500.0 A, 5.000 kA, 50.00 kA	
<b>Recording</b>		
Recording times (selectable)	4 min to 16 days	
Parameters	Choose one or two parameters from one of the groups below	
V/A/Hz	Line Voltage, Current, Frequency	
Power	Watts, VA, VAR, PF, DPF, Frequency	
Harmonics	THD, Volts (Fund. & Harmonic), Amps(F&H) Watts(F&H) Freq.(H), % (H) of total, Phase(H), KF	
Ohms	Ohms, Diode, Continuity, Capacitance	
Temperature	°C or °F	
Scope	DC Voltage, DC Current, AC Voltage, AC Current, Frequency, Pulse Width + or -, Phase, Duty cycle + or -, Peak max, Peak min, Peak min-max, Crest Factor	
<b>Transients</b>		
Minimum pulse width	40 ns	
Useful bandwidth input 1	DC to 1 MHz (with test leads TL24)	
Number of transients	40	
Voltage threshold settings	20%, 50%, 100%, 200% above or below reference signal	
Reference signal	After START, the Vrms and frequency of the signal are measured. From these data a pure sinewave is calculated as reference for threshold setting.	
Vpeak min, Vpeak max at cursor	10 V, 25 V, 50 V, 125 V, 250 V, 500 V, 1250 V	$\pm$ 5% of full scale

\*Rated 600V CAT III


Inrush Current	Ranges	Accuracy
Current ranges (selectable)	1 A, 5 A, 10 A, 50 A, 100 A, 500 A, 1000 A	
Inrush times (selectable)	1 s, 5 s, 10 s, 50 s, 100 s, 5 min	
Cursor readings	A peak max at cursor 1 and cursor 2	± 5% of full scale
Time between cursors**	4 to 235 pixels	± (0.2% + 2 pixels)
Scope, dual channel scope with measurement reading		
Input impedance		
Input 1	1 M $\Omega$ //12 pF; with BB120: 20 pF	± 2 pF; with BB120 ±3 pF
Input 2	1 M $\Omega$ //10 pF; with BB120: 18 pF	± 2 pF; with BB120 ±3 pF
Vertical		
Voltage ranges	50 mV/div to 500V/div	± (1% + 2 pixels)
Vertical sensitivity, resolution	5 mV/div to 500V/div, 8 bit (256 levels)	
Bandwidth input 1 (voltage)	DC to 20 MHz at inputs, or with BB120 and VPS100-R probe (Opt); 1 MHz with TL24 Leads	
Bandwidth input 2 (current)	DC to 15 kHz at inputs 10 kHz with 80i-500s Current Clamp	
Coupling	DC, AC (10 Hz -3 dB)	
Horizontal		
TimeBase modes	Normal, roll, single	
TimeBase ranges	60 s/div to 20 ns/div	± (0.4% + 1 pixel)
Sampling rate	25 MS/s	
Record length (min / max samples)	512 per channel	
Trigger source	Input 1 or Input 2 or Automatic selection	
Trigger mode	Automatic Connect-and-View™, Free Run, Single Shot.	
Connect-and-View™	Advanced automatic triggering that recognizes signal patterns and automatically adjusts triggering, timebase and amplitude. Automatically displays stable pictures of complex and dynamic signals like motor drive and control signals.	
Pre-trigger	Up to 10 divisions	
Measurement readings, per channel selectable	Volts & Amps (DC, AC, AC + DCrms, Peak max, Peak min, Peak min / max ), Frequency, Duty cycle + or - , Phase, Pulse Width + or - , Crest factor	
Ohms, Diode, Continuity, Capacitance		
Ohms	500.0 $\Omega$ 5.000 k $\Omega$ , 50.00 k $\Omega$ , 500.0 k $\Omega$ , 5.000 M $\Omega$ , 30.00 M $\Omega$	± (0.6% +5 counts)
Diode voltage	0 to 3.000 V	± (2% +5 counts)
Continuity, shorts > 1 ms	Beeper on at < 30 $\Omega$ ± 5 $\Omega$ ,	
Capacitance	50.00 nF, 500.0 nF, 5.000 $\mu$ F, 50.00 $\mu$ F, 500.0 $\mu$ F	±(2% +10 counts)
Temperature***	-100.0 °C to 400.0 °C, -200.0 °F to 800.0 °F	±(0.5% +5 counts)
Max current, max open circuit volt.	0.5 mA, < 4 V (all functions above)	
Memory		
Number of screens	20	
Optical Isolated RS-232 Interface		
To printer	Supports HP LaserJet™, DeskJet, Epson FX/LQ and Postscript printers with optional PAC91 Printer Adapter Cable	
To PC	FlukeView® Power Quality Analyzer software with PM9080 Interface Adapter included	
FlukeView® Power Quality Software		
Hardware requirements	PC or 100% compatible with Windows® 95, 98, Me, 2000, NT4.0.	

\*\* 1 pixel = inrush time/250


\*\*\* Requires optional temperature accessory



- Inrush current up to 500A with supplied current probe
- Use cursors to measure inrush current timing

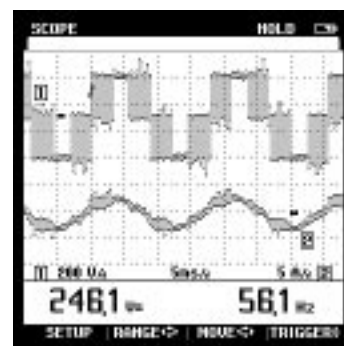

- Connect-and-View™ scope for quick waveform display
- Voltage and current channels
- 20MHz bandwidth with optional 10:1 voltage probe. 15kHz on current channel with optional current clamp

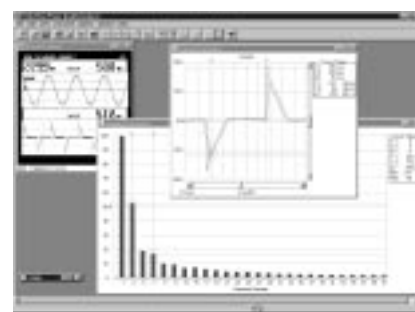

- FlukeView® Power Quality Analyzer software (included)
- Capture measurement screens for professional-looking reports
- Log readings to your computer disk drive
- Works with Windows word processing, spreadsheet and analysis software
- Windows 95 / 98 / Me / 2000 / NT 4.0

## General Specifications

Power	
Line voltage adapter/battery charger included	
Installed battery	Rechargeable NiCd pack (4 to 6 Vdc)
Operating time	4 hours
Charging time	4 hours (Fluke 43B OFF) 12 hours (Fluke 43B ON)
Refresh Cycle	8 to 14 hours (to keep NiCd battery capacity optimal)
Environmental	
Temperature	0°C to 50°C (32°F to 122°F)
Environmental	MIL 28800E, Type 3, Class III, Style B
Enclosure	IP51 (dust, drip water proof)
Mechanical Data	
Size (H x W x D)	232 x 115 x 50 mm (9.1 x 4.5 x 2 inches)
Weight	1.1 kg (2.5 lbs.) incl. battery pack
Safety	
For measurements on 600 Vrms Category III installations, Pollution Degree 2 in accordance with EN61010-1 (1993) (IEC1010-1) ANSI/ISA S82.01-1994 CAN/CSA-C22.2 No. 1010.1-92 UL3111-1	
Surge protection	6 kV on input 1 and 2
Floating measurements	600 Vrms from any terminal to ground
Warranty	3 years parts and labor on Fluke 43B, 1 year on accessories

### Ordering Information

**Fluke 43B** Power Quality Analyzer

### Included Accessories

<b>C120</b>	Hard Case
<b>TL24</b>	Test Leads
<b>AC20</b>	Industrial Test Clips
<b>AC85</b>	Large Jaw Alligator Clips
<b>TP1</b>	Flat-tipped Slim-Reach™ Test Probes
<b>TP4</b>	4 mm Round Slim-Reach™ Test Probes
<b>80i-500s</b>	500A AC Current Clamp
<b>PM 9080</b>	Optically Isolated RS232 Interface Adapter
<b>BP120</b>	Rechargeable Ni-Cd Battery Pack (installed)
<b>PM 8907</b>	Line Voltage Adapter/Battery Charger
<b>SW43W</b>	FlukeView® Power Quality Analyzer Software for Windows

**FlukeView® Power Quality Analyzer Users Manual**  
**Shielded Banana-to-BNC Adapter Users Manual / Application Guide**  
**Power Quality CD-ROM**

### Optional Accessories

<b>C789</b>	Soft Carrying Case
<b>80i-110s</b>	100A AC/DC Current Probe
<b>i200s</b>	AC Current Clamp
<b>i1000s</b>	1000A AC Current Clamp
<b>i2000flex</b>	Flexible 2000A AC Current Probe
<b>i3000s</b>	Clamp-On AC Current Clamp
<b>VPS100-R</b>	Red 10:1 Voltage Probe (requires BB120, one included)
<b>BB120</b>	Two Shielded Banana-to-BNC Adapters
<b>80TK</b>	Thermocouple Module
<b>80T-IR</b>	Non Contact Infrared Temperature Probe
<b>80T-150U</b>	Universal Temperature Probe
<b>PAC91</b>	Parallel Printer Adapter
<b>PM9087</b>	Isolated Automotive Lighter Plug Charging Adapter
<b>TL20</b>	63" Test Lead Set
<b>TL21</b>	Extension Lead Set
<b>TL22</b>	63" Right Angle Silicone Test Lead Set
<b>TL23F</b>	Electrical Test Lead Set
<b>TL23R</b>	Electrical Test Lead Set
<b>TL24</b>	63" Right Angle/Straight Silicone Test Leads
<b>TL26A</b>	60" 5-Way Test Lead Set
<b>TL28A</b>	63" Alligator Clip Test Lead Set
<b>TL71</b>	Premium DMM Test Lead Assembly
<b>TL74</b>	4 mm Diameter Test Leads
<b>TL75</b>	48" Hardpoint Test Lead Set



**Fluke.** *Keeping your world up and running.*

Optimum Energy Products Ltd.  
 #333, 11979 - 40th Street S.E.  
 Calgary, AB, CANADA T2Z 4M3

For more information call:  
 Toll Free in North America:  
 1-877-766-5412  
 Main Line:  
 (403) 256-3636  
 Fax:  
 (403) 256-3431

Or e-mail us at:  
[info@optimumenergy.com](mailto:info@optimumenergy.com)

[www.MyFlukeStore.com](http://www.MyFlukeStore.com)

Printed on recycled paper.