

#	CONNECTION DIAGRAM ELEMENTS DESCRIPTION
1	OEM car monitor (head unit/HU), front view
2	OEM car monitor (head unit/HU), rear view
3	Front view camera (not included in the package)
4	Rear view camera (not included in the package), OEM or additionally installed with the controller
5	Rear and front view camera controller – RFCC
6	Front view camera connection input – F-CAM
7	Rear view camera connection input – R-CAM
8	Front view camera power output – 12V OUT
9	Rear view camera power output – 6V OUT
10, 11, 12	Adapter connectors for Plug&Play connection to OEM wiring
13, 14, 15	Adapter sockets for Plug&Play connection to OEM wiring


CONTROLLER AUTOMATIC MODE

1

2

3

4

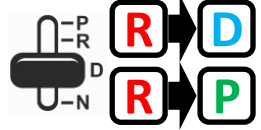

R-CAM

F-CAM  

#	CONTROLLER MODE DESCRIPTION
1	Standby mode
2	Standby mode
3	OEM/aftermarket rear view camera activation (rear view camera activation is priority activation)
4	Front view camera activation for 30 s or until the car speed exceeds 20 km/h

CONTROLLER MIXED MODE

1

2

3

4




R-CAM

F-CAM  



#	CONTROLLER MODE DESCRIPTION
1	<ul style="list-style-type: none"> Standby mode Manual activation mode of the front view or rear view camera with the off timer after 30 s Forced activation mode with the front view or rear view camera image retention (followed by a short beep)
2	<ul style="list-style-type: none"> Standby mode Manual activation mode of the front view or rear view camera with the off timer after 30 s Forced activation mode with the front view or rear view camera image retention (followed by a short beep)
3	<ul style="list-style-type: none"> Priority rear view camera activation Manual activation mode of the front view camera at 0 km/h
4	<ul style="list-style-type: none"> Front view camera activation for 30 s or until the car speed exceeds 20 km/h Manual activation mode of the front view or rear view camera with the off timer after 30 sec Forced activation mode with the front view or rear view camera image retention (followed by a short beep)

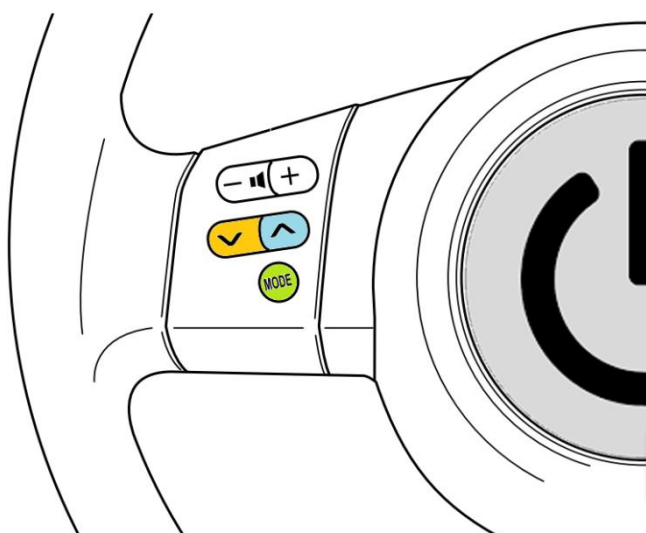

In **mixed control mode**, the user can activate any connected camera with OEM steering wheel controls. For this purpose three buttons are used: **MODE**, **SEEK+**, **SEEK-**. Below are the control algorithms (choosing different modes) with OEM steering wheel controls.

- MODE** button - double press for 1 s. *Manual activation mode*
- MODE** button - press once. *Exiting active mode*
- SEEK+** button - press once in manual mode. *Front view camera activation*
- SEEK-** button - press once in manual mode. *Rear view camera activation*
- SEEK+** button - press and hold in manual mode. *Image retention mode activation*

ATTENTION! Number of steering wheel control buttons, their location and appearance can be different from those in the manual.

#	CONTROLLER MODES	MODE ACTIVATION
1	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer after 30 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
2	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer after 30 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
3	<ul style="list-style-type: none"> • Manual activation mode of the front view camera at 0 km/h 	<ul style="list-style-type: none"> ➤ Camera switching – SEEK+ / SEEK- buttons
4	<ul style="list-style-type: none"> • Manual activation mode of the front or rear view camera with the off timer after 30 s 	<ul style="list-style-type: none"> ➤ Activation – double press MODE button ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once
	<ul style="list-style-type: none"> • Forced activation mode with the front or rear view camera image retention (followed by a short beep) 	<ul style="list-style-type: none"> ➤ Activation – (in manual mode) hold SEEK+ button for 1 s ➤ Camera switching – SEEK+ / SEEK- buttons ➤ Deactivation – press MODE button once